

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FANGOR](#) /

› [FANGOR 7.5" Car DVD Player F-611D Instruction Manual](#)

## FANGOR F-611D

# FANGOR 7.5" Car DVD Player F-611D Instruction Manual

Model: F-611D | Brand: FANGOR

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your FANGOR 7.5" Car DVD Player, Model F-611D. Please read this manual thoroughly before using the device and retain it for future reference. This product is designed as a single screen unit; no additional accessories are included.



Figure 1: FANGOR 7.5" Car DVD Player F-611D. This image displays the closed unit, highlighting its compact and portable design.

## 2. PRODUCT OVERVIEW

The FANGOR F-611D is a portable DVD player featuring a 7.5-inch LCD screen. Its design prioritizes ease of use and portability.

### 2.1 Key Features

- **7.5-inch LCD Display:** Provides clear visual output for your media.
- **Swivel Screen:** The screen can swivel and rotate, allowing for flexible viewing angles and compact storage.
- **Integrated Controls:** Convenient buttons for playback, volume, and menu navigation are located on the unit.
- **Built-in Speakers:** Delivers audio directly from the device.

### 2.2 Ports and Slots

The device includes various ports for connectivity:

- **USB Port:** For playing media from USB storage devices.

- **SD Card Slot:** For playing media from SD memory cards.
  - **Headphone Jack:** For private listening with headphones (not included).
  - **AV Out:** For connecting the player to an external display (e.g., TV) using an AV cable (not included).
  - **AV In:** For connecting external audio/video sources to be displayed on the player's screen using an AV cable (not included).
  - **DC In 12V:** Power input for charging or continuous operation.
- 

## 3. BASIC OPERATION

### 3.1 Powering On/Off

- To power on the device, slide the **ON/OFF** switch (located on the side) to the **ON** position.
- To power off, slide the **ON/OFF** switch to the **OFF** position.

### 3.2 Inserting a DVD/CD

1. Gently press the **OPEN** latch (located on the front edge of the player) to release the disc cover.
2. Place your DVD or CD onto the spindle, ensuring the label side faces upwards.
3. Close the disc cover firmly until it clicks into place.
4. The device will begin reading the disc automatically.

### 3.3 Playback Controls

- Use the **PLAY/PAUSE** button to start or pause playback.
  - Use the **STOP** button to halt playback.
  - Use the **PREV/NEXT** buttons to skip between tracks or chapters.
  - Adjust volume using the **VOL-** and **VOL+** buttons.
  - The **MODE** button cycles through different input sources (DVD, USB, SD, AV In).
  - The **SETUP** button accesses the system menu for display and audio settings.
- 

## 4. SCREEN ADJUSTMENT

The 7.5-inch LCD screen offers versatile positioning:

- The screen can swivel up to 180 degrees horizontally.
  - It can also rotate 270 degrees vertically, allowing it to be folded flat against the player base for a compact, tablet-like form factor. This feature is useful for protecting the screen or for alternative viewing setups.
- 

## 5. MEDIA COMPATIBILITY

The F-611D supports playback from various media types:

- **DVD/CD:** Plays standard DVD and CD discs.
- **USB:** Compatible with USB flash drives for playing digital media files.
- **SD Card:** Supports SD memory cards for digital media playback.

---

## 6. CARE AND MAINTENANCE

- Keep the device away from water, moisture, and direct sunlight.
  - Clean the screen and exterior with a soft, dry cloth. Avoid abrasive cleaners.
  - Do not expose the device to extreme temperatures.
  - Handle discs carefully to prevent scratches.
- 

## 7. SPECIFICATIONS

Feature	Specification
Product Dimensions	7.5 x 7.5 x 7.5 inches
Item Weight	1.28 pounds
ASIN	B0CF2F97VV
Manufacturer	FANGOR
Brand	FANGOR
Media Type	DVD
Color	Black
Screen Size	7.5 Inches
Display Type	LCD

---

## 8. TROUBLESHOOTING

- **No Power:** Ensure the device is properly connected to a power source (DC In 12V port) and the ON/OFF switch is in the ON position.
  - **No Disc Playback:** Check if the disc is inserted correctly (label side up) and is clean. Ensure the disc type is compatible (DVD/CD).
  - **No Sound:** Adjust the volume using the VOL+ button. Check if headphones are plugged in.
  - **Poor Picture Quality:** Adjust display settings (brightness, contrast, etc.) via the SETUP menu.
- 

## 9. WARRANTY AND SUPPORT

For specific warranty information and technical support, please refer to the documentation provided with your product or contact FANGOR customer service directly. Keep your purchase receipt for any warranty claims.

