

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [arendo](#) /

> [Arendo Kettle and Toaster Set User Manual - 1.5L Stainless Steel Kettle \(40°-100°C\) and 2-Slice Toaster with LED Display \(6 Browning Levels\), Copper](#)

**arendo A306077x49**

# Arendo Kettle and Toaster Set User Manual

MODEL: A306077x49

## Introduction

Thank you for choosing the Arendo Kettle and Toaster Set. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliances. Please read these instructions carefully before first use and keep them for future reference.

## Important Safety Instructions

- Read all instructions before using the appliances.
- Do not immerse the kettle base, power cord, or toaster in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with hot surfaces. Use handles or knobs.
- Always unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliances for other than intended use.
- The kettle must only be used with the stand provided.
- Do not overfill the kettle, as boiling water may be ejected.

- The toaster is not intended to be operated by means of an external timer or separate remote-control system.
- Bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Regularly empty the crumb tray to prevent fire hazards.

## Product Overview

The Arendo Kettle and Toaster Set combines modern design with innovative technology for your kitchen. This set includes a 1.5L stainless steel kettle with precise temperature control and a 2-slice toaster with an LED display and multiple browning levels.



Image: The Arendo Kettle and Toaster Set in a copper finish, showcasing both appliances side-by-side.

### Kettle Features:

- 1.5 Liter capacity with internal level indicator.
- Food-grade SUS/SAE304 stainless steel construction.
- Double-wall design for thermal insulation and burn protection.
- Temperature selection from 40°C to 100°C in 5-degree increments.
- 30-minute keep-warm function.
- Dry-run protection and overheat protection.
- BPA-free and microplastic-free.

### Toaster Features:

- 1000 Watt power.

- LED display showing countdown for browning process.
- 6 browning levels for optimal toasting.
- Integrated warming rack for pastries, bagels, and rolls.
- Robust double-wall housing.
- Removable crumb tray for easy cleaning.
- Defrost and reheat functions.
- Automatic shut-off.

## Initial Setup

---

1. **Unpacking:** Carefully remove both the kettle and toaster from their packaging. Retain packaging for future storage or disposal.
2. **Inspection:** Check both appliances for any signs of damage. Do not use if damaged.
3. **First Cleaning:**
  - **Kettle:** Fill the kettle with clean water to the maximum level, boil it, then discard the water. Repeat this process 2-3 times to remove any manufacturing residues.
  - **Toaster:** Wipe the exterior with a damp cloth. Operate the toaster empty for a few cycles at the highest browning setting to burn off any manufacturing odors. Ensure good ventilation during this process.
4. **Placement:** Place the kettle and toaster on a stable, flat, heat-resistant surface, away from the edge of the countertop and out of reach of children. Ensure sufficient clearance around the appliances for ventilation.
5. **Power Connection:** Plug the power cords into grounded wall outlets.

## Operating Instructions

---

### Kettle Operation

1. **Filling:** Open the lid and fill the kettle with the desired amount of water. Do not fill below the minimum or above the maximum mark. Close the lid securely.
2. **Placement:** Place the kettle firmly on its power base.
3. **Temperature Selection:**



Image: Close-up of the Arendo Kettle's handle with digital display showing temperature selection buttons (SET, START, +, -) and a keep warm function. Examples of recommended temperatures for different beverages are shown.

- Press the **SET** button to cycle through preset temperatures (e.g., 40°C for baby food, 60°C for white tea, 80°C for instant coffee, 100°C for black tea).
  - Use the **+** and **-** buttons to adjust the temperature in 5-degree increments between 40°C and 100°C.
4. **Start Boiling:** Press the **START** button. The kettle will begin heating the water to the selected temperature. The display will show the current water temperature.
  5. **Keep Warm Function:** After reaching the selected temperature, you can activate the keep warm function by pressing the **KEEP WARM** button (if available, or it might be integrated with the SET button). The kettle will maintain the temperature for up to 30 minutes.
  6. **Automatic Shut-off:** The kettle will automatically switch off once the selected temperature is reached or if it runs dry.



Image: Diagram illustrating the Arendo Kettle's double-wall structure, with an exterior plastic layer and an interior stainless steel layer, providing thermal insulation and burn protection.

## Toaster Operation

1. **Insert Bread:** Place up to two slices of bread into the toasting slots.
2. **Select Browning Level:** Use the browning control knob to select your desired browning level from 1 (lightest) to 6 (darkest). The LED display will show the selected level and a countdown.
3. **Start Toasting:** Press the carriage lever down until it locks. The toasting cycle will begin, and the LED display will show the remaining time.
4. **Cancel Function:** To stop the toasting cycle at any time, press the **CANCEL** button.
5. **Defrost Function:** For frozen bread, insert the bread, select the desired browning level, then press the **DEFROST** button before pressing the carriage lever down. The LED display will indicate the defrost function is active.
6. **Reheat Function:** To warm up already toasted bread without further browning, insert the bread, then press the **REHEAT** button before pressing the carriage lever down.
7. **Warming Rack:**



Image: The Arendo Toaster with its integrated warming rack extended, holding two pastries. The removable crumb tray is also visible at the bottom.

To use the warming rack, push the lever on the side of the toaster upwards. Place pastries, bagels, or rolls on the rack. It is recommended to use browning levels 4 to 6 for warming. Do not use the toasting slots simultaneously when using the warming rack.

8. **Automatic Pop-up:** Once the toasting cycle is complete, the bread will automatically pop up.

arendo®

## FONCTIONNEMENT

- ① **ÉCRAN LED**  
Avec affichage du temps restant et du niveau de brunissage
- ② **BOUTON RÉCHAUFFAGE**  
Réchauffe le pain sans brunissage
- ③ **BOUTON DÉCONGÉLATION**  
dégivrage du pain

**NIVEAUX DE BRUNISSAGE**  
Réglable en 6 étapes



**LE TOAST PARFAIT POUR DÉBUTER LA JOURNÉE**



Image: Close-up of the Arendo Toaster's control panel, featuring an LED display showing a countdown, and buttons for Reheat and Defrost functions. The browning level knob is also visible.

## Care and Cleaning

Always unplug both appliances from the power outlet and allow them to cool completely before cleaning.

### General Cleaning:

- Wipe the exterior surfaces of both the kettle and toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the kettle base, power cord, or toaster in water or any other liquid.

### Kettle Descaling:

Over time, mineral deposits (limescale) can build up inside the kettle, affecting its performance. Descale regularly, especially in hard water areas.

1. Fill the kettle with a mixture of one part white vinegar and two parts water, or use a commercial descaling solution according to its instructions.
2. Bring the mixture to a boil and let it stand for at least 30 minutes, or longer if the scale is heavy.
3. Pour out the mixture and rinse the kettle thoroughly with fresh water several times.

- Boil fresh water in the kettle and discard it to remove any residual vinegar taste.

### Toaster Crumb Tray:

- Pull out the removable crumb tray located at the bottom of the toaster.
- Discard crumbs and wipe the tray clean with a damp cloth.
- Ensure the crumb tray is completely dry before reinserting it into the toaster.
- Empty the crumb tray regularly to prevent fire hazards.

## Troubleshooting Guide

Problem	Possible Cause	Solution
<b>Kettle does not heat.</b>	Not plugged in; kettle not properly seated on base; dry-run protection activated.	Ensure plug is firmly in outlet; reseal kettle on base; if dry-run protection, allow to cool and refill.
<b>Kettle switches off too quickly.</b>	Limescale buildup.	Descale the kettle as per cleaning instructions.
<b>Toaster does not toast.</b>	Not plugged in; carriage lever not fully depressed; power outage.	Ensure plug is firmly in outlet; push carriage lever down until it locks; check power supply.
<b>Bread is unevenly toasted.</b>	Uneven bread thickness; crumbs in slots.	Ensure bread slices are of similar thickness; clean crumb tray and check slots for obstructions.
<b>Smoke coming from toaster.</b>	Crumbs accumulated in crumb tray or inside toaster; food stuck in slots.	Immediately unplug the toaster. Allow to cool. Remove crumb tray and clean thoroughly. Carefully remove any stuck food.

## Technical Specifications

Feature	Kettle	Toaster
<b>Brand</b>	Arendo	Arendo
<b>Model Number</b>	A306077x49 (Part of set)	A306077x49 (Part of set)
<b>Power</b>	1850-2200 W	1000 W
<b>Capacity</b>	1.5 Liters	2 Slices
<b>Material</b>	Stainless Steel (SUS/SAE304), Double-wall	Double-wall housing

Feature	Kettle	Toaster
Temperature Control	40°C - 100°C (5°C increments)	6 Browning Levels
Special Features	30 min Keep Warm, Dry-run & Overheat Protection, BPA-free	LED Display, Warming Rack, Defrost, Reheat, Crumb Tray
Dimensions (approx.)	Height: 24.5 cm, Width: 22 cm (with handle)	Length: 38.5 cm, Width: 15.5 cm, Height: 20 cm

## Warranty and Customer Support

Your Arendo Kettle and Toaster Set comes with a manufacturer's warranty of 2 years from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or spare parts information, please visit the official Arendo website or contact their customer service department.

Official Arendo Website: <https://www.arendo.de/>