

Borosil GS01

Borosil 1000W Handheld Garment Steamer GS01 Instruction Manual

Model: GS01

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Borosil 1000W Handheld Garment Steamer, Model GS01. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the power outlet matches the voltage specified on the appliance.
- Do not immerse the steamer in water or other liquids.
- Keep the steamer away from children and pets.
- Exercise caution when handling hot steam. Keep hands and face away from the steam nozzle.
- Unplug the appliance from the power outlet before filling or emptying the water tank, and when not in use.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the appliance.
- This appliance is equipped with overheat protection and a thermal fuse for safety.
- Ensure the power socket is rated for 16 Amps for optimal and safe operation. Using a lower-rated socket may not provide sufficient power and could be unsafe.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Borosil Handheld Garment Steamer:

- **Steamer Unit:** The main body housing the heating element and water tank.
- **Ceramic Coated Soleplate:** For even heat distribution and smooth gliding.

- **Detachable Cloth Brush:** Attaches to the steam head for removing lint and opening fabric weaves.
- **120ml Detachable Water Tank:** Transparent tank for water storage.
- **Water Cup:** For easy filling of the water tank.
- **Steam Release Trigger:** Activates steam output.
- **Power Indicator Lamp:** Illuminates when the steamer is heating up and ready for use.
- **Long Power Cord:** Provides flexibility during use.
- **Carry Pouch:** For convenient storage and transport.



Figure 1: Key components of the Borosil Handheld Garment Steamer.

SETUP

1. Fill Water Tank:

- Press and hold the release button located at the bottom of the steamer to detach the water tank.
- Using the provided water cup, fill the detachable water tank with distilled or demineralized water up to the MAX line. Do not overfill.
- Reattach the water tank securely until it clicks into place.

HOW TO REMOVE & REFILL WATER TANK



Press & hold the release button

Pull out the detachable tank



Fill with water & use

Figure 2: Steps for removing and refilling the water tank.

2. **Attach Brush (Optional):** For fabrics that require lint removal or deeper steam penetration, attach the detachable cloth brush to the steam head.
3. **Connect Power:** Plug the steamer into a 16 Amp power outlet. The power indicator lamp will illuminate.
4. **Pre-heating:** Allow approximately 35 seconds for the steamer to heat up. The indicator lamp will change or turn off when ready, depending on the model.

OPERATING INSTRUCTIONS

1. **Garment Preparation:** Hang the garment on a hanger. For best results, pull the fabric taut with one hand while steaming with the other.
2. **Steaming Technique:**
 - Hold the steamer upright for vertical steaming or horizontally for flat surfaces.
 - Press the steam release trigger to emit steam. Move the steam head slowly over the fabric, allowing the steam to penetrate and relax the fibers.
 - The steamer supports dual steam modes (High & Eco) for different fabric types. Select the appropriate mode as needed.

USE IT VERTICALLY OR HORIZONTALLY

Easily remove wrinkles fom hard-to-iron garments



Figure 3: Steaming a garment vertically.

3. **Delicate Fabrics:** For delicate fabrics like silk or heavily embroidered items, hold the steamer slightly further away from the fabric or use the Eco steam mode.

TREATS DELICATE FABRICS WITH CARE



Figure 4: Steaming delicate fabrics with care.

4. **Finishing:** Once steaming is complete, release the steam trigger and allow the garment to cool and dry before wearing or storing.

MAINTENANCE AND CLEANING

- **Empty Water Tank:** Always empty the water tank after each use to prevent water stagnation and mineral buildup.
- **Cleaning the Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling:** Periodically, if you notice reduced steam output or white residue, descale the steamer. Consult the Borosil customer support for recommended descaling procedures or use a steam burst feature with distilled water.
- **Storage:** Store the steamer in its carry pouch in a dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank empty or not properly seated. Mineral buildup. Steamer not heated sufficiently.	Refill water tank and ensure it's securely attached. Allow adequate pre-heating time. Perform descaling if mineral buildup is suspected.
Water leakage.	Water tank overfilled or not properly seated. Steamer not fully heated.	Do not overfill the water tank. Ensure the tank is securely attached. Allow the steamer to fully heat up before use.
Steamer not turning on.	Not plugged in. Power outlet issue. Appliance malfunction.	Check power connection. Try a different power outlet. Ensure the outlet is 16 Amp rated. If problem persists, contact customer support.
Wrinkles not removing effectively.	Incorrect steaming technique. Fabric type.	Ensure fabric is taut. Move steamer slowly. Use the High steam mode for tougher wrinkles. For very stubborn wrinkles, traditional ironing may be required.

SPECIFICATIONS

Feature	Detail
Brand	Borosil
Model Number	GS01 (BHGS)
Wattage	1000 Watts
Voltage	230 Volts (AC)
Water Tank Capacity	120 Milliliters
Product Dimensions	8L x 25W x 13.5H Centimeters
Item Weight	0.67 Kilograms (670 g)
Soleplate Type	Ceramic Coated
Steam Modes	Dual (High & Eco)
Heat-up Time	Approx. 35 seconds
Safety Features	Overheat Protection, Thermal Fuse

DIMENSIONS



Figure 5: Product dimensions.

WARRANTY AND SUPPORT

Your Borosil 1000W Handheld Garment Steamer (Model GS01) comes with a **2-year warranty** against manufacturing defects from the date of purchase.

For warranty claims, technical assistance, or any product-related inquiries, please contact Borosil customer support. Keep your purchase receipt as proof of purchase.

- **Manufacturer:** Borosil Limited
- **Address:** 1101, Parinee Crescenzo, G Block, BKC, Bandra Kurla Complex, Bandra East, Mumbai, Maharashtra 400051
- **Website:** www.borosil.com