

Timco JE8707

Timco JE8707 Electric Kettle User Manual

Model: JE8707

INTRODUCTION

Thank you for choosing the Timco JE8707 Electric Kettle. This appliance is designed for rapid and safe water heating, featuring a durable glass jug and a stainless steel base. For optimal performance and safety, please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions carefully.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury, do not immerse cord, plugs, or the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- This appliance is for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Timco JE8707 Electric Kettle:

1. **Glass Jug:** Transparent borosilicate glass for viewing water level and boiling process.
2. **Lid:** Hinged lid for easy filling and cleaning.
3. **Handle:** Ergonomic, heat-resistant handle for safe pouring.
4. **Power Switch:** Located on the handle, with an integrated blue LED indicator.
5. **Water Level Indicator:** Markings on the glass jug for minimum (0.5L) and maximum (1.7L) fill levels.
6. **Filter:** Integrated filter to help reduce impurities.
7. **Power Base:** Independent 360-degree rotational stainless steel base with cord storage.



Image 1: Main view of the Timco JE8707 Electric Kettle, showing the glass jug, handle, lid, and stainless steel base.

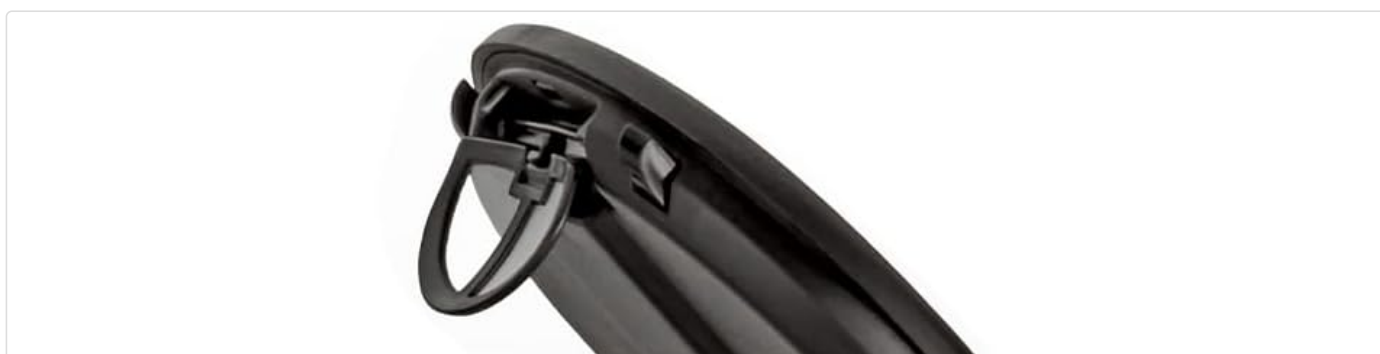




Image 2: The Timco JE8707 Electric Kettle with its lid open, illustrating the wide opening for easy filling and cleaning.



Image 3: Underside view of the Timco JE8707 Electric Kettle and its separate power base, highlighting the 360-degree connector.

SETUP AND FIRST USE

Before using your electric kettle for the first time, please follow these steps:

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Dispose of packaging materials responsibly.

2. **Clean:** Wipe the exterior of the kettle with a damp cloth. Wash the interior of the jug and the filter with warm, soapy water, then rinse thoroughly. Do not immerse the kettle base or power cord in water.
3. **First Boil:** Fill the kettle with fresh water to the maximum fill line (1.7L). Boil the water and then discard it. Repeat this process 2-3 times to remove any manufacturing residues and ensure optimal taste.
4. **Placement:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the counter. Ensure the power cord is not dangling.

OPERATING INSTRUCTIONS

Follow these steps to safely boil water with your Timco JE8707 Electric Kettle:

1. **Fill the Kettle:** Open the lid and fill the kettle with fresh water. Do not fill below the minimum (0.5L) or above the maximum (1.7L) fill lines indicated on the glass jug. Overfilling may cause boiling water to spill out.
2. **Close the Lid:** Ensure the lid is securely closed before operating.
3. **Place on Power Base:** Position the kettle firmly onto its power base.
4. **Plug In:** Plug the power cord into a standard 110V electrical outlet.
5. **Switch On:** Press the power switch down. The blue LED indicator light will illuminate, signaling that the kettle is heating.
6. **Automatic Shut-off:** The kettle will automatically switch off once the water reaches a rolling boil. The blue LED indicator light will turn off.
7. **Pour:** Carefully lift the kettle from its base and pour the hot water. Always hold the kettle by its heat-resistant handle.
8. **Re-boil:** If you need to re-boil water, wait a few moments for the internal thermostat to reset before pressing the power switch again.



Image 4: The Timco JE8707 Electric Kettle in operation, showing water boiling and the blue LED indicator light illuminated.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

Exterior Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Ensure the power base and electrical connections remain dry.

Interior Cleaning and Descaling:

Mineral deposits (limescale) can build up inside the kettle, especially in hard water areas. Descaling regularly will maintain performance and efficiency.

- **Vinegar Method:** Fill the kettle with 1 part white vinegar and 2 parts water. Let it stand for at least 30 minutes, or boil the mixture. Discard the solution and rinse the kettle thoroughly several times with fresh water.
- **Citric Acid Method:** Dissolve 1 tablespoon of citric acid in 1 liter of water. Pour into the kettle and boil. Discard the solution and rinse thoroughly.
- **Commercial Descaler:** Follow the instructions provided with a commercial kettle descaling product.
- After descaling, boil fresh water in the kettle 2-3 times and discard to remove any residual descaler taste.

TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in. Power switch not pressed. Kettle not properly seated on base. No power at outlet.	Ensure power cord is securely plugged into a working outlet. Press the power switch down firmly. Ensure the kettle is correctly placed on the power base. Check the circuit breaker or try another outlet.
Water is not boiling.	Kettle has insufficient water. Limescale buildup.	Ensure water level is above the minimum fill line. Descal the kettle as per the "Maintenance and Cleaning" section.
Kettle switches off too quickly.	Limescale buildup affecting thermostat.	Descal the kettle.
Water has an unusual taste.	New kettle residue. Limescale buildup.	Perform the "First Boil" steps again. Descal the kettle.

If the problem persists after trying these solutions, please contact Timco customer support.

SPECIFICATIONS

Feature	Detail
Model Number	JE8707
Brand	Timco
Capacity	1.7 Liters
Power	1200 Watts
Voltage	110 Volts
Material	Borosilicate Glass, Polypropylene (PP), Stainless Steel

Feature	Detail
Dimensions (L x W x H)	20 cm x 15.5 cm x 24.5 cm (approx.)
Automatic Shut-off	Yes
Special Features	Rapid boil, Water level indicator, Heat-resistant handle, Blue LED indicator

WARRANTY AND SUPPORT

This Timco JE8707 Electric Kettle is designed for reliability and performance. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.

For product support, troubleshooting assistance beyond this manual, or to inquire about warranty service, please contact Timco customer service through their official channels or the retailer where the product was purchased.

Return Policy: The product may be eligible for returns up to 31 days from the purchase date, subject to the retailer's return policy.

