

## Balimo B0CF46KH2B

# Balimo Automatic Cat Food Dispenser - 4 Liter

User Manual

## 1. INTRODUCTION

---

Thank you for choosing the Balimo Automatic Cat Food Dispenser. This device is designed to provide scheduled and portion-controlled meals for your pet, ensuring a healthy feeding routine. Please read this manual thoroughly before use to ensure proper operation and maintenance.

# 10s Customized Voice Call

Save time, stay close to your pets



Image 1.1: Front view of the Balimo Automatic Cat Food Dispenser.

## 2. SAFETY INSTRUCTIONS

---

- Ensure the dispenser is placed on a stable, level surface.
- Do not immerse the main unit in water or any other liquid.
- Use only dry pet food with a diameter between 2-15mm.
- Keep out of reach of children and pets to prevent tampering.
- Unplug the device before cleaning.
- Do not use damaged power cords or adapters.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Balimo Automatic Cat Food Dispenser Main Unit
- Food Storage Container (4 Liter capacity)
- Stainless Steel Food Bowl

- Power Adapter
- Desiccant Bag (pre-installed or separate)
- User Manual

## 4. PRODUCT FEATURES

---

- **Flexible Scheduled Feeding:** Program up to 4 meals per day, with up to 20 portions per meal (approx. 5-9g per portion).
- **10-Second Voice Recording:** Record a personalized message to call your pet at meal times.
- **Easy to Clean:** Removable components, including a food-grade 304 stainless steel bowl.
- **Secure Lid & Freshness:** Rotary locking lid prevents pet access, and a built-in desiccant container keeps food fresh.
- **Dual Power Supply:** Operates via power adapter or 3 x D-cell batteries (not included) for backup.
- **Memory Function:** Retains feeding schedule settings during power outages when using battery backup.
- **Anti-Clogging Design:** Engineered to prevent food blockages during dispensing.



Image 4.1: Key features including the stainless steel bowl, secure lid, and desiccant compartment.



Image 4.2: Illustration of the anti-clogging mechanism and the LCD control panel.

## 5. SETUP


### 5.1 Assembly

1. Place the main unit on a flat, stable surface.
2. Insert the stainless steel bowl into the designated slot at the base of the dispenser.
3. Open the top lid of the food storage container. Ensure the desiccant bag is properly placed in its compartment to maintain food freshness.
4. Fill the food storage container with dry pet food. Do not overfill.
5. Securely close the top lid by rotating it until it locks into place.

### 5.2 Power Supply

The dispenser supports dual power options:

- **AC Power:** Connect the provided power adapter to the dispenser's power port and plug it into a wall outlet.
- **Battery Backup:** For power outages or portability, insert 3 D-cell batteries (not included) into the battery compartment at the bottom of the unit. The device will automatically switch to battery power if AC power is lost.

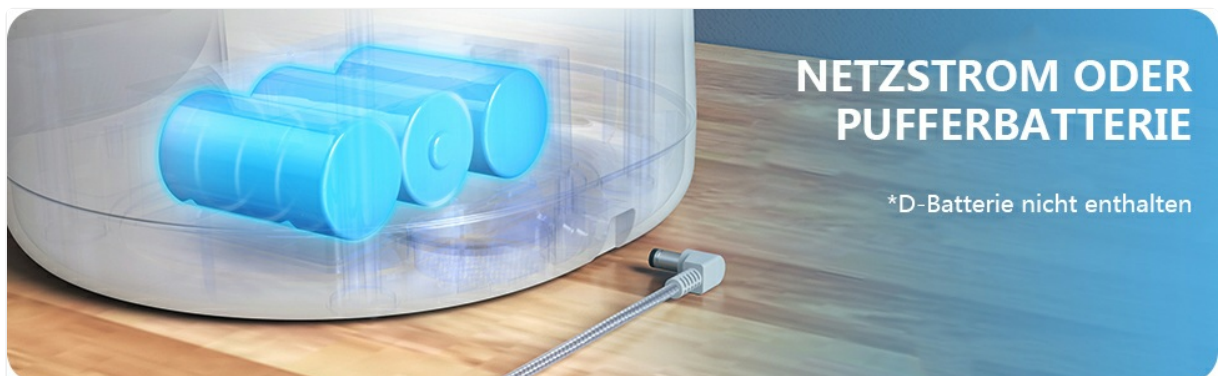

**NETZSTROM ODER  
PUFFERBATTERIE**

\*D-Batterie nicht enthalten

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Control Panel Overview



Image 6.1: Detailed view of the control panel.

The control panel features an LCD screen and several buttons for programming:

- **SET Button:** Enters programming mode and confirms settings.
- **UP/DOWN Buttons:** Adjust values (time, meal number, portions).
- **REC Button:** Records or plays back voice message.
- **FEED Button:** Manually dispenses one portion of food.

### 6.2 Setting the Current Time

1. Press and hold the **SET** button for 3 seconds until the hour digit flashes.
2. Use the **UP/DOWN** buttons to adjust the hour. Press **SET** to confirm.
3. The minute digit will flash. Use **UP/DOWN** to adjust minutes. Press **SET** to confirm.

### 6.3 Programming Meal Times and Portions

You can program up to 4 meals per day.

1. After setting the time, press **SET** again. The 'Meal 1' icon will appear, and the hour digit for Meal 1 will flash.
2. Use **UP/DOWN** to set the desired hour for Meal 1. Press **SET** to confirm.
3. Set the minutes for Meal 1 using **UP/DOWN**. Press **SET** to confirm.
4. The portion number for Meal 1 will flash. Use **UP/DOWN** to select the number of portions (1-20). Press **SET** to confirm.
5. Repeat steps 1-4 for Meal 2, Meal 3, and Meal 4 if desired. If you do not wish to set a meal, simply press **SET** to skip to the next meal setting or exit programming mode.

## 6.4 Recording a Voice Message

A 10-second voice message can be recorded to play during meal times.

1. Press and hold the **REC** button. The recording indicator will appear on the LCD.
2. Speak clearly into the microphone for up to 10 seconds.
3. Release the **REC** button to stop recording.
4. Press the **REC** button once to play back your recorded message.

## 6.5 Manual Feeding

To dispense a single portion of food instantly, press the **FEED** button once. Each press will dispense one portion.

## 7. MAINTENANCE AND CLEANING

---

Regular cleaning ensures hygiene and extends the life of your dispenser.

1. **Unplug the device:** Always disconnect the power adapter and remove batteries before cleaning.
2. **Remove components:** Detach the food storage container and the stainless steel bowl from the main unit.
3. **Clean the bowl:** The stainless steel bowl can be washed with soap and water. Rinse thoroughly and dry completely.
4. **Clean the container:** The food storage container can be wiped clean with a damp cloth. Ensure it is completely dry before refilling with food.
5. **Main unit:** Wipe the exterior of the main unit with a soft, dry cloth. Do not use abrasive cleaners or immerse the main unit in water.
6. **Desiccant:** Replace the desiccant bag every 1-2 months to maintain food freshness.
7. **Reassemble:** Once all parts are dry, reassemble the dispenser and refill with food.



Image 7.1: The 4-liter food tank and emphasis on easy cleaning.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser does not power on.	No power, batteries depleted, or incorrect battery installation.	Check power adapter connection. Replace D-cell batteries if using battery power. Ensure batteries are inserted with correct polarity.
Food is not dispensing.	Food hopper empty, food jammed, or incorrect programming.	Refill food hopper. Check for food blockages in the dispensing mechanism. Verify meal times and portion settings. Ensure food kibble size is appropriate (2-15mm).
Voice recording not playing.	No message recorded or recording error.	Re-record the voice message following the instructions in Section 6.4.

Problem	Possible Cause	Solution
Food gets stale quickly.	Lid not sealed, or desiccant needs replacement.	Ensure the top lid is securely rotated and locked. Replace the desiccant bag.

## 9. SPECIFICATIONS

---

- **Model:** B0CF46KH2B
- **Brand:** Balimo
- **Capacity:** 4 Liters
- **Dimensions (L x W x H):** 33 x 21 x 19 cm (13 x 8.3 x 7.5 inches)
- **Item Weight:** 7 Grams (Note: This weight seems incorrect based on typical product weights; please refer to packaging for accurate weight.)
- **Target Species:** Cat (suitable for small dogs)
- **Color:** White Transparent
- **Power Supply:** AC Adapter (included) or 3 x D-cell Batteries (not included)
- **Meals per Day:** 1-4
- **Portions per Meal:** 1-20 (approx. 5-9g per portion)



Image 9.1: Product dimensions and feeding capacity for different pets.

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. You may also visit the official Balimo website for further assistance.

Please retain your proof of purchase for any warranty claims.