

FITUEYES TT104002GW-J

FITUEYES Universal TV Stand Instruction Manual

Model: TT104002GW-J | Brand: FITUEYES

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your FITUEYES Universal TV Stand, model TT104002GW-J. Please read this manual thoroughly before installation and retain it for future reference. This stand is designed to support televisions between 19 and 42 inches.

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum load capacity of 45 kg (99 lbs). Overloading can result in serious injury or product damage.
- **VESA Compatibility:** Ensure your TV's VESA mounting pattern is compatible with this stand (75x75mm, 100x100mm, 200x100mm, 200x200mm). Note that 100x200mm is not compatible.
- **TV Back Panel:** If your TV has a curved back, or features significant indentations, protrusions, or cable interference points where the mounting plate attaches, use the provided spacers to ensure a flat and secure fit. If the depth of the indentation/protrusion exceeds 10mm, installation may not be possible.
- **Stability:** Always ensure the stand is placed on a stable, level surface to prevent tipping.
- **Children:** Keep children away from the stand during assembly and ensure the TV is securely mounted to prevent accidental falls.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- TV Stand Components (Metal pole, VESA plate, Tempered glass base)
- Display Mounting Screws: M4*14, M5*14, M6*14, M8*20 (various sizes to fit different TVs)
- Spacers: 5mm (8 pieces)
- Washers: Inner diameter 5.2mm (4 pieces), Inner diameter 8.2mm (4 pieces)
- Assembly Hardware (bolts, nuts, tools as required)

- Multi-language Instruction Manual

4. SETUP INSTRUCTIONS

Follow these steps carefully for proper assembly.

Step 1: Assemble the Base and Pole

Attach the metal support pole to the tempered glass base using the provided hardware. Ensure all screws are tightened securely.



Image: Assembly Step 1 - Securely attach the support pole to the tempered glass base.

Step 2: Attach the VESA Plate to the Pole

Secure the VESA mounting plate to the top of the support pole. This plate will hold your television.



Image: Assembly Step 2 - Connect the VESA mounting plate to the top of the stand's pole.

Step 3: Mount the Television

Carefully attach your television to the VESA mounting plate using the appropriate screws and washers from the provided hardware kit. If your TV's back panel is uneven, use the included spacers to ensure a flush fit. Ensure all connections are tight and secure.

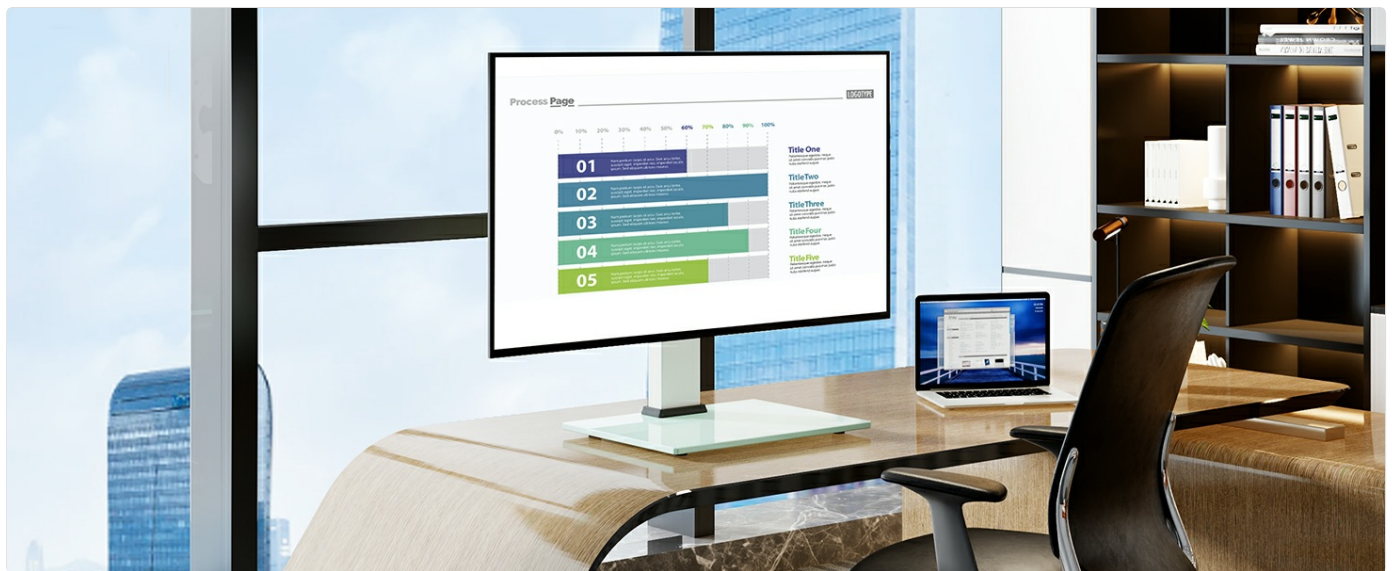


Image: Assembly Step 3 - Attach your TV to the VESA plate using the correct screws and spacers.

Step 4: Cable Management

Utilize the integrated cable management clips on the support pole to organize and conceal TV cables, maintaining a tidy appearance.

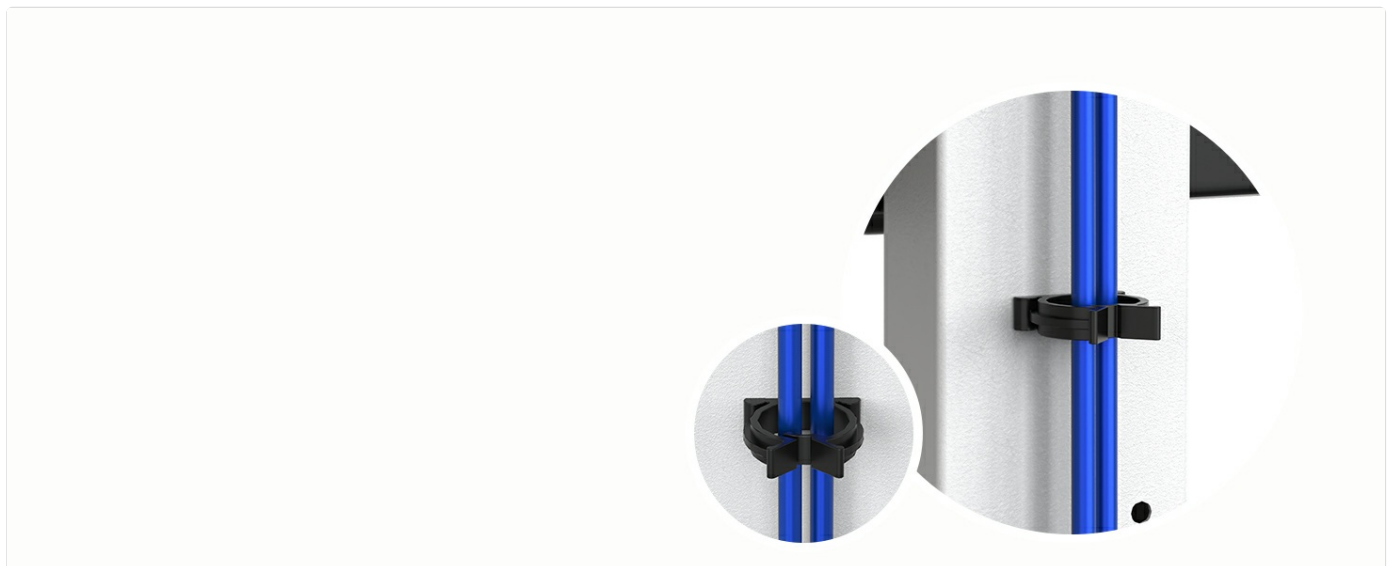


Image: Cable Management - Use the clips on the pole to route and hide cables.

5. OPERATING INSTRUCTIONS

Height Adjustment

The TV stand offers three height adjustment levels: 368mm, 428mm, and 488mm (measured from the top mounting point to the base). To adjust the height, you will need to detach the TV from the VESA plate, reposition the VESA plate on the support pole to the desired height, and then re-attach the TV. Ensure the VESA plate is securely fastened at the new height.

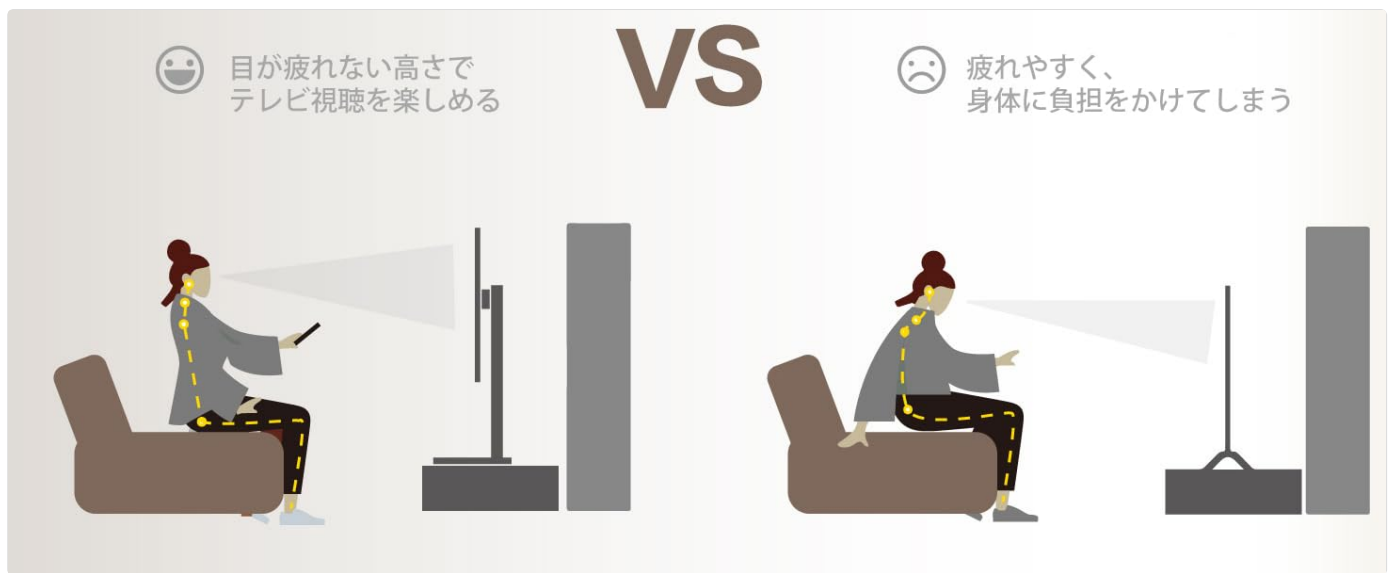


Image: Height Adjustment - The stand offers multiple height settings for optimal viewing.

Swivel Function

The TV stand allows for a swivel rotation of ± 45 degrees to the left and right. Gently rotate the television to achieve your preferred viewing angle. No tools are required for this adjustment.

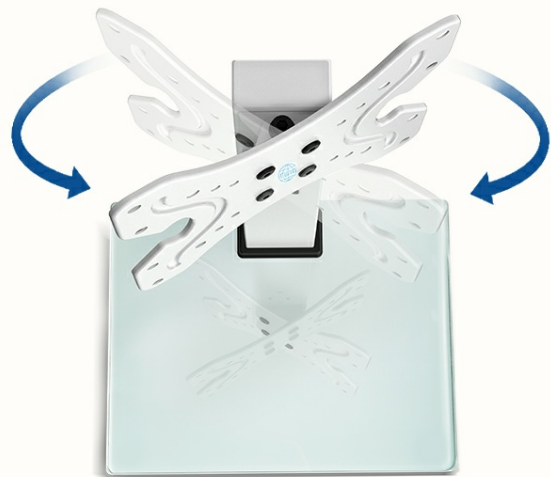


Image: Swivel Function - Adjust the TV angle up to 45 degrees left or right.

6. MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the metal and glass surfaces. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure. Re-tighten if necessary.
- **Glass Care:** The 8mm tempered glass base is durable, but avoid placing extremely heavy or sharp objects on it to prevent scratches or damage.

7. TROUBLESHOOTING

- **TV is not stable:** Ensure all assembly screws are fully tightened. Verify that the TV weight and VESA pattern are within the specified limits. Ensure the stand is on a flat, stable surface.

- **Difficulty with height adjustment:** Height adjustment requires re-positioning the VESA plate on the pole. Ensure the TV is removed before attempting to adjust the plate's position.
- **Missing parts:** Refer to the 'Package Contents' section. If any parts are missing, contact customer support immediately.
- **TV does not fit VESA plate:** Double-check your TV's VESA pattern against the compatible sizes (75x75, 100x100, 200x100, 200x200mm). Remember, 100x200mm is not compatible. Ensure you are using the correct screws and spacers.

8. SPECIFICATIONS

Feature	Specification
Model Number	TT104002GW-J
Compatible TV Size	19 - 42 inches
Maximum Load Capacity	45 kg (99 lbs)
VESA Compatibility	75x75mm, 100x100mm, 200x100mm, 200x200mm (Note: 100x200mm is not compatible)
Dimensions (W x D x H)	30 cm x 24 cm x 48.8 cm (approx.)
Product Weight	3.14 kg
Material	Steel (body), 8mm Tempered Glass (base)
Swivel Angle	±45 degrees
Height Adjustment Levels	368mm, 428mm, 488mm (from mounting point to base)

9. WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims regarding your FITUEYES TV stand, please contact our customer support. Our team is available to assist you within 24 hours.

Customer Support: Contact the seller 'somele' through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question