

Geek YBW60B

Geek Robocook Zeta 11-in-1 Automatic Electric Pressure Cooker Instruction Manual

Model: YBW60B | Capacity: 6 Litres

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Geek Robocook Zeta 11-in-1 Automatic Electric Pressure Cooker. Please read it thoroughly before first use and retain it for future reference.

The Geek Robocook Zeta is a versatile kitchen appliance designed to simplify cooking with its advanced PIC Technology. It combines multiple cooking functions into one unit, saving time and effort.

2. SAFETY INFORMATION

Your Geek Robocook Zeta is designed with multiple safety features to ensure secure operation. It is BIS Safety Standard certified.

Key Safety Features:

- Safety Lid Lock
- Anti-Block Shield
- Steam Release Mechanism
- Auto Temperature Control with Overheat Protection
- Auto Pressure Control
- Lid Position Detection
- Electrical Fuse



Image: Overview of the 7+ safety guards integrated into the Geek Robocook Zeta electric pressure cooker, highlighting features like the safety lid lock and auto temperature control.

3. WHAT'S IN THE BOX

Upon unpacking, ensure all components are present:

- 1x Geek Robocook Zeta Electric Pressure Cooker Main Unit
- 1x 6L Stainless Steel Inner Pot
- 1x Power Cable (1.5M)
- 1x Measuring Cup
- 1x Rice Scooper
- 2x Silicone Mitts
- 1x Recipe Book
- 1x User Manual (this document)



Image: The Geek Robocook Zeta electric pressure cooker, showcasing its sleek stainless steel design and user-friendly control panel.

4. SETUP AND ASSEMBLY

Follow these steps to prepare your electric pressure cooker for first use:

1. **Connect the Power Cord:** Insert the power cord into the bottom provision at the back of the product.
2. **Fix the Condensation Cup:** Gently push the condensation cup into the slots located at the backside of the cooker.
3. **Remove the Plate:** Pull the plate out of the lid using the holder.
4. **Insert the Plate:** Place the plate at the lid and push to insert it into the closing lid.
5. **Remove Silicone Gasket:** Slightly bend the gasket to remove it from the plate.
6. **Fix the Gasket:** Using the edge of the aluminum plate, fix the silicone gasket inside the lid.
7. **Remove the Float Valve:** Remove the small silicone ring and gently press the float valve in its respective position to remove it.
8. **Insert the Float Valve:** Put the float valve in its respective position and seal it with the small silicone ring.

9. **Close the Lid:** Twist the lid anti-clockwise from the 'Open' to 'Close' marking.
10. **Open the Lid:** Twist the lid clockwise from the 'Close' to 'Open' marking.

Your browser does not support the video tag.

Video: A short demonstration of connecting the power cord, fixing the condensation cup, removing and inserting the plate and float valve, and correctly closing and opening the lid of the Geek Robocook Zeta.

5. OPERATING INSTRUCTIONS

5.1. 11-in-1 Functionality

The Geek Robocook Zeta offers 11 cooking functions, replacing various kitchen utensils. These include pressure cooking, rice cooking, sautéing, steaming, baking, and more.



Image: Visual representation of the 11-in-1 functions of the Geek Robocook Zeta, illustrating its versatility as a steamer, simmer, soup cooker, egg boiler, rice cooker, and pressure cooker.

5.2. Using Sauté Mode

1. Switch 'ON' the Robocook.
2. Select 'Sauté' mode from the control panel.
3. Press 'Cook Mode' and select options: Quick, Medium, or Normal.

5.3. Selecting Preset Menus

The cooker features 13 specialized Indian preset menus for easy cooking:

- Rice
- Dal/Channa
- Sambar/Gravy
- Pongal/Khichadi
- Pulav/Biryani
- Egg
- Fish
- Chicken
- Meat
- Non-Veg
- Idly
- Sauté

To use, switch 'ON' the Robocook and select the desired preset menu button. The cooker will automatically adjust settings.



Image: A visual guide to the pre-programmed Indian recipes available on the Geek Robocook Zeta, demonstrating convenience for preparing dishes like rice, dal, and biryani.

5.4. Using Manual Function

1. Switch 'ON' the Robocook.
2. Press the 'Manual' function button.
3. Select the 'Cook Mode': Quick, Medium, or Normal.
4. Set the desired timer using the '+' and '-' buttons and wait for 3 seconds for it to start automatically.

5.5. Releasing Pressure

1. Once cooking is done and a beep sound is heard, the pressure is ready to be released.
2. Slide the pressure knob forward to release the pressure.

5.6. Delay Timer

The delay timer allows you to schedule cooking up to 24 hours in advance.

1. Add ingredients to the inner pot.
2. Choose your desired menu (preset or manual).

3. Select the 'Delay Timer' button and set the desired delay time (up to 24 hours).

Your browser does not support the video tag.

Video: A step-by-step guide on how to use the Sauté mode, select preset menus, utilize the manual function, release pressure safely, and set the delay timer on the Geek Robocook Zeta electric pressure cooker.

6. ADVANCED FEATURES

6.1. PIC Technology

The Geek Robocook Zeta incorporates Programmable Intelligent Cooking (PIC) Technology, which intelligently programs temperature, pressure, heat, and time for optimal cooking results.



Image: An illustration detailing the Programmable Intelligent Cooking (PIC) Technology, which manages temperature, pressure, heat, and time for precise cooking.

6.2. Recipe App

Explore over 1000 recipes specifically curated for the Robocook by downloading the Geek Recipe App. The app includes videos for various dishes covering breakfast, soups, starters, snacks, rice, gravy, noodles, pasta, and desserts.



Image: The Geek Robocook Zeta displayed with a smartphone and tablet, showcasing the accompanying recipe app that offers a wide range of cooking ideas.

7. MAINTENANCE AND CLEANING

To maintain your Geek Robocook Zeta, wipe the exterior with a damp cloth. The stainless steel inner pot is

designed for easy cleaning.

8. SPECIFICATIONS

Feature	Detail
Brand	Geek
Model Name	Geek Robocook Zeta
Model Number	YBW60B
Capacity	6 Litres
Product Dimensions	33D x 33W x 35H Centimeters
Power Source	Corded Electric
Wattage	1000 Watts
Voltage	220 Volts
Material	Stainless Steel (SS304 Inner Pot)
Item Weight	6.36 Kilograms
Special Feature	Automatic Cooking, 13 Indian Preset Menus
Country of Origin	China


9. WARRANTY AND SUPPORT

The Geek Robocook Zeta comes with a 1-year warranty. For any queries, assistance, or service requests, please contact customer care:

- **Customer Care:** 1800 121 922922

© 2024 Geek. All rights reserved.

Related Documents - YBW60B



<div><p>Geek Instruction Manual Electric Pressure Cooker Model:YBW60B</p></div>	<p>Geek YBW60B Electric Pressure Cooker Instruction Manual</p> <p>Comprehensive instruction manual for the Geek YBW60B Electric Pressure Cooker, covering important safeguards, product features, settings, usage instructions, cleaning, troubleshooting, and warranty information.</p>
---	--

[Geek F02 Smart Lock User Manual and Installation Guide](#)

Comprehensive user manual and installation guide for the Geek F02 Smart Lock, covering setup, operation, troubleshooting, and warranty information.

[Geek Smart K02 Door Lock: User Manual and Installation Guide](#)

Comprehensive user manual for the Geek Smart K02 door lock, covering installation, setup, troubleshooting, specifications, and limited warranty. Learn how to install, connect to the GeekSmart app, and manage access.

 <p>Quick Installation Manual</p> <p>The image shows a grid of eight small photographs illustrating the steps of installing a smart door lock. The steps include: 1. Preparing the door and lock body, 2. Mounting the lock body, 3. Mounting the handle, 4. Mounting the strike plate, 5. Mounting the battery pack, 6. Mounting the handle, 7. Mounting the strike plate, and 8. Mounting the handle.</p>	<p>Geek Smart Door Lock Quick Installation Manual</p> <p>Step-by-step guide for installing the Geek Smart Door Lock, covering latch installation, connecting rod and spindle setup, wiring, handle attachment, and battery installation. Includes support contact information.</p>
 <p>Instruction manual</p> <p>1. Appearance view</p> <p>The image shows a diagram of the Geek PS3000 4K Game Stick Lite Arcade Console. It includes labels for the 'Device', 'Support Bracket', 'USB', and 'PS3000 4K Game Stick Lite'. A note at the bottom states: 'PS3000 4K Game Stick Lite is connected to USB light, PS3000 4K Game Stick Lite is not connected to the light'.</p>	<p>Geek PS3000 4K Game Stick Lite Arcade Console Instruction Manual</p> <p>Instruction manual for the Geek PS3000 4K Game Stick Lite Arcade Console, detailing its appearance, hardware specifications, functions, game menu operations, settings, warranty, and FCC compliance.</p>