

[Manuals.plus](#) /

› [ZdalaMit](#) /

› ZdalaMit 100075108 Replacement Remote Control User Manual

ZdalaMit 1bede2ad-a467-49d3-afa5-4a1083939e78

ZdalaMit Replacement Remote Control User Manual

Model: 100075108 Compatible Remote for ONN Soundbar 100075108

INTRODUCTION

This manual provides comprehensive instructions for the ZdalaMit 100075108 Replacement Remote Control, designed for seamless compatibility with the ONN Soundbar 100075108. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your remote control.

PRODUCT OVERVIEW

The ZdalaMit 100075108 Replacement Remote Control is an ergonomic, black-colored device designed for intuitive control of your ONN Soundbar. It features clearly labeled buttons for various functions, ensuring ease of use.





Figure 1: Front view of the ZdalaMit 100075108 Replacement Remote Control, showing all buttons clearly.



Figure 2: Angled view of the remote control, highlighting its ergonomic design.

Button Functions:

- **Power Button:** Located at the top left (red icon). Used to turn the ONN Soundbar on or off.
- **Source Button:** Below the Power button (square with arrow). Cycles through available input sources on the soundbar (e.g., HDMI, Optical, AUX).
- **Bluetooth Button:** Top right (Bluetooth symbol). Activates Bluetooth pairing mode for connecting devices.
- **Volume Buttons (+/-):** Adjusts the sound output level of the soundbar.
- **Play/Pause Button:** Central button in the navigation cluster. Controls media playback (play, pause).
- **Previous/Next Track Buttons:** Left and right buttons in the navigation cluster. Skips to the previous or next audio track.
- **Movie Mode Button:** Activates a sound preset optimized for movie viewing.
- **Sound Mode Button:** Cycles through various sound modes (e.g., Music, News, Standard) to suit different audio content.
- **Dimmer Button:** Adjusts the brightness of the soundbar's display or indicator lights.
- **Light/Brightness Button:** (Sun icon) May control specific LED indicators or light features on the soundbar.
- **Mute Button:** (Speaker with cross icon) Temporarily silences or restores the sound.

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA size alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No programming is required for this replacement remote control. Once batteries are installed, it is ready for use with compatible ONN Soundbar models.

OPERATING INSTRUCTIONS

This remote control is pre-programmed to work with the ONN Soundbar model 100075108. Simply point the remote control towards the soundbar and press the desired function button.

- Ensure there are no obstructions between the remote control and the soundbar's infrared receiver.
- Maintain a reasonable distance for optimal signal transmission.
- Press buttons firmly and release.

MAINTENANCE

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface.

Battery Care:

- Replace batteries when the remote control's response becomes sluggish or stops working.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Remote Control Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA alkaline batteries if necessary.
- **Line of Sight:** Verify there are no objects blocking the path between the remote control and the soundbar's infrared receiver.
- **Distance:** Ensure you are within the effective operating range of the remote control.
- **Soundbar Power:** Confirm that the ONN Soundbar is powered on and functioning correctly.

Specific Functions Not Working:

- Ensure the soundbar is in the correct input mode for the function you are trying to perform (e.g., Bluetooth mode for Bluetooth functions).
- Some functions may require specific soundbar settings or connected devices to be active. Refer to your ONN Soundbar's manual for detailed information.

SPECIFICATIONS

Feature	Detail
Product Dimensions	6 x 2 x 0.5 inches
Item Weight	2 ounces
Batteries Required	2 x AAA batteries
Compatible Devices	ONN Soundbar 100075108 (Home Theater)
Color	Black
Special Feature	Ergonomic Design
Model Number	1bede2ad-a467-49d3-afa5-4a1083939e78

WARRANTY AND SUPPORT

This product is designed for reliable performance. For any questions, concerns, or support needs regarding your ZdalaMit Replacement Remote Control, please do not hesitate to contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty details, if applicable.