



[Manuals.plus](#) /

> [CYSSJF](#) /

> CYSSJF Bathroom Pull Cord Alarm Kit (Model SJ-4L-W1P 1+1) Instruction Manual

CYSSJF SJ-4L-W1P 1+1

CYSSJF Bathroom Pull Cord Alarm Kit (Model SJ-4L-W1P 1+1) Instruction Manual

Accessible Emergency Call System for Enhanced Safety

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of the CYSSJF Bathroom Pull Cord Alarm Kit, Model SJ-4L-W1P 1+1. This system is designed to provide a reliable emergency call solution for individuals requiring assistance in bathrooms or other critical areas, particularly for the elderly, disabled, and handicapped in various settings such as homes, hospitals, and nursing facilities.

2. PRODUCT OVERVIEW AND COMPONENTS

The CYSSJF Bathroom Pull Cord Alarm Kit consists of an alarm receiver and an alarm transmitter with a pull cord. It also includes additional call buttons for versatile use.

2.1 Key Features:

- **Emergency Assistance Alarm:** Designed for disabled individuals in public and residential toilets.
- **Accessible Design:** Features a red pull cord for easy activation.
- **LED Emergency Siren:** Built-in rechargeable backup battery for power outages (30-40 minutes continuous power).
- **Customizable Alerts:** Five call tones, four mutable volume levels, and three light colors (red, blue, green) for visual alerts.
- **Adjustable Siren Duration:** 30 seconds, 300 seconds, or continuous until manually canceled.
- **Cancel Function:** A dedicated "Cancel" key to stop the alarm after assistance is provided.
- **Easy Installation:** Suitable for disabled toilets, changing rooms, solariums, interview rooms, reception areas, homes, hotels, shopping malls, schools, hospitals, and nursing homes.

2.2 Package Contents:

- 1 x Alarm Receiver (plug-in power required, built-in emergency backup battery)
- 1 x Assistance Call Button (with 1.5m pull cord, built-in battery)
- 1 x Double-sided Tapes
- 1 x English Manual



Image: Overview of the CYSSJF Bathroom Pull Cord Alarm Kit components, including the receiver, call button with pull cord, and other accessories.

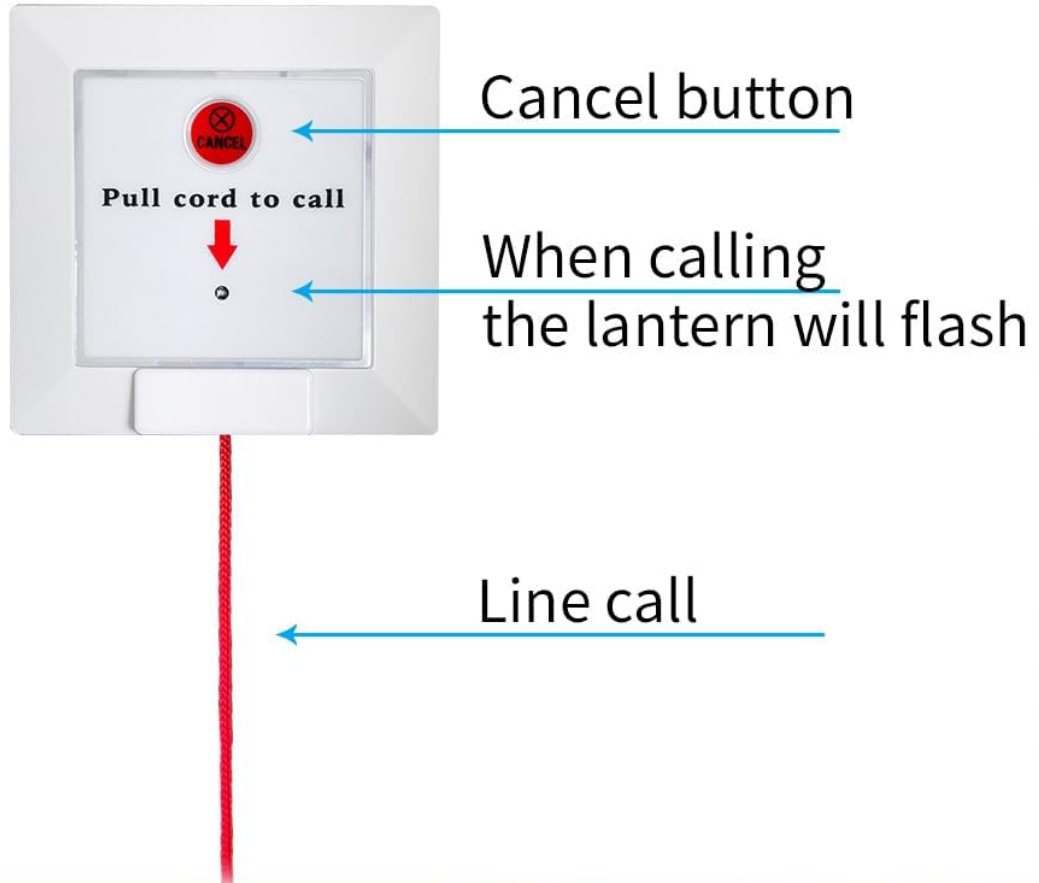


Image: Close-up of the call button, showing the "Cancel" button, the "Pull cord to call" instruction, and the flashing lantern indicator.

Product Details

Can be hung on the wall with screws



Charging port

5 kinds of music

4-level volume

Power ON/OFF

Prompt time

Red: keep reminding until cancelled

Blue: 300 seconds

Green: 30 seconds

3 light colors to choose from: **Red Blue Green**

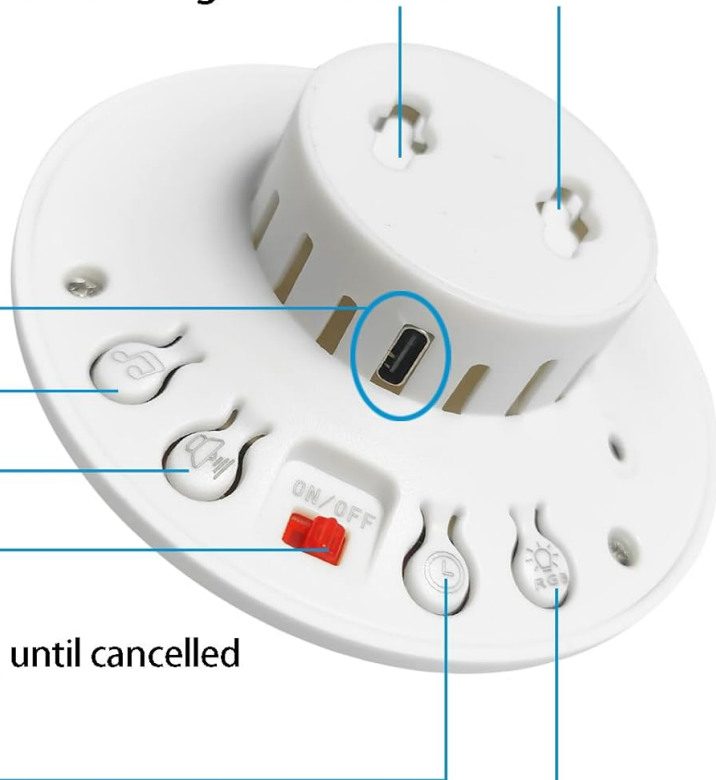


Image: Detailed view of the alarm receiver's underside, highlighting the charging port, music selection, volume control, power switch, prompt time settings, and light color options.

3. SETUP AND INSTALLATION

Follow these steps to set up your CYSSJF Bathroom Pull Cord Alarm Kit:

1. **Unpack Components:** Carefully remove all items from the packaging. Ensure all listed components in Section 2.2 are present.
2. **Power On the Receiver:** Locate the ON/OFF switch on the back of the alarm receiver and slide it to the "ON" position. The receiver will emit a sound and cycle through red, green, and blue lights.
3. **Mount the Call Button:** The assistance call button can be mounted on a wall using the provided double-sided tapes or screws. Choose a location easily accessible to the user, such as near a toilet or bed. Ensure the pull cord hangs freely.
4. **Plug in the Receiver:** Connect the alarm receiver to a standard power outlet. The built-in backup battery will activate automatically during power outages.

Your browser does not support the video tag.

Video: Demonstrates the unboxing and initial setup of the Bathroom Wireless SOS Bell for Elderly, showing how to locate

the switch and place the button.

Your browser does not support the video tag.

Video: Instructions on how to register the call button with the receiver, ensuring proper communication between devices.

4. OPERATING INSTRUCTIONS

4.1 Activating the Alarm:

- To activate the alarm, pull the red cord on the assistance call button.
- Alternatively, press the red button on the call transmitter (if included in your kit).
- The receiver will emit an audible alert and flash its lights to indicate an emergency.

4.2 Canceling the Alarm:

- After assistance has been provided, press the "Cancel" button on the call button unit to stop the alarm.

4.3 Customizing Settings:

- **Changing Ringtone:** On the receiver, press and hold the music note button until you hear a "Di~" sound. Continue pressing the music note button to cycle through the 5 available ringtones.
- **Adjusting Volume:** Use the volume control buttons on the receiver to select one of the four mutable volume levels.
- **Selecting Light Color:** Use the light control buttons on the receiver to choose between red, blue, or green light alerts.
- **Setting Siren Duration:** Adjust the siren duration to 30 seconds, 300 seconds, or continuous sounding until manually canceled using the dedicated button on the receiver.

Your browser does not support the video tag.

Video: Demonstrates how to change the ringtone on the alarm receiver.

Your browser does not support the video tag.

Video: Shows the ease of use of the alarm system, including activating and canceling calls.

5. MAINTENANCE

- **Cleaning:** Wipe the surfaces of the receiver and call button with a soft, damp cloth. Do not use abrasive cleaners or immerse the devices in water.
- **Battery Check:** The call button has a built-in battery. The receiver has a built-in emergency backup battery that provides 30-40 minutes of continuous power during outages. Ensure the receiver is regularly plugged in to keep its backup battery charged.
- **Functionality Test:** Periodically test the alarm system by activating the call button and ensuring the receiver responds with sound and light.

6. TROUBLESHOOTING

If you encounter issues with your alarm system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Receiver does not sound/light up when button is pressed.	Receiver is not powered on. Receiver is out of range. Call button battery is low or depleted. Call button not paired with receiver.	Ensure receiver is plugged in and ON. Move receiver closer to the call button. Replace/recharge call button battery. Re-register the call button (refer to setup instructions or "How to register button?" video).
Alarm sounds randomly.	Interference from other devices. Faulty call button.	Try moving the receiver or call button to a different location. Contact customer support for a replacement if the issue persists.
Cannot change ringtone/volume.	Incorrect button press sequence.	Refer to Section 4.3 or the "How to change the ringtone?" video for correct procedure.

Your browser does not support the video tag.

Video: Guide on how to restore the alarm system to factory settings, which can resolve various operational issues.

7. SPECIFICATIONS

Feature	Detail
Brand	CYSSJF
Model	SJ-4L-W1P 1+1
Power Source	Battery Powered (Receiver requires plug-in power with backup battery)
Battery Type	Alkaline (for call button), Built-in rechargeable (for receiver backup)
Number of Batteries	1 Nonstandard Battery (included)
Voltage	12 Volts
Control Method	Touch
Audible Noise	60 Decibels
Mounting Type	Wall Mount
Maximum Range	150 Meters
Sensor Technology	Contact Sensor

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your product packaging or visit the official CYSSJF website. Keep your purchase receipt for warranty claims.