

HONEY JOY B0CF5D38D5

HONEY JOY 4-in-1 Convertible Baby High Chair Instruction Manual

Model: B0CF5D38D5

1. INTRODUCTION

Thank you for choosing the HONEY JOY 4-in-1 Convertible Baby High Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your high chair. Please read all instructions carefully before use and retain this manual for future reference.

This high chair is designed to adapt to your child's growth, offering four modes: an infant high chair with tray, a high chair without tray, a lower toddler dining chair, and a toddler chair. It is suitable for children aged 6 to 36 months, with a maximum weight capacity of 33 pounds (15 kg).

2. SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always secure your child in the high chair with the 3-point safety harness.
- Never leave your child unattended in the high chair.
- Ensure the high chair is placed on a flat, stable surface.
- Do not use the high chair if any components are damaged or missing.
- Keep children away from the high chair during assembly and disassembly.
- The maximum weight capacity for this high chair is 33 pounds (15 kg).
- Recommended age range: 6 to 36 months.
- Always use the anti-falling baffle to prevent your child from sliding out.

Stable & Safe Construction



Image: Key safety features including the 3-point safety harness, anti-falling baffle, and non-slip foot pads for enhanced stability.

3. PARTS LIST

Before assembly, ensure all parts are present. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Seat Unit
- Upper Tray
- Lower Tray
- Long Legs (4 pieces)
- Short Legs (4 pieces)
- Footrest
- Non-slip Foot Pads (4 pieces)
- Assembly Hardware (screws, bolts, etc.)

4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your HONEY JOY high chair. A screwdriver may be required for some steps (not included).

1. **Attach Legs to Seat Unit:** Insert the appropriate legs (long for high chair mode, short for toddler chair mode) into the designated slots on the underside of the seat unit. Ensure they click securely into place.
2. **Install Footrest:** Slide the footrest onto the legs at the desired height. Ensure it is firmly attached.
3. **Attach Non-slip Foot Pads:** Secure the non-slip foot pads to the bottom of each leg.
4. **Attach Trays:** Align the double tray with the slots on the front of the seat unit. Push inward until it locks into position. The tray can be adjusted to 2 positions.
5. **Verify Stability:** Before placing your child in the high chair, gently push down on the seat and check that all connections are secure and the chair is stable.



Image: The assembled high chair and toddler chair, demonstrating the convertible design.

5. OPERATING INSTRUCTIONS

5.1. Adjusting the Double Tray

The high chair features a detachable double tray. The upper tray is ideal for eating and includes a cup holder. The lower tray can be used for playtime activities.

- **To Attach:** Align the tray with the armrests and slide it forward until it clicks into place.
- **To Detach:** Press the release button (usually located underneath the tray or on the sides) and pull the tray outwards.
- **To Adjust Position:** The tray has 2 adjustable positions. Press the release button and slide the tray forward or backward to the desired position, ensuring it locks securely.



Image: Detachable double tray with separate sections for eating and playing, including a built-in cup holder.

2 Adjustable Positions

Comfortable for growing kids



Image: Illustration of the tray's two adjustable positions, highlighting its dishwasher-safe and waterproof properties.

5.2. Using the 3-Point Safety Harness

Always secure your child with the 3-point safety harness to prevent falls and ensure safety.

1. Place your child in the seat.
2. Bring the waist straps around your child's waist and connect them to the buckle.
3. Adjust the straps to ensure a snug but comfortable fit.

5.3. Converting Between Modes

The high chair can be converted into four different modes to suit your child's developmental stage.

- **Infant High Chair with Tray:** Use the long legs and attach both trays.
- **High Chair without Tray:** Use the long legs and remove the trays.
- **Lower Toddler Dining Chair:** Remove the long legs and attach the short legs. Use with the tray.
- **Toddler Chair:** Remove the long legs and attach the short legs. Remove the trays.



Image: Visual representation of the four convertible modes of the high chair.

Product Dimension

Weight capacity: 33 lbs



Suitable age: 6-36 months



Image: The high chair configured as a low toddler chair, suitable for playtime.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and hygiene of your high chair.

- **Trays:** The upper and lower trays are made of BPA-free PP material and are dishwasher safe. They can also be easily wiped clean with a damp cloth and mild soap.
- **Seat:** The seat is waterproof and can be wiped clean with a damp cloth and mild soap. Avoid abrasive cleaners.
- **Frame:** Wipe the stainless steel legs and other frame components with a damp cloth. Dry thoroughly.
- **Harness:** The 3-point safety harness can be spot cleaned with mild soap and water. Allow to air dry completely.
- **Storage:** Store the high chair in a clean, dry place away from direct sunlight when not in use.

7. TROUBLESHOOTING

If you encounter any issues with your high chair, please refer to the following common solutions:

- **Chair feels unstable:** Ensure all legs are fully inserted and locked into place. Check that the non-slip

foot pads are securely attached and the chair is on a flat, even surface.

- **Tray is difficult to attach/detach:** Ensure the release button is fully pressed when attempting to attach or detach the tray. Check for any obstructions in the tray slots.
- **Harness is too tight/loose:** Adjust the straps of the 3-point safety harness to fit your child snugly but comfortably. Refer to section 5.2 for harness usage.
- **Difficulty converting modes:** Ensure all leg connections are properly disengaged before attempting to swap leg sets. Apply gentle, even pressure when inserting new legs.

If problems persist, please contact HONEY JOY customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	HONEY JOY
Model Number	B0CF5D38D5
Material Type	Polypropylene, Stainless Steel
Color	White
Item Weight	5.7 pounds (2.59 kg)
Maximum Weight Recommendation	33 pounds (15 kg)
Suitable Age	6-36 months
High Chair Dimensions (D x W x H)	23.5" x 26" x 33.5" (60cm x 66cm x 85cm)
Toddler Chair Dimensions (D x W x H)	21" x 21" x 21" (53cm x 53cm x 53cm)
UPC	798470207851

Product Dimension

Weight capacity: 15 kg 

Suitable age: 6-36 months 



Image: Product dimensions in inches for both high chair and toddler chair configurations.



Infant High
Chair



High Chair



Toddler
Dining Chair



Toddler Chair

1 Chair, 4 Modes

Accompany kids to grow up

Image: Product dimensions in centimeters for both high chair and toddler chair configurations.

9. WARRANTY AND SUPPORT

HONEY JOY products are manufactured with quality and care. For any questions, concerns, or warranty inquiries, please contact HONEY JOY customer support through the retailer where the product was purchased or visit the official HONEY JOY website for contact information.