

[Manuals.plus](#) /

› [Mocel](#) /

› Mocel Water Dental Flosser Instruction Manual

Mocel WF01

Mocel Water Dental Flosser

Model: WF01 - User Instruction Manual

INTRODUCTION

Thank you for choosing the Mocel Water Dental Flosser. This device is designed to provide effective oral hygiene by removing plaque and food debris from between teeth and below the gumline. Featuring 5 cleaning modes, 6 specialized nozzles, and a large 300ML water tank, this portable and rechargeable oral irrigator is suitable for various oral care needs, including sensitive gums and braces. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The Mocal Water Dental Flosser, including the main unit, various nozzles, and USB-C charging cable.

SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the device:

- Do not use with open wounds in the mouth or if you have certain medical conditions without consulting a dental professional.
- Keep the device out of reach of children.
- Always unplug the device and allow it to cool before cleaning.
- Do not immerse the main unit in water. The device is IPX7 waterproof for showering, but not for full submersion.
- Avoid direct contact of the water jet with eyes.
- If the device is swallowed or any part of it is ingested, seek medical advice immediately.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

PRODUCT FEATURES

- **5 Cleaning Modes:** Strong, Normal, Soft, Pulse, and Child modes cater to various oral sensitivities and cleaning needs. The Child mode is specifically designed for sensitive gums and younger users.
- **Smart LED Screen:** An integrated OLED display shows the current mode for easy selection.
- **300ML Water Tank:** Large capacity removable water tank reduces the need for frequent refills and is easy to clean.
- **USB-C Rechargeable:** Fast charging in 4 hours provides up to 40 days of continuous use. (Charging adapter not included).
- **IPX7 Waterproof:** Designed for safe use in the shower and easy cleaning.
- **6 Nozzles Included:** Includes standard tips (x3), an orthodontic tip (x1), a periodontal tip (x1), and a tongue cleaner tip (x1) for comprehensive oral care.
- **360° Rotating Nozzle:** Allows for thorough cleaning of hard-to-reach areas.
- **Powerful Water Pressure:** Delivers 2200-3000 pulses per minute at 50-150 PSI for effective plaque removal.



Easy to Use

Safe and effective for family oral care

Mocel water flosser is recommended by dental experts, It is specially equipped with child exclusive mode: ultra-low water pressure and gentle cleaning, caring for sensitive teeth, effectively avoiding bleeding gums, worry-free for whole family.



	Child 50PSI Child & New Users
	Soft 80PSI Daily cleaning & Sensitive Teeth
	Pulse 110PSI Massage Gum
	Normal 125PSI Effective Cleaning
	Strong 150Psi Deep Clean Teeth & Braces

Image: Illustration of the 5 cleaning modes (Strong, Normal, Soft, Pulse, Child) and their corresponding pressure levels (50-150 PSI).

6 Tips 360° Rotating Nozzles



Image: Visual representation of the six different 360° rotating nozzles included with the flosser, detailing their specific uses.

PACKAGE CONTENTS

Upon opening your Mocel Water Dental Flosser package, please ensure all the following items are present:

- Mocel Water Dental Flosser Main Unit
- Standard Nozzles (x3)
- Orthodontic Tip (x1)
- Periodontal Tip (x1)
- Tongue Cleaner Tip (x1)
- USB-C Charging Cable (x1)
- User Manual (this document)

SETUP

Follow these steps to prepare your Mocel Water Dental Flosser for first use:

1. **Charge the Device:** Before initial use, fully charge the water flosser using the provided USB-C cable. Connect the cable to the charging port on the device and to a compatible USB power source (e.g., phone charger, PC, power bank). A full charge takes approximately 4 hours.
2. **Attach Nozzle:** Select the desired nozzle and firmly insert it into the hole on the top of the flosser handle until it clicks into place.
3. **Fill Water Tank:** Open the water tank cover and fill the 300ML tank with warm water. Ensure the rubber base cover is closed tightly after filling to prevent leakage.

Easy to Use Please Put the Nozzle to the Mouth Before Turn it on



01 Add water



02 Insert the tip



03 Press "Mode" button to select proper mode



04 Put it into your mouth before turning it on



05 Press "ON/OFF" button to turn on the power

Image: Visual guide demonstrating how to add water, insert the tip, select a mode, position in mouth, and turn on the device.

OPERATING INSTRUCTIONS

To use your Moxel Water Dental Flosser:

- Select Mode:** Press the 'M' (Mode) button to cycle through the 5 cleaning modes: Strong, Normal, Soft, Pulse, and Child. The selected mode will be displayed on the OLED screen.
- Position Nozzle:** Lean over a sink and place the nozzle tip into your mouth, aiming it at your gum line.
- Start Flossing:** Press the Power button to turn on the device. Move the nozzle along your gum line and between your teeth, allowing the water to clean the areas. The 360° rotating nozzle helps reach all areas.
- Turn Off:** Press the Power button again to turn off the device when finished.

Important: Always place the nozzle in your mouth before turning on the device to avoid splashing.

MAINTENANCE

Proper maintenance ensures the longevity and hygiene of your water flosser:

- **Empty and Clean Water Tank:** After each use, empty any remaining water from the tank. The removable tank can be easily detached and cleaned with water.
- **Clean Nozzles:** Rinse the nozzles thoroughly under running water after each use. For deeper cleaning, nozzles can be soaked in a denture cleaning solution or a mixture of water and white vinegar periodically.
- **Wipe Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- **Charging:** Recharge the device when the battery indicator shows low power. Ensure the USB-C port cover is securely closed when not charging to maintain water resistance.

Easy to Refill and Clean



With Gravity Ball Design
It Can Works At Any Angle



Image: Diagram illustrating the easy refill and cleaning process of the water tank, highlighting the gravity ball design for multi-angle operation.

TROUBLESHOOTING

If you encounter issues with your Mocol Water Dental Flosser, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; Power button not pressed correctly.	Charge the device fully. Ensure the Power button is pressed firmly.
Weak water pressure.	Water tank empty; Nozzle clogged; Incorrect mode selected.	Refill water tank. Clean the nozzle. Select a stronger mode (e.g., 'Strong' or 'Normal').
Water leakage.	Water tank not properly sealed; Nozzle not fully inserted.	Ensure the water tank cover and rubber base are tightly closed. Re-insert the nozzle until it clicks.
Device stops unexpectedly.	Low battery; Overheating.	Recharge the device. If it feels warm, allow it to cool down before resuming use.

SPECIFICATIONS

Feature	Detail
Model Number	WF01
Product Dimensions	3 x 3 x 8 inches
Item Weight	11.68 ounces

Feature	Detail
Water Tank Capacity	300ML
Power Source	Battery Powered (USB-C Rechargeable)
Battery Type	1 AAA battery required (internal, non-replaceable)
Charging Time	Approx. 4 hours
Usage Time per Charge	Up to 40 days (based on typical use)
Water Pressure Range	50-150 PSI
Pulse Frequency	2200-3000 times per minute
Waterproof Rating	IPX7

WARRANTY AND SUPPORT

Specific warranty details for the Mocol Water Dental Flosser are not provided in this manual. For information regarding warranty coverage, technical support, or replacement parts, please refer to the product packaging or contact Mocol customer service directly through their official website or the retailer where the product was purchased.