

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Jocca](#) /

> [Jocca 150W Cordless HEPA Filter Stick Vacuum Cleaner Model 2202 User Manual](#)

## Jocca 2202

# Jocca 150W Cordless HEPA Filter Stick Vacuum Cleaner

Model: 2202 - User Manual

## 1. INTRODUCTION

Thank you for choosing the Jocca 150W Cordless HEPA Filter Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient use, assembly, operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

## 2. SAFETY INSTRUCTIONS

- Read all instructions thoroughly before operating the vacuum cleaner.
- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner without supervision.
- Do not vacuum liquids, hot ashes, burning cigarettes, sharp objects, or flammable/combustible materials.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Use only manufacturer-recommended attachments and accessories.
- Do not operate the vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water.
- Always turn off the appliance before attaching or detaching accessories, or performing maintenance.
- Store the vacuum cleaner in a dry, cool place when not in use.

## 3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Jocca Cordless Stick Vacuum Cleaner.



**Image 1:** The Jocca 150W Cordless Stick Vacuum Cleaner, illustrating its overall dimensions of approximately 45 cm in height, 24 cm in width, and 15 cm in depth.

- **Main Unit:** Contains the motor, dustbin, and handle.
- **Telescopic Aluminum Tube:** Extends for floor cleaning and reduces for handheld use.
- **Floor Brush with LED Lights:** Designed for various floor types, with integrated lights to illuminate dark areas.
- **2-in-1 Brush:** A versatile tool for upholstery and delicate surfaces.
- **Crevice Nozzle:** Ideal for narrow gaps and corners.

- **HEPA Filter:** Captures fine particles for improved air quality.
- **Stainless Steel Mesh Filter:** Primary filter for larger debris.
- **Power Adapter:** For charging the vacuum's battery.



**Image 2:** Close-up view of the main unit, showing the motor housing, transparent dustbin, and ergonomic handle.



**Image 3:** The floor brush attachment, designed for efficient cleaning of various floor surfaces.



**Image 4:** The crevice nozzle, suitable for reaching tight spaces and corners.



**Image 5:** The 2-in-1 brush attachment, offering versatility for different cleaning tasks.

## 4. SETUP AND ASSEMBLY

---

### 4.1 Assembly

1. Insert the telescopic aluminum tube into the main unit until it clicks securely into place.
2. Attach the floor brush to the other end of the telescopic tube, ensuring a firm connection.
3. For handheld use, attach the 2-in-1 brush or crevice nozzle directly to the main unit.

### 4.2 Charging the Battery

- Before first use, fully charge the vacuum cleaner for approximately 3-4 hours.
- Connect the power adapter to the charging port on the main unit and then plug it into a wall outlet.
- The charging indicator lights will show the battery status. Ensure the vacuum is fully charged for optimal performance and runtime.

## 5. OPERATING INSTRUCTIONS

---

1. **Power On/Off:** Press the power button on the main unit to turn the vacuum cleaner on or off.
2. **Speed Selection:** Press the speed button to toggle between the two available suction speeds (standard and high).
3. **Using the Floor Brush:** For general floor cleaning, attach the telescopic tube and floor brush. The integrated LED lights will automatically illuminate dark areas under furniture or in corners.
4. **Using Attachments:** For specific cleaning tasks, detach the telescopic tube and attach the 2-in-1 brush for upholstery or the crevice nozzle for tight spaces directly to the main unit.
5. **Battery Indicator:** Monitor the battery indicator lights on the main unit to know when recharging is needed.



**Image 8:** The Jocca cordless vacuum cleaner in use within a modern kitchen environment, demonstrating its practical application.

## 6. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 6.1 Emptying the Dustbin

1. Ensure the vacuum cleaner is turned off.
2. Press the dustbin release button to detach the dustbin from the main unit.
3. Hold the dustbin over a waste bin and open the bottom lid to empty the collected debris.
4. Close the lid and reattach the dustbin to the main unit until it clicks.

## 6.2 Cleaning the Filters



**Image 6:** The dustbin with its internal filter components, shown partially disassembled for cleaning access.

1. After emptying the dustbin, twist and pull to remove the HEPA filter and the stainless steel mesh filter.
2. Rinse both filters under running water until clean. Do not use detergents or hot water.
3. Allow the filters to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters, as this can damage the motor.
4. Once dry, reinsert the stainless steel mesh filter, then the HEPA filter, and finally reattach the dustbin to the main unit.



**Image 7:** The HEPA filter and stainless steel mesh filter separated from the dustbin, ready for cleaning.

## 6.3 Cleaning Attachments

- Wipe all attachments with a damp cloth. Ensure they are dry before storage.
- Periodically check the floor brush for tangled hair or debris and remove as necessary.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is discharged Power button not pressed	Charge the battery fully Press the power button firmly
Low suction power	Dustbin is full Filters are clogged Blockage in tube or attachments	Empty the dustbin Clean and dry the filters Check and remove any blockages
Short battery runtime	Battery not fully charged Battery life degraded	Ensure battery is fully charged Contact customer service for battery replacement options
LED lights on floor brush not working	Loose connection LED malfunction	Ensure floor brush is securely attached Contact customer service

## 8. SPECIFICATIONS

Feature	Specification
Brand	Jocca
Model Number	2202
Power	150W
Suction Power	8 kPa

Feature	Specification
Battery Type	2000mAh Lithium-ion
Run Time	Up to 30 minutes
Filter Type	Washable HEPA filter, Stainless steel mesh
Dustbin Capacity	0.6L
Number of Speeds	2
Special Features	Cordless, LED lights on brush, Lightweight
Product Dimensions	24.5 x 15 x 45 cm
Product Weight	2.26 kg

## 9. WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided at the time of purchase. If you require technical assistance or have questions not covered in this manual, please contact Jocca customer service through their official website or the retailer where the product was purchased.