

## PRIXTON TWS155

# PRIXTON TWS155 Wireless Earbuds User Manual

Model: TWS155 (10006070)

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance  
& Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

## 1. INTRODUCTION

This manual provides detailed instructions for the PRIXTON TWS155 Wireless Earbuds. Learn how to set up, operate, and maintain your earbuds for optimal performance and to ensure a high-quality audio experience. These earbuds offer a reliable wireless connection and integrated touch controls for ease of use.

## 2. SETUP GUIDE

### 2.1. Unboxing and Initial Charge

Upon receiving your PRIXTON TWS155 Wireless Earbuds, open the charging case and remove the earbuds. Place them back into the charging case to ensure they are fully charged before first use. Connect the charging case to a power source using a compatible USB cable (not included). The charging time for the case and earbuds is approximately 1.5 hours.



Image: PRIXTON TWS155 Wireless Earbuds in their open charging case, showcasing the design of the earbuds and the case interior.

## 2.2. Pairing with Your Device

1. Ensure both earbuds are in the charging case and the case lid is open, or remove them from the case.
2. Activate Bluetooth on your smartphone or other compatible device.

3. Search for available Bluetooth devices in your device's settings.
4. Select 'PRIXTON TWS155' (or a similar name) from the list of available devices.
5. Once connected, the earbuds are ready for use. The connection range is up to 10 meters.

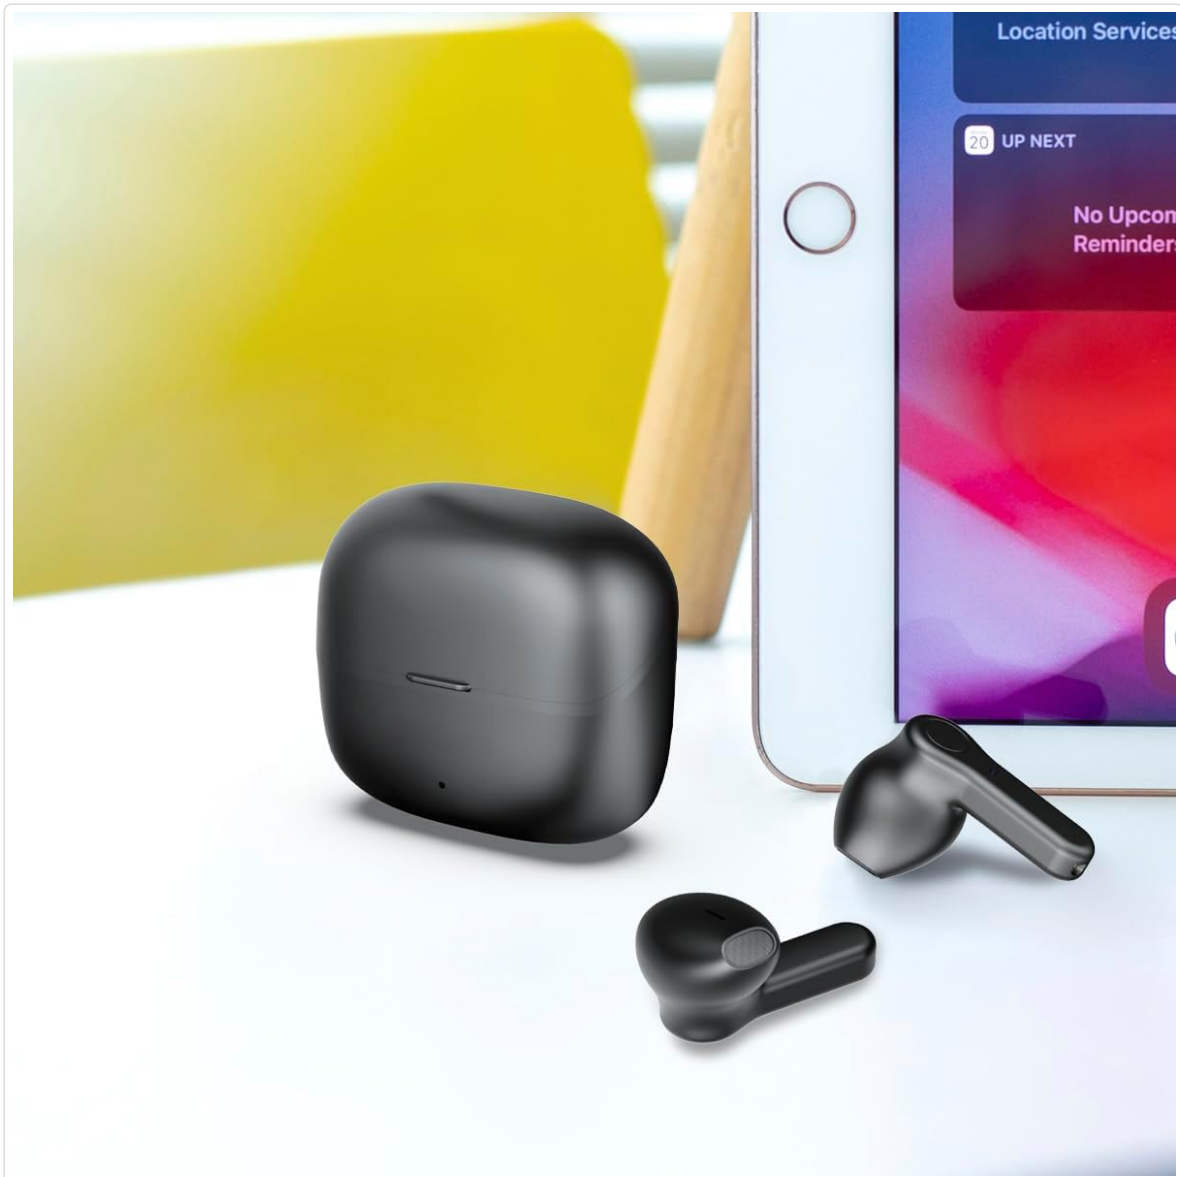 


Image: The PRIXTON TWS155 charging case and two earbuds resting on a white surface next to a tablet, illustrating their compact size and portability.

## 3. OPERATING INSTRUCTIONS

---

### 3.1. Touch Controls

The PRIXTON TWS155 earbuds feature integrated touch controls for various functions. These controls allow you to manage your audio playback and calls without needing to access your connected device. Common functions include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.

- **Activate Voice Assistant:** Triple tap on either earbud.

*Note: Specific touch gestures may vary slightly. Refer to the quick start guide included with your product for precise control instructions.*

### 3.2. Battery Life and Charging

A full charge provides approximately 5-6 hours of playback time. The charging case extends this duration by recharging the earbuds multiple times. To charge the case, connect it to a USB power source. The LED indicator on the case will show the charging status.



Image: PRIXTON TWS155 earbuds in their charging case, positioned next to a smartphone displaying a music streaming application, indicating readiness for audio playback.

## 4. MAINTENANCE

To ensure the longevity and optimal performance of your PRIXTON TWS155 earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using liquids, solvents, or abrasive cleaners, as these can damage the components.
- **Storage:** Always store the earbuds in their charging case when not in use. This protects them from dust, damage, and keeps them charged for your next use.

- **Avoid Extreme Conditions:** Do not expose the earbuds or charging case to extreme temperatures (hot or cold), high humidity, or direct sunlight. These conditions can negatively impact battery life and overall functionality.
- **Water Resistance:** The earbuds are not waterproof. Avoid contact with water or other liquids.



Image: PRIXTON TWS155 earbuds and their charging case displayed on a dark background, highlighting the USB-C charging port on the case.

## 5. TROUBLESHOOTING

If you encounter any issues with your PRIXTON TWS155 Wireless Earbuds, refer to the following common problems and their solutions:

- **Earbuds not pairing:**
  - Ensure both earbuds are charged and within the 10-meter range of your device.
  - Turn off and then turn on your device's Bluetooth, then try the pairing process again.
  - If issues persist, try resetting the earbuds (refer to the quick start guide for specific reset instructions).
- **No sound from earbuds:**

- Check the volume level on your connected device and ensure it is not muted.
- Verify that the earbuds are properly connected to your device via Bluetooth.
- Ensure the earbuds are correctly placed in your ears.

- **Charging issues:**

- Verify that the charging cable and power adapter are working correctly.
- Ensure the charging contacts on both the earbuds and the charging case are clean and free of any debris.
- Make sure the charging cable is securely plugged into both the case and the power source.

- **Earbuds disconnecting frequently:**

- Ensure you are within the 10-meter Bluetooth range of your device.
- Avoid obstacles between your device and the earbuds that might interfere with the signal.
- Try re-pairing the earbuds with your device.

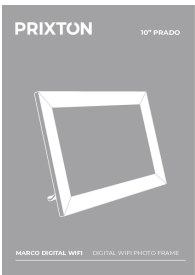
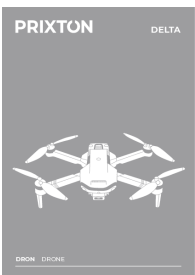
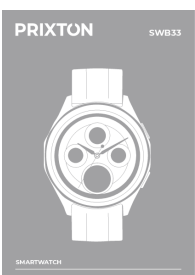
## 6. SPECIFICATIONS

Feature	Detail
Brand	PRIXTON
Model Name	TWS155
Model Number	10006070
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth 5.0
Earbud Battery Capacity	40 mAh
Charging Case Battery Capacity	320 mAh
Charging Time	1.5 hours
Operating Time (Playback)	5-6 hours
Operating Range	Up to 10 meters
Form Factor	True-Wireless
Noise Control	Active Noise Cancellation
Included Components	Charging Station

## 7. WARRANTY & SUPPORT

For detailed warranty information, product registration, or technical support, please visit the official PRIXTON website or contact their customer service directly. It is recommended to keep your proof of purchase for any warranty claims or support inquiries.

## Related Documents - TWS155

	<p><a href="#">Prixton TWS163 WOOD Eco Earbuds User Manual</a></p> <p>Comprehensive user manual for the Prixton TWS163 WOOD Eco Earbuds, covering setup, operation, safety instructions, and technical specifications. Learn how to pair, use call and music modes, charge your earbuds, and understand safety guidelines.</p>
	<p><a href="#">Prixton 10\" Prado Marco Digital Wifi - Manual de Usuario</a></p> <p>Guía completa para el marco de fotos digital Prixton 10\" Prado con Wi-Fi. Aprenda a configurar, conectar amigos y gestionar sus recuerdos a través de la aplicación Frameo.</p>
	<p><a href="#">Manual de Usuario Drone Prixton Delta</a></p> <p>Guía completa para el drone Prixton Delta, cubriendo operación, preparación, carga, control remoto, aplicación móvil y solución de problemas.</p>
	<p><a href="#">Manual de Usuario Smartwatch Prixton SWB33</a></p> <p>Explore las funciones, configuración y uso del smartwatch Prixton SWB33 con esta guía completa. Aprenda a emparejar su dispositivo, medir su salud y utilizar las diversas aplicaciones.</p>
	<p><a href="#">Manual de Usuario Prixton Dalí Proyector: Guía Completa y Especificaciones</a></p> <p>Descubra cómo usar, instalar y configurar su proyector Prixton Dalí. Este manual de usuario proporciona instrucciones detalladas, información de seguridad y especificaciones técnicas para una experiencia óptima.</p>



### [Prixton Sky 4K Drone Mini - Manual de Usuario](#)

Manual de usuario detallado para el dron Prixton Sky 4K, cubriendo preparación de vuelo, operación, mantenimiento, solución de problemas y uso de la aplicación móvil.