

[Manuals.plus](#) /

› [Fackelmann](#) /

› INITIAL Soup Ladle Stainless Steel with PP Plastic Handle, 33cm Soup Ladle (Silver)

## Fackelmann 680146

# Fackelmann INITIAL Soup Ladle User Manual

Model: 680146

## PRODUCT OVERVIEW

---

The Fackelmann INITIAL Soup Ladle is a kitchen utensil designed for serving soups, stews, and other liquid-based dishes. It features a durable stainless steel head and an ergonomic plastic handle for comfortable use.



Image: The Fackelmann INITIAL Soup Ladle, showcasing its silver stainless steel bowl and shaft, and the black ergonomic plastic handle with a hanging hole at the top.

## SETUP

---

Before first use, it is recommended to wash the soup ladle thoroughly with warm soapy water. Rinse completely and dry with a soft cloth. This removes any manufacturing residues and ensures the utensil is clean for food contact.

## OPERATING INSTRUCTIONS

---

To use the Fackelmann INITIAL Soup Ladle:

1. Hold the ladle by its ergonomic plastic handle.
2. Submerge the stainless steel bowl into the liquid food item you wish to serve.
3. Scoop the desired amount of liquid. The deep bowl is designed to hold a generous portion.
4. Carefully lift the ladle and pour the contents into a serving bowl or plate.

- The ladle's design allows for controlled pouring, minimizing spills.

The 33cm length provides ample reach for various pot and serving dish sizes.

## MAINTENANCE AND CARE

---

Proper care ensures the longevity and hygiene of your soup ladle:

- Cleaning:** The Fackelmann INITIAL Soup Ladle is dishwasher safe. For manual cleaning, wash with warm water and mild dish soap. Use a soft sponge or cloth to avoid scratching the stainless steel.
- Drying:** After washing, dry the ladle thoroughly to prevent water spots and maintain its luster.
- Storage:** Store the ladle in a dry place. The handle features a hanging hole for convenient storage on a utensil rack.
- Avoid Harsh Abrasives:** Do not use abrasive cleaners or scouring pads on the stainless steel or plastic handle, as this may damage the finish.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Water spots on stainless steel	Incomplete drying after washing.	Ensure the ladle is thoroughly dried immediately after washing. For existing spots, use a stainless steel cleaner or a mixture of vinegar and water, then dry completely.
Handle feels slippery	Residue from food or soap.	Wash the handle thoroughly with soap and water, ensuring all residue is removed. Dry completely before use.

## SPECIFICATIONS

---

**Model Number:** 680146

**Material:** Stainless Steel (head), PP Plastic (handle)

**Color:** Silver (head), Black (handle)

**Product Dimensions:** Approximately 12.99 inches (33 cm) L x 3.54 inches (9 cm) W x 1.97 inches (5 cm) H

**Item Weight:** Approximately 3.45 ounces (0.1 Kilograms)

**Number of Pieces:** 1

**Dishwasher Safe:** Yes

**Manufacturer:** Fackelmann

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage or product support, please contact Fackelmann customer service directly. Refer to the official Fackelmann website or product packaging for the most current contact details.

This product is designed with German engineering for years of reliable use.

