

## SGIN B0CF5PR3Z

# SGIN 10-inch HD IPS Display Tablet User Manual

Model: B0CF5PR3Z



## 1. PRODUCT OVERVIEW

The SGIN 10-inch HD IPS Display Tablet is designed for versatile use, featuring an Octa-Core 1.6GHz processor, 2GB RAM, and 64GB internal storage. It operates on Android 12, providing a user-friendly interface and access to a wide range of applications. The tablet includes dual cameras (2MP front, 5MP rear), Bluetooth 5.0, GPS, and Wi-Fi connectivity, powered by a 5000mAh battery.

# SGIN 10.1 Inch Tablet



Android 12



Quad core



Dual camera



5000 mAh



WI-FI



10.1"HD Dispaly



2+64GB



Type C

Image 1.1: Overview of the SGIN tablet's core specifications including RAM, ROM, processor, operating system, and battery capacity.

## Package Contents:

- SGIN 10-inch HD IPS Display Tablet
- USB-C Charging Cable
- Power Adapter
- User Manual

## 2. PHYSICAL FEATURES AND PORTS

Familiarize yourself with the physical layout of your SGIN tablet.



<b>① Power button</b>	<b>② Vol+ Vol-</b>	<b>③ 3.5mm headphone jack</b>
<b>④ TF card slot</b>	<b>⑤ type c</b>	<b>⑥ Rear camera</b>
<b>⑦ Front camera</b>	<b>⑧ Double Box Surround Speaker</b>	

Image 2.1: Detailed diagram illustrating the tablet's external components.

1. **Power Button:** Used to turn the tablet on/off or put it to sleep/wake it up.
2. **Volume Buttons (Vol+ / Vol-):** Adjusts the audio volume.
3. **3.5mm Headphone Jack:** Connects wired headphones or external audio devices.
4. **TF Card Slot:** Insert a microSD card for expandable storage.
5. **Type-C Port:** Used for charging the tablet and data transfer.

6. **Rear Camera:** Main camera for taking photos and videos.
7. **Front Camera:** For video calls and selfies.
8. **Double Box Surround Speakers:** Provides audio output.

## 3. SETUP

### 3.1 Initial Charging

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's Type-C port and the power adapter, then plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

### 3.2 Powering On/Off

- **To Power On:** Press and hold the Power Button until the SGIN logo appears.
- **To Power Off:** Press and hold the Power Button until the power options appear, then select 'Power off'.
- **To Sleep/Wake:** Briefly press the Power Button.

### 3.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process:

1. **Select Language:** Choose your preferred language.
2. **Connect to Wi-Fi:** Select your Wi-Fi network and enter the password. This is essential for downloading apps and updates.
3. **Google Account:** Sign in with your Google account or create a new one. This is required for Google Play Store access and syncing data.
4. **Date & Time:** Set your time zone and date.
5. **Security:** Set up a screen lock (PIN, pattern, or password).

### 3.4 Inserting a TF Card (MicroSD)

To expand storage, insert a TF (microSD) card into the TF card slot. Ensure the tablet is powered off before inserting or removing the card. Gently push the card until it clicks into place.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Navigation

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens, lists, or pages.
- **Pinch:** Zoom in or out on images and web pages.
- **Home Button:** Returns to the home screen.
- **Back Button:** Returns to the previous screen.
- **Recent Apps Button:** Displays recently used applications.

### 4.2 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.

4. Enter the password if prompted, then tap **Connect**.

### 4.3 Bluetooth Pairing

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure the device you want to pair is in pairing mode.
4. Select the device from the 'Available devices' list and follow on-screen prompts to complete pairing.

### 4.4 Using the Camera

Tap the Camera icon on your home screen or app drawer to open the camera application. You can switch between front and rear cameras, take photos, and record videos.

### 4.5 App Management

- **Install Apps:** Open the Google Play Store app, search for your desired app, and tap 'Install'.
- **Uninstall Apps:** Go to **Settings > Apps > See all apps**, select the app, and tap 'Uninstall'.

## Long Battery Life

Go for hours on a single charge\* and back to 100% with the fast-charging USB-C port.



Image 4.1: The Android 12 operating system provides access to a wide range of applications.

## 5. MAINTENANCE

### 5.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, which can damage the display or finish.

### 5.2 Battery Care

- Avoid extreme temperatures, as they can affect battery life.

- Do not leave the tablet charging for extended periods after it is fully charged.
- Use only the provided charger or a certified compatible charger.



Image 5.1: The tablet features a 5000mAh battery for extended use and supports fast charging via its USB-C port.

### 5.3 Software Updates

Regularly check for and install software updates to ensure optimal performance and security. Go to **Settings > System > System update**.

### 5.4 Storage Management

To maintain performance, periodically clear unnecessary files and uninstall unused apps. Go to **Settings > Storage** to view storage usage and manage files.

## 6. TROUBLESHOOTING

### 6.1 Tablet Not Turning On

- Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes.
- Press and hold the Power Button for 10-15 seconds to perform a forced restart.

### 6.2 Wi-Fi Connection Issues

- Check if Wi-Fi is enabled in Settings.
- Restart your Wi-Fi router.
- Forget the network in tablet settings and reconnect.

### 6.3 Apps Crashing or Freezing

- Close and reopen the app.

- Clear the app's cache and data in **Settings > Apps**.
- Ensure the app is updated to the latest version.

## 6.4 Slow Performance

- Close unused background apps.
- Clear cache and temporary files.
- Consider uninstalling large or unused applications.

## 6.5 Factory Reset (Last Resort)

 
If issues persist, a factory reset can resolve many software problems. **Warning: This will erase all data on your tablet. Back up important data before proceeding.** Go to **Settings > System > Reset options > Erase all data (factory reset)**.

## 7. SPECIFICATIONS

### 10.1 INCH HD SCREEN



10.1-inch  
Thin bezels

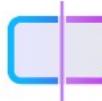

IPS  
Wide viewing angle



1280x800  
HD Display



Image 7.1: The tablet features a 10.1-inch HD IPS display with a resolution of 1280x800 pixels.

Feature	Specification
Display Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (HD IPS)
Processor	1.6 GHz Octa-Core (MediaTek)
RAM	2 GB
Storage (ROM)	64 GB

Feature	Specification
Operating System	Android 12
Rear Camera	5 MP
Front Camera	2 MP
Battery Capacity	5000 mAh
Average Battery Life	7 Hours
Connectivity	Wi-Fi, Bluetooth 5.0, GPS
Dimensions (LxWxH)	10.1 x 6 x 0.4 inches
Item Weight	1.54 pounds

## 8. WARRANTY AND SUPPORT

### 8.1 Product Warranty

This SGIN tablet comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

### 8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your SGIN tablet, please refer to the contact information provided with your purchase or visit the official SGIN support website. When contacting support, please have your product model (B0CF5PR3Z) and purchase details ready.