

[Manuals.plus](#) /

› [BERGNER](#) /

› Bergner MasterPro Air Fryer User Manual

BERGNER MasterPro BGMP-9232

Bergner MasterPro Air Fryer User Manual

MODEL: BGMP-9232

1. Important Safety Instructions

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not immerse the cord, plug, or the appliance housing in water or other liquid.
- Always ensure hands are dry before handling the plug or operating the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Ensure the basket is properly inserted before operating.

2. Product Overview

The Bergner MasterPro Air Fryer is designed for healthy cooking with its 360-degree air circulation technology. It features a digital touch control panel and a non-stick basket for easy use and cleaning.



Image: Front view of the Bergner MasterPro Air Fryer, showcasing its sleek silver and black design with the digital control panel.

Components:

- Main Unit (Housing)
- Removable Non-Stick Basket
- Crisper Plate (inside the basket)
- Digital Touch Control Panel
- Power Cord



Image: The air fryer's main unit alongside its removable non-stick basket and crisper plate, illustrating the separate components.

3. Setup

Unpacking:

1. Remove all packaging materials from the air fryer.
2. Check for any damage during transit. Do not use if damaged.
3. Keep packaging materials out of reach of children.

Initial Cleaning:

1. Before first use, wipe the exterior of the appliance with a damp cloth.
2. Wash the non-stick basket and crisper plate with warm, soapy water. Rinse thoroughly and dry completely.
3. Do not use abrasive cleaning agents or scouring pads.

Placement:

- Place the air fryer on a stable, heat-resistant, and level surface.
- Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation.
- Do not place the appliance near flammable materials or heat sources.

4. Operating Instructions

Control Panel:

The digital touch control panel allows for easy adjustment of temperature, time, and selection of preset menus.

- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Temperature Controls (TEMP +/-):** Adjusts cooking temperature.
- **Time Controls (TIME +/-):** Adjusts cooking time.

- **Menu Button (M):** Cycles through 12 preset cooking programs.

Basic Operation:

1. Plug the air fryer into a grounded electrical outlet.
2. Carefully pull out the non-stick basket from the main unit.
3. Place the crisper plate inside the basket.
4. Place your food onto the crisper plate in the basket. Do not overfill.
5. Slide the basket back into the air fryer until it clicks into place.
6. Press the Power button to turn on the display.
7. **Manual Setting:** Use the TEMP +/- buttons to set the desired temperature and TIME +/- buttons to set the cooking duration.
8. **Preset Menu:** Press the 'M' button repeatedly to select one of the 12 preset cooking programs. The display will show the default time and temperature for that program.
9. Press the Power button again to start cooking.
10. During cooking, you can pull out the basket to shake or turn food. The air fryer will pause automatically and resume when the basket is reinserted.
11. Once cooking is complete, the air fryer will beep. Carefully remove the basket and transfer food to a serving dish.

Cooking Functions:

- **Air Fry:** For crispy results with little to no oil.
- **Roast:** Ideal for meats and vegetables.
- **Reheat:** Warms up leftovers efficiently.
- **Dehydrate:** Dries fruits, vegetables, or jerky.
- **KeepWarm:** Maintains food temperature after cooking.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

After Each Use:

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the basket and crisper plate. Wash them with warm, soapy water using a non-abrasive sponge. For stubborn residue, soak in warm water for 10-15 minutes.
3. Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
4. Clean the heating element inside the air fryer with a soft brush if necessary, ensuring the appliance is unplugged and cool.
5. Ensure all parts are thoroughly dry before reassembling or storing.

Storage:

Store the air fryer in a cool, dry place. Ensure the power cord is neatly wrapped and secured.

6. Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; Power outlet issue; Appliance malfunction.	Ensure plug is securely in outlet; Test outlet with another appliance; Contact customer support.
Food is not cooked evenly.	Basket overloaded; Food not shaken/turned.	Cook in smaller batches; Shake or turn food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; High fat content food.	Clean basket and crisper plate thoroughly; For high-fat foods, drain excess oil.
Appliance smells during first use.	Manufacturing residue burning off.	This is normal for first use. Ensure good ventilation. Smell should dissipate.

7. Specifications

Feature	Detail
Model Name	MasterPro
Item Model Number	BGMP-9232
Brand	BERGNER
Capacity	7.8 litres
Output Wattage	1700 Watts
Product Dimensions	33D x 38W x 39H Centimeters
Item Weight	5 kg (5000 Grams)
Material	Stainless Steel, Plastic, Aluminium, Metal
Colour	Blank+Stainless steel
Control Method	Touch
Air Frying Technology	360-degree air frying technology
Nonstick Coating	Yes
Country of Origin	China

8. Warranty and Support

Warranty Information:

This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

Customer Support:

For any product inquiries, technical assistance, or warranty claims, please contact Bergner customer support.

- **Manufacturer:** Bergner Impex India Pvt Ltd

- **Office Address:** Office No. 1107, B Wing, Mittal Commercial, Marol, Off. Andheri Kurla Road, Next to Mittal Industrial Estate, Andheri East, Mumbai – 400059. Maharashtra, India.
- For the most current contact information, please visit the official Bergner website or refer to your product packaging.