

BERGNER BGMP-9235

Bergner Masterpro Air Fryer User Manual

Model: BGMP-9235

INTRODUCTION

Welcome to the world of healthier cooking with your new Bergner Masterpro Air Fryer. This appliance is designed to provide you with crispy, delicious fried foods using rapid air circulation technology, significantly reducing the need for oil. With its powerful 1300-watt motor and 4.2-liter capacity, it's perfect for preparing meals for the whole family. The intuitive LED display, touch controls, and 8 preset cooking menus make operation simple and convenient. Please read this manual thoroughly before first use to ensure safe and optimal performance of your air fryer.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Bergner Masterpro Air Fryer for optimal use.



Figure 1: Main components of the Bergner Masterpro Air Fryer, including the primary unit, the removable non-stick coated basket, and the crisper plate.



Figure 2: Front view of the Bergner Masterpro Air Fryer, highlighting the sleek black design, the digital control panel on top, and the integrated handle for the basket.

1. **Main Unit:** Houses the heating element and fan for rapid air circulation.
2. **Control Panel:** Digital LED display with touch controls for temperature, timer, and preset functions.
3. **Removable Basket:** 4.2-liter capacity, non-stick coated for easy food release and cleaning. Features a transparent viewing window.
4. **Crisper Plate:** Sits inside the basket, allowing air to circulate around food for even cooking and crisping.
5. **Handle:** Ergonomically designed for safe and easy removal of the basket.
6. **Air Outlet Vent:** Located at the rear of the unit for proper ventilation during operation.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	MasterPro

Feature	Specification
Model Number	BGMP-9235
Capacity	4.2 Liters
Wattage	1300 Watts
Voltage	2.2E+2 Volts (AC)
Control Method	Touch Control
Special Feature	Temperature Control, Visible Window Design
Material	Plastic (Outer), Non-stick Coated (Inner Basket)
Product Dimensions (D x W x H)	30D x 23.7W x 29.7H Centimeters
Item Weight	3.6 kg
Country of Origin	China

BEFORE FIRST USE (SETUP)

Before using your air fryer for the first time, please follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior of the air fryer with a damp cloth.
3. Clean the removable basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely.
4. Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
5. Plug the power cord into a grounded wall outlet.
6. It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure good ventilation during this process.
7. Allow the appliance to cool down completely, then clean the basket and crisper plate again.

OPERATING INSTRUCTIONS

Your Bergner Masterpro Air Fryer is designed for easy and efficient cooking.

Control Panel Overview

The air fryer features an intuitive LED touch control panel on its top surface.



Figure 3: The digital control panel of the air fryer, displaying temperature, time, and various cooking icons.

- **Power Button:** Turns the unit on/off and starts/pauses cooking.
- **Temperature Control (+/-):** Adjusts cooking temperature.
- **Timer Control (+/-):** Adjusts cooking time.
- **Preset Menu Icons:** Select from 8 pre-programmed cooking functions.
- **LED Display:** Shows current temperature, time, and selected preset.

General Operation Steps

1. Place the crisper plate inside the removable basket.
2. Place your ingredients into the basket. Do not overfill.
3. Slide the basket back into the air fryer until it clicks into place.
4. Press the Power button to turn on the display.
5. **Using Preset Cooking Menus:**
 - Touch the desired preset icon (e.g., French Fries, Chicken, Fish, Vegetables). The air fryer will

automatically set the optimal temperature and time for that food type.

- You can adjust the temperature and time manually even after selecting a preset if needed.

6. Manual Temperature and Timer Setting:

- After turning on the unit, use the Temperature (+/-) buttons to set your desired cooking temperature.
 - Use the Timer (+/-) buttons to set your desired cooking time.
7. Press the Power button again to start the cooking process. The fan and heating element will activate.
 8. During cooking, you can pull out the basket to shake or flip ingredients. The air fryer will automatically pause and resume when the basket is reinserted.
 9. The viewing window allows you to monitor cooking progress without opening the unit.
 10. Once the timer reaches zero, the air fryer will beep and automatically shut off.
 11. Carefully pull out the basket and empty the cooked food onto a plate. Use tongs for larger items.
 12. Unplug the appliance after use.



Figure 4: The air fryer in a kitchen setting, demonstrating its use for preparing a variety of dishes.



Figure 5: The air fryer basket pulled out, revealing perfectly cooked french fries, illustrating the appliance's cooking capability.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

- **Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scourers.
- **Basket and Crisper Plate:** These parts are non-stick coated and can be cleaned with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak them in warm soapy water for about 10-15 minutes before cleaning. They are generally dishwasher safe, but hand washing is recommended to preserve the non-stick coating.
- **Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove any food residue from the heating element.
- **Do NOT immerse the main unit in water or any other liquid.**
- Ensure all parts are completely dry before storing or next use.

TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in or power outlet is not working.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overloaded; food not shaken or flipped.	Do not overload the basket. Shake or flip ingredients halfway through cooking for even results.
Food is not crispy.	Not enough oil (if applicable); temperature too low; cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time. Ensure crisper plate is in place.
White smoke coming from the appliance.	Fat residue from previous use; high-fat ingredients.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Appliance smells during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. The smell will dissipate after a few uses.

WARRANTY AND CUSTOMER SUPPORT

Your Bergner Masterpro Air Fryer comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official BERGNER website. Extended warranty options may be available for purchase. Please check with your retailer or the manufacturer for details on 1-year or 2-year extended warranty plans.

For technical assistance, troubleshooting beyond this manual, or to inquire about parts and service, please contact Bergner customer support.

Manufacturer: Bergner Impex (India) Pvt. Ltd.

Website: [Visit the BERGNER Store on Amazon.in](#) (for product information and brand contact)

Please have your model number (BGMP-9235) and purchase date ready when contacting support.