

Ceybo 06-519W37-TY01X

Ceybo 06-519W37-TY01X Remote Control User Manual

For JVC HD LED Smart TVs

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Ceybo 06-519W37-TY01X Remote Control. This remote is designed for seamless compatibility with various JVC HD LED Smart TV models, offering intuitive control over your television's functions and quick access to popular streaming services.



Image 1: Front and back view of the Ceybo 06-519W37-TY01X Remote Control, showcasing its ergonomic design and battery compartment.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it upwards until it clicks into place.



Image 2: The back of the remote control with the battery compartment open, illustrating the correct placement for two AAA batteries.

2.2 Initial Use

The Ceybo 06-519W37-TY01X Remote Control is designed for immediate use with compatible JVC Smart TVs. **No programming or pairing is required.** Once batteries are installed, the remote is ready to operate your television.

LOW BATTERY CONSUME!

2 AAA batteries required
**(not included)*



Image 3: The remote control, emphasizing that no programming is needed for operation.

3. OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your JVC Smart TV.

3.1 Basic Functions

- **Power Button** (●): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down (VOL +/-)**: Adjusts the sound level.
- **Channel Up/Down (CH +/-)**: Changes the TV channel.
- **Mute Button** (⏸): Mutes or unmutes the TV sound.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates through menus and confirms selections.
- **Source Button**: Selects input sources (HDMI, AV, etc.).
- **Exit Button**: Exits the current menu or application.
- **Info Button**: Displays information about the current program or input.

3.2 Shortcut Buttons

The remote includes dedicated buttons for quick access to popular streaming applications:

- **Netflix Button:** Launches the Netflix application directly.
- **YouTube Button:** Launches the YouTube application directly.



Image 4: A detailed view of the remote control, showing the dedicated Netflix and YouTube shortcut buttons for quick access.

4. COMPATIBILITY

This Ceybo 06-519W37-TY01X Remote Control is compatible with the following JVC HD LED Smart TV models:

- S139H
- S140FS
- SI49FSC
- SI50US
- SI55FS
- SI65FS
- SI32HS

**COMPATIBLE WITH
THESE MODELS
AND MORE!**



S139H



SI50US

Check the compatibility list



Image 5: The remote control displayed with examples of compatible JVC TV models, such as S139H and SI50US.

5. MAINTENANCE

5.1 Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.

- Replace old batteries with new ones.
- Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- Make sure the remote is pointed directly at the TV.
- **Specific buttons not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be causing interference.
 - If only certain buttons are not working after checking batteries and line of sight, the remote may be faulty and require replacement.


7. SPECIFICATIONS

Feature	Detail
Model Number	06-519W37-TY01X
Brand	Ceybo
Compatible Devices	JVC HD LED Smart Televisions
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic Design, Quick Access Buttons (Netflix, YouTube)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

Related Documents - 06-519W37-TY01X

	<p>Perkin-Elmer Memory Access Controller Test Program 06-160R07 - Technical Specification</p> <p>Perkin-Elmer Memory Access Controller Test Program (06-160R07) technical specification. This guide details the purpose, hardware requirements, loading, operation, and error handling for diagnosing Perkin-Elmer's Memory Access Controller in Series 32 computer systems. Includes patch information and related test programs.</p>
---	--



Kobalt 80V Sitting Worklight User Manual and Specifications

Comprehensive user manual for the Kobalt 80V Sitting Worklight (Model KWL 0080-06), including safety instructions, operating procedures, product specifications, troubleshooting, and warranty information.



Kobalt 24V Max Power Inverter KIV 1024-06 User Manual

User manual for the Kobalt 24V Max Power Inverter (Model KIV 1024-06). Includes product specifications, package contents, safety instructions, operating procedures, care and maintenance, troubleshooting, and warranty information.



Playmobil 9276 Animal House Building Instructions

Step-by-step assembly guide for the Playmobil 9276 Animal House playset, including all parts and instructions for building.



YITAMOTOR Towing Mirrors Installation Guide for Chevy Silverado & GMC Sierra (2003-2006)

Detailed installation instructions for YITAMOTOR towing mirrors, covering door panel removal, mirror mounting, wiring, and reassembly for 2003-2006 Chevrolet Silverado, Tahoe, Suburban, Avalanche, and GMC Sierra, Yukon models.



[Kobalt 80V MAX Lithium-Ion Battery User Manual and Safety Guide](#)

Comprehensive guide for Kobalt 80V MAX Lithium-Ion Batteries (Models KB 280-06, KB 2580-06, KB 380-06), covering product specifications, operating instructions, safety precautions, care, maintenance, and warranty information.