

Anderic RR1001 2PK

Anderic RR1001 Simple TV Universal Remote

USER INSTRUCTION MANUAL

1. Product Overview

The Anderic Hospitality RR1001 is a universal remote control designed for simplified operation of televisions, particularly in hospitality environments. It features a streamlined button layout, focusing on essential TV functions while omitting complex menu options. This remote is pre-programmed for common TV brands like LG and Vizio, and offers broad compatibility with various HDTVs and older television models.





Figure 1: Front view of the Anderic RR1001 remote, showing its simplified button layout including Power, Volume, Channel, Mute, Input, CC, Sleep, and number keys.

2. Setup

2.1 Battery Installation

The Anderic RR1001 remote requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align with the polarity indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 2: Back view of the Anderic RR1001 remote, illustrating the battery compartment cover.

2.2 Programming the Remote

The RR1001 remote is designed for effortless 2-step programming. It comes pre-programmed for LG and Vizio TVs, but can be configured for other brands. Refer to the specific programming codes and detailed instructions provided in the original packaging or on the Anderic support website. A general programming method involves:

1. Turn on the television you wish to control.
2. Press and hold the **SET** button on the remote until the indicator light illuminates.
3. Enter the 3-digit programming code for your TV brand. The indicator light should turn off, confirming the code has been accepted.
4. Test the remote's functions (e.g., Power, Volume) to ensure proper operation. If not, repeat the process with a different code for your TV brand.

3. Operating Instructions

The Anderic RR1001 remote provides essential functions for controlling your television. Below is a description of the primary buttons:

- **POWER ()**: Turns the television on or off.
- **SET**: Used for programming the remote to your television.
- **INPUT**: Cycles through available video input sources (e.g., HDMI 1, AV, Component).
- **CC**: Activates or deactivates Closed Captioning.
- **SLEEP**: Activates the TV's sleep timer function.
- **VOL +/-**: Increases or decreases the television's volume level.
- **MUTE**: Silences or restores the television's audio.
- **PREV.CH**: Returns to the previously viewed channel.
- **CH +/-**: Changes the television channel up or down.
- **Number Buttons (0-9)**: Directly enters channel numbers.
- **ENTER**: Confirms channel selection or menu options.
- **+100**: Used for entering three-digit channel numbers (e.g., for channel 101, press 1, then +100, then 1).

4. Maintenance

To ensure the longevity and proper functioning of your Anderic RR1001 remote, follow these maintenance guidelines:

- **Cleaning**: Wipe the remote with a soft, dry cloth. Do not use liquid cleaners, aerosols, or harsh chemicals, as they may damage the remote's surface or internal components.
- **Battery Replacement**: Replace batteries when the remote's performance degrades or the indicator light does not illuminate. Always replace both batteries simultaneously with new AAA batteries.
- **Storage**: Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity when not in use for extended periods. Remove batteries if storing for several months to prevent leakage.
- **Handling**: Avoid dropping the remote or exposing it to excessive force, as this can damage internal circuitry.

5. Troubleshooting

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.

- Ensure there are no obstructions between the remote and the TV's infrared receiver.
- Confirm you are within the effective operating range of the TV.
- **Remote does not control the TV after programming:**
 - Re-attempt the programming process (Section 2.2). Ensure you are using the correct 3-digit code for your TV brand. Try alternative codes if the first one does not work.
 - Verify that the TV is powered on during the programming attempt.
- **Only some functions work (e.g., Power, Volume, but not Channel):**
 - This remote is designed for simplified TV control. It may not support all advanced features or menu navigation of your specific TV model. Its primary purpose is basic TV operation.
 - Re-program the remote to ensure the best possible code match for your TV.
- **Indicator light does not illuminate during programming:**
 - Ensure the batteries are fresh and correctly installed.
 - Press and hold the SET button firmly for the required duration.

6. Specifications

Feature	Detail
Model Number	RR1001 2PK
Brand	Anderic
Product Dimensions	6 x 1 x 3 inches
Item Weight	2.4 ounces
Batteries Required	2 AAA batteries
Special Feature	TV only, Universal
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Television
Manufacturer	Dan's Electronics Etc., Inc.

7. Warranty and Support

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Anderic website. For additional support, programming codes, or frequently asked questions, please visit the Anderic Store online:

[Visit the Anderic Store](#)

