

[Manuals.plus](#) /

› [Cricut](#) /

› Cricut Joy Xtra Cutting Machine Instruction Manual

Cricut Joy Xtra

Cricut Joy Xtra Cutting Machine Instruction Manual

Model: Joy Xtra (2010313)

INTRODUCTION

The Cricut Joy Xtra is a compact smart cutting machine designed for creating a variety of personalized projects. This machine is capable of cutting, writing, drawing, and foiling on over 50 different materials. It integrates with the free Design Space application, allowing users to create custom designs or utilize existing libraries.

Key capabilities include:

- Cutting over 50 materials, such as vinyl, iron-on, and cardstock.
- Compatibility with home inkjet printers for print-then-cut full-color designs.
- Precision cutting for intricate designs.
- Functions for writing, drawing, and foiling.
- Access to the Design Space app for design creation and project management.

WHAT'S IN THE BOX

Upon unboxing your Cricut Joy Xtra, you should find the following components:

- Cricut Joy Xtra Machine

Additional accessories, such as cutting mats, blades, pens, and materials, may be included depending on the specific bundle purchased.



Image: The Cricut Joy Xtra machine, white with its lid open, showing the cutting mechanism.

SETUP

Follow these steps to set up your Cricut Joy Xtra machine:

1. **Unpack the Machine:** Carefully remove the Cricut Joy Xtra from its packaging. Retain all packaging materials for future storage or transport.
2. **Power Connection:** Connect the power adapter to the machine and plug it into a wall outlet. The machine does not have a dedicated power button; it powers on when plugged in.
3. **Install Design Space App:** Download and install the free Cricut Design Space application on your computer or mobile device. This app is essential for operating the machine.
4. **Pair via Bluetooth:** Open the Design Space app and follow the on-screen instructions to pair your Cricut Joy Xtra with your device via Bluetooth. Ensure Bluetooth is enabled on your device.
5. **Initial Setup:** The app will guide you through any necessary firmware updates and an initial test cut to ensure the

machine is functioning correctly.



Image: The Cricut Design Space application interface displayed across a laptop, tablet, and smartphone, illustrating multi-device compatibility.

OPERATING INSTRUCTIONS

Operating the Cricut Joy Xtra involves designing your project, preparing materials, and executing the cut or draw process through the Design Space app.

1. **Design Your Project:** Use the Cricut Design Space app to create a new design or select from the extensive library of pre-made projects. You can upload your own images and fonts.
2. **Prepare Your Material:** Select the appropriate material for your project (e.g., vinyl, cardstock, iron-on). If using a cutting mat, place the material securely on the mat. For Smart Materials, no mat is required.
3. **Load Material:** Open the machine's lid. Insert the cutting mat with material (or Smart Material directly) into the machine. The machine will automatically detect and align the material.
4. **Select Settings:** In the Design Space app, choose the material type you are using. The app will recommend the appropriate blade pressure and multi-cut settings.
5. **Start Project:** Once settings are confirmed, initiate the cutting, drawing, or foiling process from the Design Space app. The machine will begin processing your design.
6. **Unload Material:** After the process is complete, the machine will prompt you to unload the material. Carefully remove the mat or material from the machine.
7. **Assemble/Apply:** Proceed to weed excess material, transfer your design, or assemble your project as needed.



2. Select your material, then the machine precision-cuts your project

Image: The Cricut Joy Xtra machine actively cutting an orange material, demonstrating the precision cutting process.



Image: The Cricut Joy Xtra machine processing a sheet of printable material with colorful designs, illustrating the print-then-cut feature.



Image: A hand carefully peeling a delicate cut design from a blue cutting mat, showcasing the final step of material removal.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Cricut Joy Xtra.

- **Clean the Machine:** Regularly wipe the exterior of the machine with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Clean the Blade Housing:** Periodically remove the blade housing and gently clean any debris or material fragments. Replace the blade when it becomes dull to ensure clean cuts.
- **Care for Cutting Mats:** Keep cutting mats clean and covered when not in use to maintain their adhesive quality. Remove small material scraps after each use.
- **Store Properly:** When not in use, store the machine in a clean, dry environment, ideally with the lid closed to prevent dust accumulation.

TROUBLESHOOTING

If you encounter issues with your Cricut Joy Xtra, consider the following troubleshooting steps:

- **Machine Not Connecting:** Ensure Bluetooth is enabled on your device and the machine is plugged in. Try restarting both the machine (by unplugging and replugging) and your device.
- **Poor Cut Quality:** Check if the correct material setting is selected in Design Space. Ensure the blade is clean and sharp; replace if necessary. Verify the material is properly adhered to the mat or loaded correctly.
- **Material Not Loading:** Make sure the material is aligned correctly and inserted straight into the machine. Ensure there are no obstructions in the material path.
- **Design Space App Issues:** Ensure your Design Space app is updated to the latest version. Try clearing the app's cache or reinstalling it if problems persist.
- **Firmware Update Failure:** Ensure a stable internet connection during firmware updates. If an update fails, try restarting the machine and your device, then attempt the update again.

For persistent issues, refer to the official Cricut support website or contact customer service.

SPECIFICATIONS

Feature	Detail
Model Number	2010313
Brand	Cricut
Product Dimensions	12.5"D x 15.22"W x 5.5"H (31.75 cm D x 38.66 cm W x 13.97 cm H)
Weight	3 Pounds (1.36 kg)
Material	Plastic
Color	White
Active Surface Area	218.75 cm ²
Connectivity	Bluetooth
Compatible App	Cricut Design Space

WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the official Cricut website or the documentation included with your purchase. Cricut provides customer support for technical assistance, troubleshooting, and warranty claims. You can typically find support resources, FAQs, and contact information on the official Cricut website:cricut.com/help

© 2025 Cricut. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question