



Manuals.plus /

- › Coleman /
- › Coleman Skylodge Screened Canopy Tent & Camping Chair User Manual

Coleman 15 X 13ft + Camping Chair Grey

Coleman Skylodge Screened Canopy Tent & Camping Chair User Manual

Model: 15 X 13ft + Camping Chair Grey
Brand: Coleman

INTRODUCTION

Thank you for choosing the Coleman Skylodge Screened Canopy Tent and Camping Chair. This manual provides essential information for the safe and effective use, setup, maintenance, and troubleshooting of your new outdoor equipment. Designed for convenience and comfort, this combination offers bug-free lounging and portable seating for various outdoor activities.

SAFETY INFORMATION

This product includes a quad camping chair with a maximum weight capacity of 250 lbs. Ensure the chair is set up on a hard, stable surface and is not overloaded. The canopy tent is designed to withstand strong winds, but always secure it properly using the included ground stakes and guy lines. Always follow the assembly instructions and regularly inspect the product for any signs of wear or damage. Misuse or failure to follow safety warnings can result in injury or product failure.

- Always set up the canopy tent and chair on level ground.
- Do not use the canopy tent in extreme weather conditions (e.g., severe thunderstorms, heavy snow).
- Keep all flame and heat sources away from the tent fabric.
- Ensure all tent poles are fully extended and locked into place during setup.
- Do not exceed the chair's weight capacity of 250 lbs.
- Supervise children around the tent and chair.
- Store the products dry and clean to prevent mold and mildew.

PACKAGE CONTENTS

- Coleman Skylodge Screened Canopy Tent (15 x 13 ft)
- Folding Quad Camping Chair (Grey)
- Canopy Tent Carry Bag
- Camping Chair Carry Bag

- Ground Stakes
- Guy Lines



Image: The Coleman Skylodge Screened Canopy Tent and the Folding Camping Chair, showing both main components of the product package.

SETUP INSTRUCTIONS

Canopy Tent Setup

1. **Unpack:** Remove the canopy tent from its carry bag and lay it flat on a clear, level surface.
2. **Extend Legs:** Grasp one leg of the canopy frame and pull it outwards until the frame begins to expand. Repeat for all legs.
3. **Lock Frame:** Continue to pull the legs outwards until the frame is fully extended and the corner hubs lock into place. You may hear a click.
4. **Attach Canopy:** If the canopy fabric is not pre-attached, drape it over the frame, aligning the corners and securing it with the attached fasteners (velcro straps or clips).
5. **Adjust Height:** Press the release buttons on each leg and extend the telescoping legs to your desired height, ensuring they lock securely.
6. **Secure Tent:** Use the provided ground stakes to secure the tent feet to the ground. Attach guy lines to the designated loops on the canopy and stake them out at an angle for added stability, especially in windy conditions.



Image: The Coleman Skylodge Screened Canopy Tent fully set up, showcasing its structure and screened walls.



Image: Two people seated comfortably inside the Coleman Skylodge Screened Canopy Tent, demonstrating its spacious interior and bug protection.

Camping Chair Setup

1. **Unfold:** Remove the chair from its carry bag. Grasp the top of the chair frame and pull the arms outwards to unfold the chair.
2. **Secure:** Ensure all four legs are fully extended and the chair is stable on the ground before sitting.



Image: The Coleman Folding Camping Chair in its fully unfolded state, ready for use.

OPERATING INSTRUCTIONS

Using the Canopy Tent

- The screened walls provide protection from insects while allowing airflow.
- The UVGuard fabric offers UPF 50+ sun protection.

- Use the zippered door for easy entry and exit.
- For optimal stability, always use stakes and guy lines.

Using the Camping Chair

- Sit comfortably in the chair, ensuring even weight distribution.
- Utilize the integrated cup holder for beverages.
- The cooling mesh back enhances comfort during warm weather.



Image: A close-up view of the integrated cup holder on the armrest of the Coleman Camping Chair.

- **Cleaning:** Wipe clean with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Ensure both the tent and chair are completely dry before packing away to prevent mold and mildew.
- **Storage:** Store in their respective carry bags in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the fabric for tears, the poles for bends, and the chair frame for any damage. Repair or replace damaged components as needed.



Image: Two individuals collaborating to pack the Coleman Skylodge Screened Canopy Tent into its storage bag, demonstrating the ease of disassembly and storage.

Problem	Possible Cause	Solution
Canopy tent unstable/wobbly	Not fully extended, legs not locked, insufficient staking, windy conditions.	Ensure all legs are fully extended and locked. Use all ground stakes and guy lines. Relocate to a less windy area or add additional weights if possible.
Chair feels unstable	Not fully unfolded, uneven ground.	Ensure chair is fully unfolded and all leg joints are secure. Move to a flat, stable surface.
Difficulty packing tent	Not folded correctly, air trapped inside.	Follow folding instructions carefully. Press out air as you roll or fold the tent.

SPECIFICATIONS

Feature	Detail
Brand	Coleman
Model Name	Skylodge Screened Canopy Tent & Quad Camping Chair
Canopy Dimensions	15 x 13 ft
Canopy Fabric	UVGuard (UPF 50+)
Chair Weight Capacity	Up to 250 lbs
Chair Seat Width	21.3 inches
Chair Features	Cooling mesh back, adjustable armrests, integrated cup holder
Frame Material	Heavy-duty steel
Included Components	Canopy tent, camping chair, carry bags, ground stakes, guy lines
Recommended Use	Camping, picnics, beach, park, outdoor lounging

WARRANTY AND SUPPORT

Coleman products are manufactured to high-quality standards. For information regarding warranty coverage, product support, or to purchase replacement parts, please visit the official Coleman website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Official Coleman Website: www.coleman.com

