

Manuals.plus /

› Kelvinator /

› Kelvinator 7.0 Kg Top Load Semi-Automatic Washing Machine KWS-C700BK User Manual

Kelvinator KWS-C700BK

Kelvinator 7.0 Kg Top Load Semi-Automatic Washing Machine

Model: KWS-C700BK - User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury.

- Ensure the washing machine is connected to a properly grounded electrical outlet.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the machine before cleaning or performing any maintenance.
- Do not immerse the electrical parts in water.
- Ensure the water inlet and drain hoses are securely connected to prevent leaks.

2. PRODUCT OVERVIEW

The Kelvinator KWS-C700BK is a 7.0 Kg Top Load Semi-Automatic Washing Machine designed for efficient laundry care. It features separate wash and spin tubs, allowing for flexible washing cycles.

Kelvinator



Image 2.1: Front view of the Kelvinator KWS-C700BK washing machine.

Key Components:

- **Wash Tub:** For washing and rinsing clothes.
- **Spin Tub:** For drying clothes by spinning.
- **Control Panel:** Includes Wash Timer, Wash Selector, and Spin Timer knobs.
- **Water Inlet:** Connection point for the water supply hose.
- **Drain Hose:** For discharging water.
- **Lint Filter:** Collects lint during the wash cycle.

3. SETUP AND INSTALLATION

3.1 Unpacking

1. Carefully remove the washing machine from its packaging.
2. Remove all packing materials, including the base packaging.
3. Inspect the machine for any damage incurred during transit. Contact your dealer immediately if damage is found.

3.2 Placement

Place the washing machine on a firm, level surface to minimize vibration and noise during operation. Ensure there is adequate space around the machine for ventilation and access.



Image 3.1: Dimensions of the Kelvinator KWS-C700BK washing machine (Width: 750 mm, Depth: 450 mm, Height: 935 mm).

- Avoid direct sunlight or placing near heat sources.
- Ensure the ambient temperature is above 0°C.
- Maintain a minimum clearance of 10 cm from walls.

3.3 Water Connection

1. Connect the water inlet hose to a cold water tap.
2. Ensure the connection is tight to prevent leaks.
3. Place the other end of the hose into the water inlet opening on the washing machine.

3.4 Drainage

Position the drain hose to ensure proper water discharge. The drain hose should be placed at a height that allows for gravity drainage, typically into a sink or a dedicated drain pipe.

- Ensure the drain hose is not kinked or blocked.
- The end of the drain hose should be lower than the bottom of the machine for effective drainage.

3.5 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of the washing machine.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview



Image 4.1: Close-up view of the control panel with knobs for Wash Timer, Wash Selector, and Spin Timer.

- **Wash Timer:** Sets the duration of the wash cycle.
- **Wash Selector:** Choose between different wash modes (e.g., Gentle, Normal, Strong).
- **Spin Timer:** Sets the duration of the spin cycle.

4.2 Washing Procedure

1. **Load Laundry:** Open the wash tub lid and place clothes loosely inside. Do not overload the machine beyond its 7.0 Kg capacity.



Image 4.2: View of the open wash tub, ready for loading laundry.

2. **Add Detergent:** Pour the recommended amount of detergent into the wash tub.
3. **Fill with Water:** Turn on the water tap to fill the wash tub to the desired level.
4. **Select Wash Mode:** Turn the **Wash Selector** knob to the appropriate setting (e.g., Gentle for delicate items, Normal for everyday clothes, Strong for heavily soiled items).
5. **Set Wash Timer:** Turn the **Wash Timer** knob to the desired wash duration (e.g., 15-35 minutes). The machine will start washing.
6. **Drain Water:** Once the wash cycle is complete, set the Wash Selector to 'Drain' to empty the water from the wash tub.
7. **Rinse (Optional):** For rinsing, refill the wash tub with clean water, set the Wash Selector to 'Wash', and set the Wash Timer for a short duration (e.g., 5-10 minutes). Drain the water after rinsing.

4.3 Spin Drying Procedure

1. **Transfer Clothes:** Carefully transfer the washed and rinsed clothes from the wash tub to the spin tub. Distribute them evenly to prevent imbalance.
2. **Close Lid:** Ensure the spin tub lid is securely closed.
3. **Set Spin Timer:** Turn the **Spin Timer** knob to the desired spin duration (e.g., 1-5 minutes). The machine will begin spinning.

4. **Remove Clothes:** Once the spin cycle is complete and the tub has stopped, open the lid and remove the spun clothes.

5. MAINTENANCE AND CARE

5.1 Cleaning the Exterior

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface.

5.2 Cleaning the Lint Filter

The lint filter should be cleaned regularly (after every 2-3 washes) to maintain washing efficiency.

1. Locate the lint filter inside the wash tub.
2. Remove the filter by pulling it upwards or unlatching it.
3. Clean accumulated lint and debris under running water.
4. Reinsert the clean lint filter securely into its position.

5.3 Care After Each Wash

- Turn off the water tap.
- Unplug the power cord from the outlet.
- Wipe the inside of the tubs dry to prevent mildew and odors.
- Leave the lids slightly ajar to allow for air circulation.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	No power supply; Lid not closed properly; Timer not set.	Check power plug and outlet; Ensure lids are fully closed; Set the Wash/Spin Timer.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to 'Drain'.	Straighten drain hose, clear blockages; Set Wash Selector to 'Drain'.
Excessive vibration/noise	Machine not level; Uneven load in spin tub.	Adjust machine to be level; Redistribute clothes evenly in the spin tub.
Water leakage	Loose inlet/drain hose connections; Damaged hose.	Tighten hose connections; Replace damaged hoses.

7. SPECIFICATIONS

Feature	Specification
Brand	Kelvinator
Model	KWS-C700BK
Capacity	7.0 Kilograms
Washing Machine Type	Semi-Automatic, Top Load
Energy Efficiency	5 Star
Max Spin Speed	1320 RPM
Power Consumption	350 Watt
Quick Wash Time	35 Minutes
Control Console	Knob
Material	ABS
Color	Black
Item Weight	23 kg
Product Dimensions (LxWxH)	59 x 59.8 x 84.8 Centimeters
Included Components	Washing Machine

8. WARRANTY AND SUPPORT

This Kelvinator washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card provided with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical assistance, service requests, or any questions regarding your appliance, please contact Kelvinator customer support. Contact information can typically be found on the warranty card or the official Kelvinator website.

- Keep your purchase receipt as proof of purchase for warranty claims.
- Do not attempt to repair the appliance yourself, as this may void the warranty.