

Kelvinator KWS-A800CR

Kelvinator KWS-A800CR 8 kg Semi-Automatic Washing Machine User Manual

1. INTRODUCTION

Thank you for choosing the Kelvinator KWS-A800CR 8 kg Semi-Automatic Washing Machine. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before using the washing machine and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the washing machine is connected to a properly grounded power outlet. Do not use extension cords.
- Do not operate the machine if the power cord or plug is damaged. Contact authorized service personnel for repairs.
- Keep children and pets away from the washing machine during operation.
- Do not wash items that are soiled with flammable substances (e.g., gasoline, kerosene) as this may cause fire or explosion.
- Always unplug the machine and turn off the water supply before cleaning, maintenance, or if it will be left unused for an extended period.
- Do not immerse the electrical parts of the machine in water.
- Ensure the machine is placed on a firm, level surface to prevent excessive vibration and noise.

3. PRODUCT OVERVIEW

3.1 Components

Your Kelvinator KWS-A800CR washing machine consists of the following main components:

- **Wash Tub:** For washing clothes.

- **Spin Tub:** For spinning clothes to remove water.
- **Pulsator:** Located at the bottom of the wash tub, creates water movement.
- **Control Panel:** Houses the control knobs for various functions.
- **Drain Hose:** For discharging water.
- **Water Inlet:** For connecting the water supply hose.
- **Magic Filter:** Collects lint and debris during washing.
- **Collar Scrubber:** Integrated feature for pre-treating collars and cuffs.
- **Caster Wheels:** For easy movement of the machine.

3.2 Control Panel

The control panel features easy-to-use rotary knobs (dials) to manage the washing and spinning cycles.



Image: Top view showing the control panel with wash and spin tubs. The control knobs are clearly visible on the top surface.

- **Wash Timer Knob:** Sets the duration of the wash cycle.
- **Wash Program Selector Knob:** Selects the desired wash program (e.g., Gentle, Normal, Heavy).
- **Drain Selector Knob:** Controls water drainage from the wash tub.

- **Spin Timer Knob:** Sets the duration of the spin cycle.

4. SETUP AND INSTALLATION

4.1 Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Keep packaging materials away from children.

4.2 Placement

- Place the washing machine on a firm, flat, and level surface to minimize vibration and noise during operation.
- Ensure there is adequate ventilation around the machine. Do not place it in direct sunlight or near heat sources.
- The machine is equipped with caster wheels for easy repositioning.



Image: Side view of the washing machine illustrating its dimensions: 61 cm (depth), 61 cm (width), and 85 cm (height).

4.3 Water Supply Connection

Connect the water inlet hose to a cold water tap. Ensure the connection is secure to prevent leaks.

4.4 Drain Hose Setup

Position the drain hose to allow for proper water discharge. Ensure it is not kinked or blocked. The drain hose should be placed at a height that allows gravity to drain the water effectively.

4.5 Power Connection

Plug the power cord into a dedicated, grounded electrical outlet. Ensure the voltage matches the specifications of the washing machine.

5. OPERATING INSTRUCTIONS

5.1 Basic Washing Procedure

1. **Load Clothes:** Open the wash tub lid and load clothes, ensuring not to overload the machine.
2. **Add Detergent:** Add the appropriate amount of detergent directly into the wash tub.
3. **Fill Water:** Turn on the water tap and fill the wash tub to the desired level according to the load size.
4. **Select Wash Program:** Turn the **Wash Program Selector Knob** to choose one of the 4 available wash programs (e.g., Gentle, Normal, Heavy Duty, Rinse).
5. **Set Wash Timer:** Turn the **Wash Timer Knob** to set the desired washing duration. The machine will start washing.
6. **Drain Water:** Once the wash cycle is complete, turn the **Drain Selector Knob** to 'Drain' to empty the water from the wash tub.
7. **Rinse:** After draining, refill the wash tub with fresh water for rinsing. You can use the 'Rinse' program or manually rinse.
8. **Spin Dry:** Transfer the rinsed clothes to the spin tub. Close the spin tub lid securely. Turn the **Spin Timer Knob** to set the desired spin duration. The machine will spin to remove excess water.
9. **End Cycle Buzzer:** The machine is equipped with an end cycle buzzer to indicate the completion of the wash or spin cycle.

5.2 Special Features

- **3D Aqua Clean:** This feature enhances washing performance by creating multi-directional water flow for thorough cleaning.
- **20 Mins. Soak Function:** Allows for pre-soaking heavily soiled clothes for up to 20 minutes before the main wash cycle, improving stain removal.
- **Collar Scrubber:** A dedicated scrubbing surface for effectively cleaning stubborn dirt on collars and cuffs.
- **Waterfall:** Provides a continuous cascade of water for better detergent dissolution and rinsing.
- **Magic Filter:** Effectively traps lint and other particles, keeping clothes cleaner and preventing drain clogs.
- **Pulsator: Punch Type with 3 Mini Rotors:** Designed for powerful yet gentle washing action.
- **Air Dry Function:** Utilizes air circulation during the spin cycle to help dry clothes faster and more efficiently.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Magic Filter

The Magic Filter should be cleaned regularly (after every 2-3 washes) to maintain washing efficiency. Remove the filter, clean out collected lint under running water, and reinsert it securely.

6.2 Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents. The machine features a rust-free plastic body for durability and easy cleaning.

6.3 Draining Residual Water

After each use, ensure all water is drained from both the wash and spin tubs to prevent odor and mildew buildup.

6.4 Winter Storage

If the machine is to be stored in an area where temperatures may drop below freezing, ensure all water is completely drained from the hoses and tubs to prevent damage from freezing.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

- **Machine does not start:** Check if the power cord is securely plugged in and if there is power to the outlet. Ensure the wash/spin timer knob is set.
- **Water does not fill:** Check if the water tap is open and the water inlet hose is not kinked.
- **Water does not drain:** Ensure the drain hose is not kinked or blocked. Check if the Drain Selector Knob is set to 'Drain'.
- **Excessive vibration/noise:** Ensure the machine is on a level surface and the load is balanced in the tub.
- **Poor wash results:** Check if the correct amount of detergent was used and if the wash program was appropriate for the load. Clean the Magic Filter.

If the problem persists after checking these points, please contact Kelvinator customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	KWS-A800CR
Brand	Kelvinator
Capacity	8 Kilograms
Type	Top Loading, Semi-Automatic

Product Dimensions (D x W x H)	61D x 61W x 85H Centimeters
Material Type	Plastic (Rust-Free Plastic Body)
Controls Type	Knob / Dial
Wash Programs	4 Wash Programs (e.g., Heavy Duty, Rinse)
Special Features	3D Aqua Clean, 20 Mins. Soak Function, Collar Scrubber, Waterfall, Magic Filter, Punch Type Pulsator with 3 Mini Rotors, Caster Wheels, End Cycle Buzzer, Air Dry Function

9. WARRANTY AND SUPPORT

Your Kelvinator KWS-A800CR washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card provided with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, service requests, or to purchase genuine spare parts, please contact Kelvinator customer support. Keep your purchase receipt and model number (KWS-A800CR) handy when contacting support.

Customer Support Contact: Please refer to the contact information provided in your product documentation or visit the official Kelvinator website for the latest support details.