

TEXUM TX-BPW 2

TEXUM TX-BPW 2 Portable Battery Pressure Washer User Manual

MODEL: TX-BPW 2

Brand: TEXUM

1. INTRODUCTION

Thank you for choosing the TEXUM TX-BPW 2 Portable Battery Pressure Washer. This device is designed for efficient and convenient cleaning tasks around your home, garden, and vehicle. Its cordless and portable design allows for use with various water sources, providing flexibility and ease of use. Please read this manual thoroughly before operation to ensure safe and effective use of your pressure washer.

Safety Information

- Always wear appropriate personal protective equipment, including eye protection, during operation.
- Ensure the battery is fully charged before use and properly installed.
- Do not point the spray nozzle at people, animals, or electrical equipment.
- Keep children and pets away from the operating area.
- Disconnect the battery and water supply before performing any maintenance or cleaning.
- Use only clean water with the pressure washer.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:



Image 2.1: Overview of the TEXUM TX-BPW 2 Portable Battery Pressure Washer and its included accessories.

- TEXUM Battery Pressure Washer Unit
- 48V Lithium Battery (Quantity may vary)
- Battery Charger/Adapter
- Inlet Hose Pipe (3 meters)
- Pressure Gun with Extension Rod
- Quick Connector (Plastic)
- Brass Quick Connector
- Water Filter
- Different Tip Nozzles (e.g., 6-in-1 nozzle)
- Microfiber Sponge
- Foam Pot/Soap Bottle
- Storage Case (Suitcase)

3. SETUP INSTRUCTIONS

Follow these steps to prepare your pressure washer for operation.

3.1 Battery Installation and Charging

1. Ensure the battery is fully charged using the provided charger. Connect the charger to the battery and a power outlet. The indicator light on the charger will show charging status.
2. Once charged, slide the battery pack firmly into the battery slot at the base of the pressure washer handle until it clicks into place.

3.2 Hose and Filter Connection

1. Attach the water filter to one end of the inlet hose pipe. This filter prevents debris from entering the pump.
2. Connect the quick connector to the other end of the inlet hose pipe.
3. Attach the quick connector with the hose to the water inlet port on the pressure washer unit. Ensure a secure connection.

3.3 Nozzle and Extension Rod Assembly

1. Connect the extension rod to the pressure gun.
2. Attach your desired nozzle (e.g., the 6-in-1 nozzle) to the end of the extension rod. Ensure it is securely fastened.



Image 3.1: Fully assembled TEXUM TX-BPW 2 Pressure Washer, ready for water connection.

3.4 Water Source Connection and Priming

The TEXUM TX-BPW 2 can draw water from various sources, including buckets, rivers, or faucets.

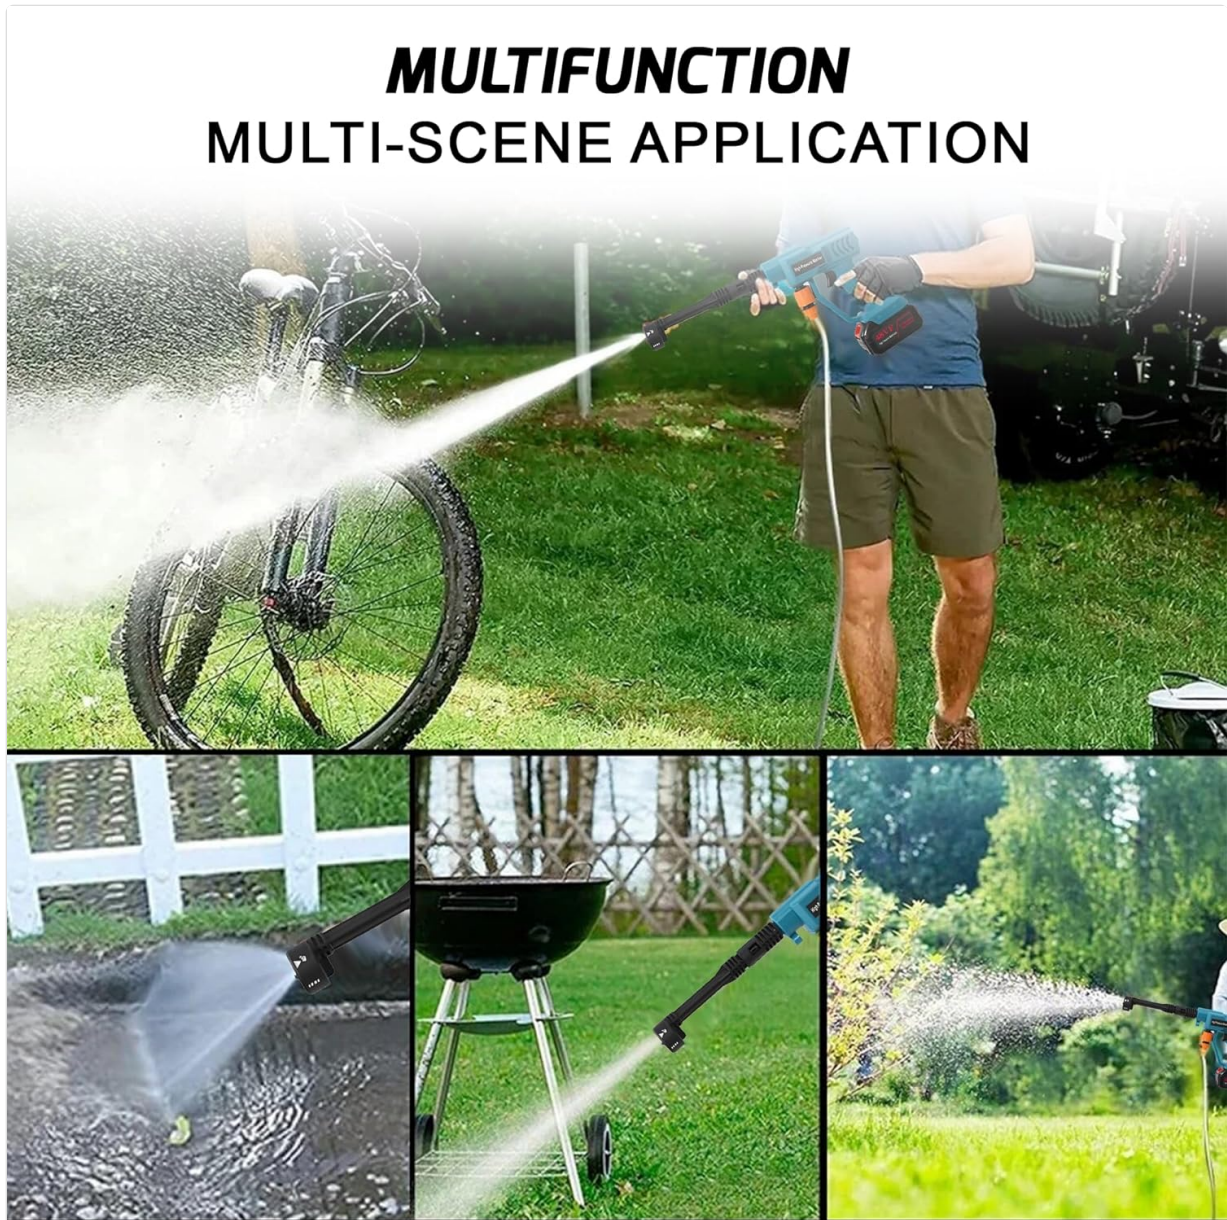


Image 3.2: The self-priming function allows drawing water from a bucket or natural water sources.

1. **For Bucket/River Water:** Place the filtered end of the inlet hose into your water source. Ensure the filter is fully submerged.
2. **For Faucet Connection:** If connecting to a faucet, use an appropriate adapter (not included unless specified) to connect the inlet hose.
3. **Priming the Pump:** If the unit struggles to draw water, especially from a bucket, follow these steps:
 - Completely submerge the inlet hose in the water source to remove any trapped air.
 - Position the water source (e.g., bucket) higher than the pressure washer unit.
 - Turn on the pressure washer and allow it to run until water consistently flows through the wand. This indicates the pump is primed.

4. OPERATING INSTRUCTIONS

Once assembled and primed, your TEXUM TX-BPW 2 is ready for use.

4.1 Powering On and Off

- To turn on the pressure washer, press and hold the trigger on the pressure gun. The motor will start, and water will begin to spray.
- To turn off the pressure washer, release the trigger. The motor will stop.

4.2 Nozzle Selection and Usage

The 6-in-1 nozzle provides various spray patterns for different cleaning tasks.



Image 4.1: The 6-in-1 nozzle offers multiple spray patterns for diverse cleaning needs.

- **0° (Pencil Jet):** A concentrated, high-impact stream for tough stains and hard-to-reach areas. Use with caution as it can damage surfaces.
- **15° (Narrow Fan):** A powerful, narrow fan spray for intensive cleaning of smaller areas.
- **25° (Medium Fan):** A versatile fan spray for general cleaning tasks on various surfaces.
- **40° (Wide Fan):** A broad, gentle spray for rinsing and cleaning larger, delicate surfaces.
- **Fan Spray:** A wide, low-pressure spray suitable for applying soap or gentle rinsing.
- **Shower Spray:** A very gentle, wide spray for watering plants or light rinsing.

To change the spray pattern, rotate the nozzle head until the desired pattern is selected. Always test the spray pattern on an inconspicuous area first.

4.3 General Cleaning Applications

KEEPS YOUR CAR CLEAN

Cordless design for more convenience



HIGH PRESSURE



WITHOUT WIRES



Image 4.2: The cordless design provides convenience for cleaning vehicles.

Self-priming function



Image 4.3: The pressure washer is suitable for various applications including vehicle cleaning, patio washing, and garden tasks.

- **Vehicle Cleaning:** Use a wide fan or shower spray for initial rinsing, then apply soap with the foam pot, and rinse with a medium fan spray.
- **Patio and Deck Cleaning:** Start with a wider spray pattern and gradually narrow it for stubborn dirt. Maintain a safe distance from the surface to avoid damage.
- **Garden Equipment:** Effectively clean garden tools, furniture, and grills.
- **Watering:** The shower spray can be used for gentle watering of plants.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

5.1 Cleaning the Water Filter

- After each use, remove the water filter from the inlet hose.
- Rinse the filter under running water to remove any accumulated debris.
- Inspect the filter for damage and replace if necessary.

5.2 Battery Care

- Always store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not allow the battery to fully discharge for extended periods. Recharge it periodically if not in use.
- Use only the charger provided by TEXUM for your battery.

5.3 Storage

- Before storing, disconnect the battery and drain all water from the pressure washer, hose, and nozzles.
- Clean the exterior of the unit with a damp cloth.
- Store the pressure washer and all accessories in the provided storage case in a dry, frost-free environment.

6. TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Pressure washer does not turn on.	Battery not charged or improperly installed.	Ensure battery is fully charged and securely inserted.
No water flow or weak pressure.	Air in the hose/pump (not primed); water filter clogged; insufficient water supply.	<ul style="list-style-type: none">◦ Follow priming steps in Section 3.4.◦ Clean the water filter.◦ Ensure water source is adequate and hose is not kinked.
Water leaks from connections.	Loose connections; damaged O-rings.	Tighten all connections. Inspect and replace O-rings if damaged.
Motor runs but no water sprays.	Nozzle clogged; pump not primed.	Clear any blockage in the nozzle. Re-prime the pump as per Section 3.4.

7. SPECIFICATIONS

Feature	Detail
Brand	TEXUM
Model Number	TX-BPW 2
Power Source	Battery Powered (48V Lithium)
Maximum Pressure	60 Bar (approx. 870 PSI)
Maximum Flow Rate	280 Liters Per Hour
Hose Length	5.5 Metres (Inlet Hose 3 Metres)
Item Weight	2.7 Kilograms
Product Dimensions	32L x 11W x 28H Centimeters
Included Components	Adapter, Filter, Inlet Hose Pipe 3M, Microfiber Sponge, Pressure Gun With Extension Rod, Quick Connector, brass Quick connector, different tip nozzles

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact TEXUM customer service. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official TEXUM store or contact their customer support channels.

This manual is subject to change without prior notice.