

## HILIPE XCQ-MAK

# HILIPE Cordless Handheld Vacuum Cleaner

MODEL: XCQ-MAK

User Manual

## 1. Introduction

Thank you for choosing the HILIPE Cordless Handheld Vacuum Cleaner. This manual provides important information on the safe operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

### 1.1 Intended Use

This cordless handheld vacuum cleaner is designed for dry cleaning of various surfaces including hardwood floors, marble floors, tiles, low pile carpets, and for picking up dust, pet hair, sand, food debris, and other small particles in homes, cars, workshops, and boats. It is compatible with Makita 18V batteries (battery not included).

### 1.2 Package Contents

- 1 x HILIPE Cordless Handheld Vacuum Cleaner Tool (Battery not included)
- 2 x HEPA Filters
- 1 x Floor Brush
- 1 x Small Circular Brush
- 1 x 2-in-1 Brush
- 1 x Sofa Brush
- 2 x Extension Tubes
- 1 x User Manual

## 2. Safety Instructions

Always observe the following safety precautions to reduce the risk of fire, electric shock, or injury.

## 2.1 General Safety

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces. This vacuum is intended for dry materials only.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged battery or if the appliance has been dropped, damaged, left outdoors, or dropped into water.
- Do not handle the appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Exercise extra care when cleaning on stairs.
- Disconnect the battery before performing any maintenance or cleaning.

## 2.2 Battery Safety (Battery Not Included)

- This vacuum cleaner is designed to be compatible with Makita 18V batteries. Ensure you use genuine or compatible Makita 18V batteries.
- Do not attempt to charge the vacuum cleaner directly. It is powered by an external Makita 18V battery, which must be charged using its dedicated charger.
- Remove the battery from the appliance before making any adjustments, changing accessories, or storing the appliance.
- Store the battery and vacuum cleaner in a cool, dry place away from direct sunlight and extreme temperatures.
- The vacuum cleaner features low voltage protection and will automatically shut off when the battery is nearly depleted to protect the battery.

## 3. Product Overview

---



### 3.1 Main Components and Accessories

The image above displays the HILIFE Cordless Handheld Vacuum Cleaner along with its comprehensive set of accessories. These include the main vacuum unit, two extension tubes, a floor brush, a small circular brush, a 2-in-1 brush, a sofa brush, and two HEPA filters. This array of tools allows for versatile cleaning across different surfaces and hard-to-reach areas.



### 3.2 Makita 18V Battery Compatibility

This vacuum cleaner is designed for seamless compatibility with Makita 18V batteries (models 1860B, 1850B, 1820B, 1840B, etc.). This allows users who already own Makita 18V tools to utilize their existing battery ecosystem, making the vacuum a convenient addition to their toolkit. Please note that the battery is not included with the vacuum cleaner.



**140W  
High Performance Motor**



**For Makita Batteries  
Battery not included**



**Strong Suction  
10Kpa**



**Efficient  
Filtratio  
2 pieces**

### **3.3 Powerful Performance**

Equipped with a 140W high-performance motor, the HILIPE vacuum delivers a strong suction power of 10kPa, making it effective for picking up various types of debris. It features a large 600ml dust cup, reducing the frequency of emptying. The dual HEPA filtration system ensures efficient capture of fine particles, contributing to cleaner air.



### 3.4 Versatile Nozzles and Filtration

The vacuum comes with four different nozzles (floor brush, small circular brush, 2-in-1 brush, sofa brush) and two extension tubes, allowing it to adapt to various cleaning tasks and reach difficult areas. The inclusion of two HEPA filters ensures continuous high-efficiency filtration, with one spare filter provided for convenience.

## 4. Setup

### 4.1 Attaching the Battery

1. Ensure the vacuum cleaner is turned off.
2. Align the Makita 18V battery (not included) with the battery slot on the vacuum cleaner handle.
3. Slide the battery firmly into the slot until it clicks into place. Ensure it is securely fastened before operation.

To remove the battery, press the release button(s) on the battery pack and slide it out.

### 4.2 Assembling Attachments

1. Select the desired nozzle or extension tube for your cleaning task.
2. Align the attachment with the suction opening of the vacuum cleaner.

3. Push the attachment firmly onto the opening until it is securely connected.
4. For extended reach, connect the extension tubes between the main unit and the desired nozzle.

### 4.3 Installing/Removing Filter

1. Twist the dust cup counter-clockwise to detach it from the main unit.
2. Carefully remove the HEPA filter assembly from inside the dust cup.
3. To install a new or cleaned filter, place it back into the dust cup, ensuring it sits correctly.
4. Reattach the dust cup by aligning it with the main unit and twisting clockwise until it locks.

## 5. Operating Instructions

### 5.1 Powering On/Off

Once the battery is securely attached, press the power button located on the handle to turn the vacuum cleaner on. Press the button again to turn it off.

### 5.2 Using Different Nozzles



**10kPa**

**powerful suction**

perfect for hardwood floors, marble floors, tile, low pile carpet and can easily pick up all kinds of particles like dust, pet hair, pet litter, food scraps, etc.

pet litter

dust

hair

food residue

- **Floor Brush:** Ideal for cleaning large areas of hardwood, tile, or low-pile carpets. Attach with extension

tubes for upright cleaning.

- **Small Circular Brush:** Suitable for delicate surfaces, upholstery, and removing dust from crevices.
- **2-in-1 Brush:** Combines a crevice tool and a brush, perfect for tight spaces, car interiors, and general dusting.
- **Sofa Brush:** Designed for cleaning sofas, mattresses, and other fabric surfaces, effectively picking up pet hair and lint.

The image above illustrates the vacuum's powerful 10kPa suction, capable of handling various types of debris including pet litter, dust, hair, and food residue, making it versatile for different cleaning needs.



### 5.3 Cleaning Applications

The HILIFE Cordless Handheld Vacuum Cleaner is highly versatile and can be used in various environments:

- **Home:** Perfect for quick clean-ups of spills, dust, and pet hair on floors, furniture, and stairs.
- **Office:** Convenient for cleaning desks, keyboards, and small office spaces.
- **Kitchen:** Easily picks up crumbs and dry food debris from countertops and floors.
- **Car:** Excellent for vacuuming car interiors, reaching under seats and into crevices with specialized nozzles.

The image demonstrates the vacuum's adaptability for cleaning in an office setting (laptop), home (bed), kitchen (table), and car interior, highlighting its utility across different daily scenarios.

## 6. Maintenance

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 6.1 Emptying the Dust Cup

1. Ensure the vacuum cleaner is off and the battery is removed.
2. Twist the dust cup counter-clockwise to detach it from the main unit.
3. Hold the dust cup over a trash bin and empty its contents.
4. Wipe the inside of the dust cup with a dry cloth if necessary.
5. Reattach the dust cup by aligning it and twisting clockwise until it locks.

### 6.2 Cleaning Filters

It is recommended to clean the HEPA filter regularly, especially after heavy use, to maintain suction power.

1. Remove the dust cup and then the HEPA filter assembly as described in Section 4.3.
2. Tap the filter gently over a trash bin to dislodge dust and debris.
3. For a more thorough cleaning, rinse the filter under cool running water. **Do not use hot water or detergents.**
4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner **Do not use the vacuum with a wet filter.**
5. Replace the filter if it is visibly damaged or if suction power significantly decreases even after cleaning.

### 6.3 Cleaning Attachments

Wipe all attachments with a damp cloth to remove any dirt or debris. Ensure they are completely dry before storing or reattaching.

### 6.4 Storage

Store the vacuum cleaner and its accessories in a cool, dry place, away from direct sunlight and out of reach of children.

## 7. Troubleshooting

---

If you encounter any issues with your HILIFE Cordless Handheld Vacuum Cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery not properly inserted. Battery is depleted. Low voltage protection activated.	Ensure battery is securely clicked into place. Charge the Makita 18V battery using its dedicated charger. Charge the battery. The vacuum automatically shuts off when the battery is low.

Problem	Possible Cause	Solution
Low suction power.	Dust cup is full. Filter is clogged. Nozzle or hose is blocked.	Empty the dust cup. Clean or replace the HEPA filter (refer to Section 6.2). Check all attachments and the main suction opening for blockages and remove them.
Unusual noise during operation.	Blockage in the suction path. Damaged motor (rare).	Turn off and remove battery. Check for and remove any foreign objects in the nozzle, extension tubes, or dust cup. If noise persists after checking for blockages, contact customer support.
Short operating time.	Battery is old or not fully charged. Battery capacity is low.	Ensure the Makita 18V battery is fully charged before use. Consider replacing the battery if it no longer holds a charge effectively.

## 8. Specifications

Feature	Detail
Brand	HILIPE
Model Number	XCQ-MAK
Power	140 Watts (Motor), 120 Watts (Rated)
Voltage	18 Volts (DC)
Suction Power	10 kPa
Dust Cup Capacity	600 ml
Material	Plastic
Noise Level	30 dB
Approx. Runtime	30 minutes (depending on battery and usage)
Item Weight	1.56 Kilograms
Product Dimensions (L x W x H)	27.94 x 15.24 x 17.78 cm
Special Feature	Cordless, Low Voltage Protection
Filter Type	Cartridge (HEPA)
Power Source	Battery Powered (Makita 18V compatible)

## 9. Warranty and Support

This product is designed for durability and performance. For specific warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. As the battery is not included, its warranty is separate and provided by the battery manufacturer.

For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts,

please contact the HILPE customer service through your purchase platform or the contact information provided by the seller.