

**MK-BR03, MK-BR02, MK-BR01**

# Mindkoo MK-BR03 MK-BR02 MK-BR01 Soundbar Remote Control User Manual

## 1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your replacement remote control for Mindkoo MK-BR03, MK-BR02, and MK-BR01 Soundbar Speaker Systems. This remote is designed to offer primary control functions for your compatible soundbar.

**Important Compatibility Note:** This is a replacement infrared (IR) remote control. For optimal functionality, please ensure that your original remote control has the same appearance and button layout as the remote shown in this manual. Compatibility is confirmed for Mindkoo models MK-BR03, MK-BR02, and MK-BR01. If your soundbar model is not listed, or if your original remote differs significantly, full functionality may not be guaranteed.

## 2. PRODUCT OVERVIEW

The remote control features an ergonomic design for comfortable handling and intuitive button placement for easy access to your soundbar's functions. Below are images illustrating the remote's design and components.



**Figure 1:** Front view of the replacement remote control, showing all primary function buttons.



**Figure 2:** Back view of the remote control, illustrating the open battery compartment ready for battery insertion.



Figure 3: Back view of the remote control, showing the battery compartment securely closed after battery installation.

### 3. SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries for operation. Please follow these steps to install the batteries correctly:

1. Locate the battery compartment on the back of the remote control (refer to Figure 2).
2. Press down on the tab and slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely (refer to Figure 3).

**Note:** Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

### 4. OPERATING INSTRUCTIONS: BUTTON FUNCTIONS

This section describes the primary functions of each button on your replacement remote control.

- **Power ( ▷ )**: Turns the soundbar on or off.
- **MUTE**: Mutes or unmutes the soundbar's audio output.
- **BT (Bluetooth)**: Switches the soundbar's input source to Bluetooth mode, allowing connection with Bluetooth-enabled devices.
- **Play/Pause ( ▷ )**: Plays or pauses the current audio track when in playback mode (e.g., Bluetooth, USB).
- **Skip Back ( ▷ )**: Skips to the previous audio track.
- **Skip Forward ( ▷ )**: Skips to the next audio track.
- **Volume Up/Down ( ▷ )**: Increases or decreases the soundbar's volume level.
- **Music**: Activates the 'Music' sound mode, optimizing audio for musical content.
- **Movie**: Activates the 'Movie' sound mode, enhancing audio for cinematic experiences.
- **News**: Activates the 'News' sound mode, typically enhancing vocal clarity.

- **RCA:** Selects the RCA input source for devices connected via RCA cables.
- **OPT (Optical):** Selects the Optical input source for devices connected via an optical cable.
- **AUX (Auxiliary):** Selects the Auxiliary input source for devices connected via a 3.5mm audio jack.

## 5. MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.

## 6. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with fresh AAA batteries.
  - Ensure there are no obstructions between the remote control and the soundbar's IR receiver.
  - Make sure you are within the effective range and pointing the remote directly at the soundbar.
- **Short Operating Range:**
  - This may indicate low battery power. Replace the batteries.
  - Ensure the IR receiver on the soundbar is clean and unobstructed.
- **Intermittent Operation:**
  - Check for loose battery connections.
  - Replace batteries if they are old or weak.

If these steps do not resolve the issue, please refer to the 'Support and Compatibility Note' section for further assistance.

## 7. SPECIFICATIONS

|                                 |  |
|---------------------------------|--|
| Connectivity Technology         | Infrared (IR)  |
| Compatible Devices              | Mindkoo MK-BR03, MK-BR02, MK-BR01 Soundbar Speaker Systems |
| Max Number of Supported Devices | 1  |
| Special Feature                 | Ergonomic, Replacement                                     |

**Batteries Required**

2 x AAA batteries (not included)

## 8. SUPPORT AND COMPATIBILITY NOTE

This remote control is provided as a replacement unit. It is designed to replicate the core functions of the original remote for the specified Mindkoo soundbar models. Due to variations in original equipment, it cannot be guaranteed that all functions will be identical to your original remote, especially if your original remote had unique or advanced features.

For any questions regarding compatibility, specific functions, or troubleshooting beyond what is covered in this manual, please contact the seller directly for assistance. It is recommended to consult your soundbar's original user manual for detailed information on its features and functions.