

B0CF9PTZJT Replacement Remote Control

Generic Replacement Remote Control User Manual

For Fanelite TEL FANDECO2 & Lasko T38301, T32200, T36211, T37900, T38305, S18610, S18965, 2033667A Air Oscillating 4-Speed Tower Fans

INTRODUCTION

This manual provides instructions for the Generic replacement remote control, designed for use with various Fanelite and Lasko tower fan models. This infrared (IR) remote offers essential functions to control your fan. Please ensure your original remote control matches the appearance of this replacement for optimal compatibility.

Important Note: This is a replacement remote. While it aims to replicate the functions of your original remote, some advanced or specific features might vary. Refer to your fan's original manual for detailed fan-specific operations.

SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back view of the remote control, highlighting the battery compartment.



Image: Remote control with the battery cover removed, revealing the two AAA battery slots.

OPERATING INSTRUCTIONS

Point the remote control directly at the fan's infrared receiver. Ensure there are no obstructions between the remote and the fan.

We sale



Replacement



all function



Image: Front view of the replacement remote control, displaying its buttons and their labels.

The remote control features the following buttons:

- **POWER:** Turns the fan ON or OFF.
- **SPEED:** Adjusts the fan speed (e.g., Low, Medium, High, Turbo). Press repeatedly to cycle through speeds.
- **OSC (Oscillation):** Activates or deactivates the fan's oscillation feature, allowing it to rotate from side to side.
- **TIMER:** Sets the fan to operate for a specific duration before automatically turning off. Press repeatedly to cycle through available timer settings.
- **ION (Ionizer):** Activates or deactivates the fan's ionizer function, if available on your fan model.

MAINTENANCE

Battery Replacement

Replace the batteries when the remote control's range decreases or it stops responding. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote has fresh AAA batteries installed correctly.
 - Check for any obstructions between the remote and the fan's IR receiver.

- Make sure you are within the effective range of the fan's IR receiver.
- Verify that the fan is powered on and plugged into a working electrical outlet.

- **Some functions do not work:**

- This replacement remote is designed to mimic the original. However, some specific or advanced functions might not be fully supported if your fan model has unique features not present on the original remote this replacement is based on.
- Confirm that your fan model supports the specific function you are trying to use (e.g., Ionizer, specific timer settings).

- **Remote appears different from my original:**

- This is a replacement remote. While designed for compatibility, its physical appearance may differ from your fan's original remote. Functionality is the primary focus.

SPECIFICATIONS

Product Type	Replacement Remote Control
Brand	Generic
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic design, Direct replacement functionality
Compatible Fan Models	Fanelite TEL FANDECO2; Lasko T38301, T32200, T36211, T37900, T38305, S18610, S18965, 2033667A

WARRANTY AND SUPPORT

This product is a generic replacement remote control. Specific warranty information is typically provided by the seller at the time of purchase. For any issues or support inquiries, please refer to the seller's contact information provided on the product listing or your purchase receipt.

For questions regarding your fan's operation or features, please consult the original instruction manual provided with your Fanelite or Lasko tower fan.