

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Blue Tees Golf](#) /
- › [Blue Tees Golf Player+ GPS Speaker Instruction Manual](#)

## Blue Tees Golf Player+

# Blue Tees Golf Player+ GPS Speaker Instruction Manual

Model: Player+

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Blue Tees Golf Player+ GPS Speaker. Please read this manual thoroughly to ensure optimal performance and longevity of your device.





Image: The Blue Tees Golf Player+ GPS Speaker, showcasing its sleek design and integrated display.

## PRODUCT FEATURES

---

- **Touch Screen Display:** User-friendly interface for navigation and control.
- **Driving Distance Tracking:** Measure and record your driving distances.
- **Dynamic Hazard Information:** Real-time updates on course hazards.
- **Score Keeping:** Integrated score tracking directly on the device.
- **Premium Dynamic Audio:** High-quality sound with deep bass for music playback.
- **Links Party Pairing:** Connect with other devices for a shared audio experience.
- **Magnetic Strip:** Secure attachment to golf carts or metallic surfaces.
- **Power Bank Functionality:** Charge external devices via USB.
- **100-Foot Bluetooth Range:** Maintain connection from a distance.
- **IPX7 Waterproof Rating:** Protection against water immersion.
- **10+ Hours Battery Life:** Extended usage on a single charge.
- **Visual + Audible Distances:** Receive distance readings both visually and audibly.
- **Front/Center/Back Yardages:** Accurate distances to the green.



## SETUP

### 1. Initial Charge

Before first use, fully charge the Player+ using the provided USB-C cable. The device features a 10+ hour battery life when fully charged.

### 2. Power On/Off

Press and hold the power button located on the device to turn it on or off.

### 3. Bluetooth Pairing

1. Ensure Bluetooth is enabled on your smartphone or other audio device.
2. On the Player+, navigate to the Bluetooth settings via the touch screen.

3. Select "Pair New Device" and choose "Blue Tees Player+" from your device's Bluetooth list.
4. A confirmation message will appear on both devices once successfully paired.

#### 4. App Installation (Optional)

For enhanced features and course management, download the Blue Tees Golf app from your device's app store. Follow the in-app instructions to connect your Player+.

### OPERATING INSTRUCTIONS

#### Touch Screen Navigation

The Player+ features a responsive touch screen. Swipe left/right or tap icons to navigate through different modes and settings.



Image: Overview of the Player+ display modes, including GPS, music, and scorekeeping.

## GPS Distances (Front/Center/Back)

Once a course is selected (automatically or manually via the app), the device will display accurate distances to the front, center, and back of the green. Audible distances can be activated by pressing the action button.



Image: Visual representation of Front, Center, and Back yardages on a golf course.

## Driving Distance Measurement

To measure your driving distance, activate the driving distance mode on the screen. Hit your shot, then walk to your ball. The device will calculate and display the distance from your tee shot location.

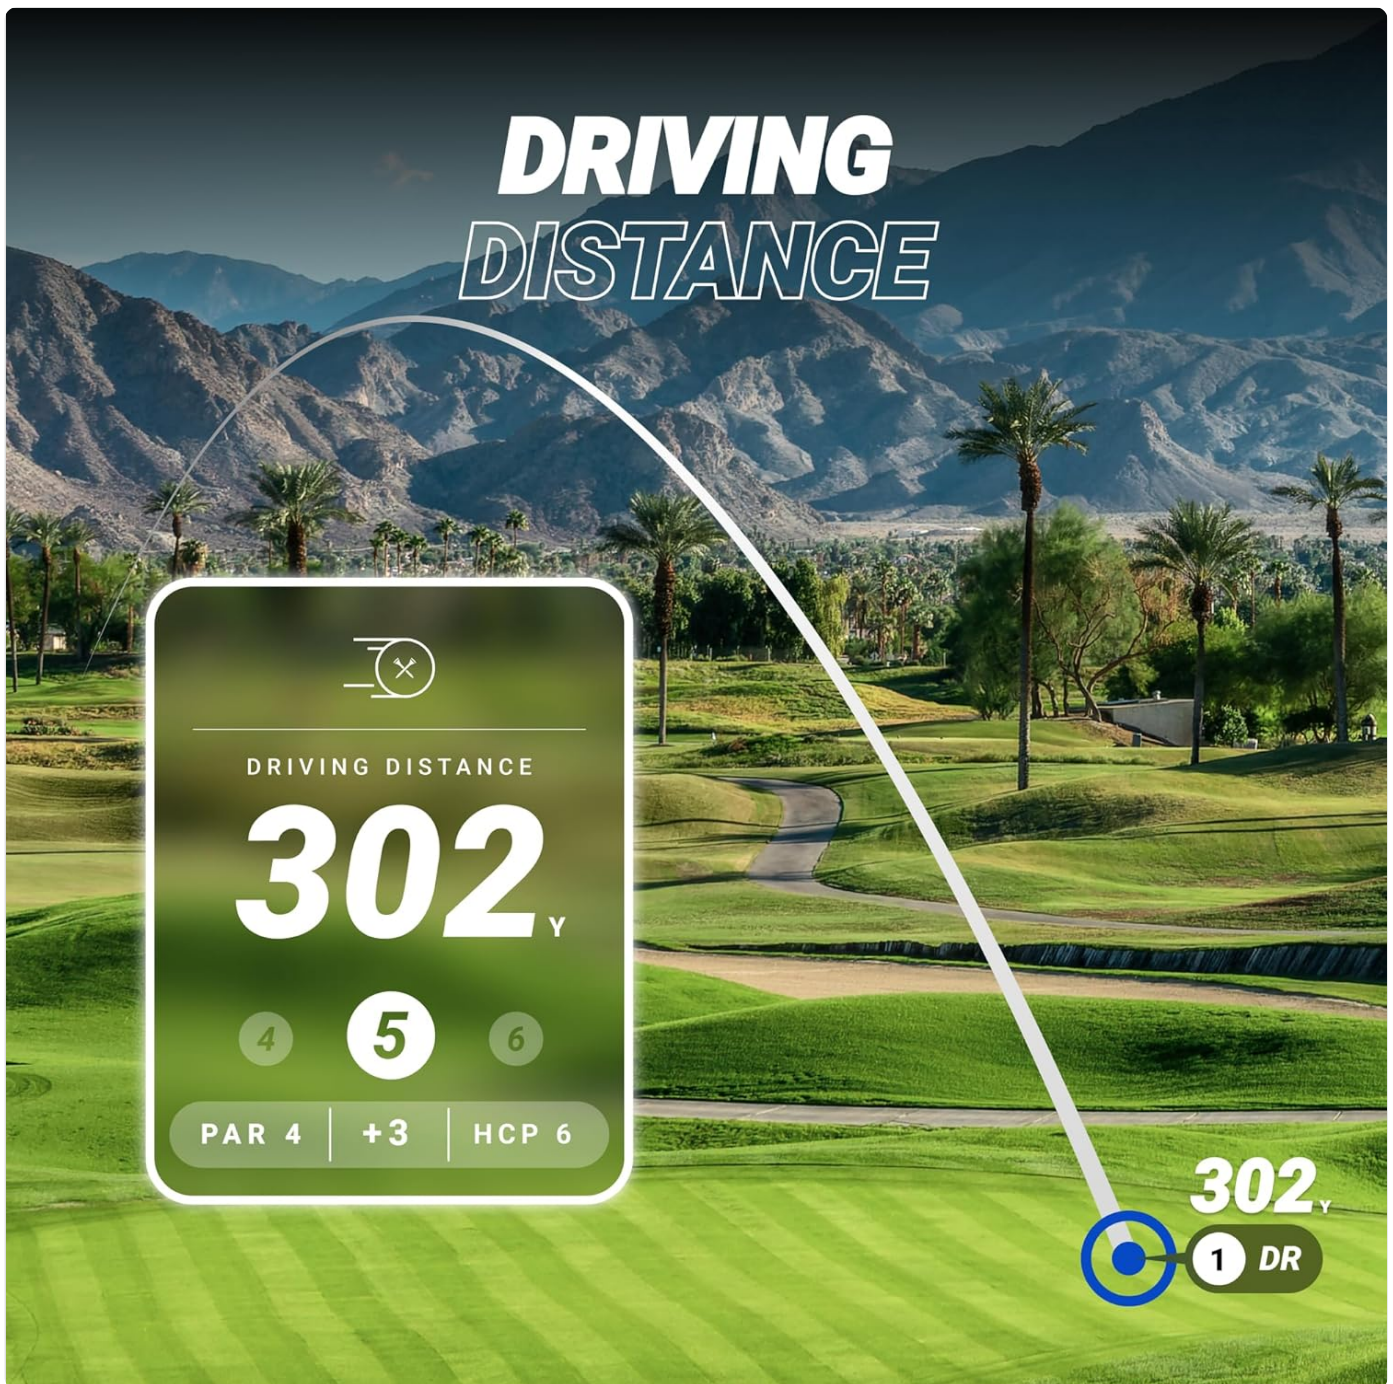


Image: How the Player+ displays driving distance after a shot.

## Dynamic Hazard Information

The Player+ provides distances to various course hazards such as bunkers and water. Access this mode to view detailed hazard layouts and distances to the front and back of each hazard.



Image: Display of dynamic hazard distances on the Player+.

## Score Keeping

Utilize the integrated scorekeeping feature to track your strokes per hole. This data can be synced with the Blue Tees Golf app for performance analysis.

## Audio Playback

Connect your Player+ via Bluetooth to stream music from your smartphone. Use the on-screen controls or physical buttons to adjust volume, skip tracks, and pause playback.

## Magnetic Mounting

The strong magnetic strip allows for convenient attachment to golf cart frames, club heads, or other metallic surfaces. Ensure a secure attachment before moving.



Image: Player+ securely mounted to a golf cart using its magnetic strip.

## Power Bank Function

The Player+ can act as a power bank. Connect your smartphone or other USB-powered devices to the Player+'s USB-A or USB-C port to charge them on the go.

## MAINTENANCE

---

- **Cleaning:** Wipe the device with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Water Resistance:** The Player+ is IPX7 waterproof, meaning it can withstand immersion in up to 1 meter of water for 30 minutes. Ensure all ports are securely closed before exposure to water.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the device frequently. Charge regularly.

## TROUBLESHOOTING

---

### Device not powering on:

Ensure the device is fully charged. Connect it to a power source and attempt to power on after a few minutes.

### Bluetooth pairing issues:

Make sure the Player+ is in pairing mode and within range of your audio device. Forget previous pairings on both devices and attempt to pair again. Restart both devices if necessary.

### Inaccurate GPS readings:

Ensure the device has a clear line of sight to the sky for optimal GPS signal reception. Verify that the correct course is selected in the app or on the device. Update course data via the Blue Tees Golf app if available.

### Battery level display inconsistency:

The Player+ displays battery levels in increments (e.g., 100%, 75%, 50%, 25%, 10%, or LOW). This is normal operation and not an indication of a fault. For precise battery percentage, refer to the connected Blue Tees Golf app.

## SPECIFICATIONS

---

<b>Model Name</b>	Player+
<b>Item Model Number</b>	Player Speaker
<b>Item Weight</b>	2.72 pounds
<b>Product Dimensions</b>	3 x 3 x 8 inches
<b>Display Size</b>	3 inches
<b>Battery Type</b>	2 Lithium Ion batteries (included)
<b>Battery Life</b>	10+ Hours
<b>Waterproof Rating</b>	IPX7
<b>Connectivity Technology</b>	Bluetooth
<b>Special Features</b>	Touchscreen, Waterproof, Magnetic Mount, Power Bank

## WARRANTY

---

The Blue Tees Golf Player+ GPS Speaker comes with a **2-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. For full warranty terms and conditions, please refer to the official Blue Tees Golf website.

## SUPPORT

---

For further assistance, technical support, or to access the latest user guides and software updates, please visit the official Blue Tees Golf website or contact their customer service department. Contact information can typically be found on the brand's official website.

Official Brand Store: [Blue Tees Golf Store on Amazon](#)



