

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Walfront](#) /

› [Walfront 54-Key Digital Piano User Manual](#)

Walfront WALFRONTmtqxag72rd

Walfront 54-Key Digital Piano User Manual

Model: WALFRONTmtqxag72rd

Brand: Walfront

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Walfront 54-Key Digital Piano. Please read this manual thoroughly before operating the instrument and retain it for future reference. This electronic keyboard is designed for beginners, offering a range of features including a microphone and recording function to enhance your musical learning experience.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the instrument to extreme temperatures, direct sunlight, or high humidity.
- Avoid placing the instrument near heat sources or in dusty environments.
- Do not drop or subject the instrument to strong impacts.
- Keep the instrument away from water and other liquids. If liquid enters the unit, disconnect power immediately and contact support.
- Use only the specified power supply (USB cable or 3 AA batteries).
- When using batteries, ensure correct polarity. Remove batteries if the instrument will not be used for an extended period.
- Do not attempt to disassemble or modify the instrument. Refer all servicing to qualified personnel.
- This product is intended for use by beginners and children under adult supervision.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Electronic Organ (54-Key Digital Piano)

- 1 x Microphone
- 1 x USB Power Cord

4. PRODUCT OVERVIEW

The Walfront 54-Key Digital Piano is a compact and versatile electronic keyboard designed for ease of use. It features 54 standard keys, a built-in speaker, and various control buttons for different functions.



Figure 4.1: Walfront 54-Key Digital Piano, showing the keyboard, control panel, microphone, and USB power cord.

The control panel includes buttons for selecting tones, rhythms, songs, percussion, volume adjustment, and recording functions.



Figure 4.2: Detailed view of the control panel, highlighting buttons for tones, rhythms, songs, percussion, and recording.

The included microphone allows for vocal accompaniment while playing, and the recording function enables you to capture your performances.



Figure 4.3: The external microphone, designed for connection to the digital piano.

5. SETUP

Follow these steps to set up your digital piano:

1. **Power Supply:** The electronic organ can be powered in two ways:
 - **Battery Power:** Open the battery compartment on the underside of the keyboard and insert 3 AA batteries (not included), ensuring correct polarity.
 - **USB Power:** Connect the provided USB power cord to the USB port on the keyboard and plug the other end into a compatible USB power adapter (e.g., mobile phone charger) or a computer USB port.

2. **Connect Microphone:** Locate the microphone input jack on the keyboard (usually on the side or back) and firmly insert the microphone plug.
3. **Power On:** Locate the ON/OFF switch on the keyboard and slide it to the 'ON' position. You should hear a startup sound.

6. OPERATING INSTRUCTIONS

This section details how to use the various functions of your digital piano.

6.1 Basic Playback

- **Playing Keys:** Simply press the keys to produce musical notes.
- **Volume Adjustment:** Use the volume control buttons (usually marked with '+' and '-') on the control panel to increase or decrease the overall sound output.

6.2 Tones (Instruments)

The keyboard features 8 different tones (instrument sounds).

- Press the 'TONE' button repeatedly or use the dedicated tone selection buttons (if available) to cycle through the available instrument sounds (e.g., Piano, Jazz Guitar, Violin, Organ, Bell).

6.3 Rhythms

The keyboard includes 5 built-in rhythms.

- Press the 'RHYTHM' button repeatedly or use the dedicated rhythm selection buttons to select a desired rhythm (e.g., Disco, Ballad, Jazz, Dance, Funk).
- Press the 'START/STOP' button to begin or end the rhythm playback.

6.4 Songs (Demos)

The keyboard has 6 pre-recorded demo songs.

- Press the 'SONG' or 'DEMO' button repeatedly to cycle through the demo songs.
- Press the 'START/STOP' button to play or stop the selected song.

6.5 Percussion

The keyboard offers 5 types of percussion sounds.

- Press the 'PERCUSSION' button to activate percussion mode. Specific keys on the keyboard may then trigger different percussion sounds.

6.6 Microphone Function

- Ensure the microphone is securely connected to the microphone input jack.
- Speak or sing into the microphone. Your voice will be amplified through the keyboard's speakers.

6.7 Recording Function

The keyboard allows you to record your performances.

- **To Start Recording:** Press the 'RECORD' button. The indicator light (if present) may illuminate, indicating recording has started. Play your desired melody.

- **To Stop Recording:** Press the 'PLAY' or 'STOP' button.
- **To Play Back Recording:** Press the 'PLAY' button. The recorded melody will play back.

7. MAINTENANCE

Proper maintenance ensures the longevity of your digital piano:

- **Cleaning:** Wipe the surface of the keyboard with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use, store the keyboard in a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If using batteries, remove them if the instrument will not be used for an extended period to prevent leakage.

8. TROUBLESHOOTING

If you encounter issues with your digital piano, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from speakers.	Power is off; Volume is too low; Batteries are dead/incorrectly inserted; USB cable is not connected properly.	Ensure power switch is ON; Increase volume; Replace batteries or check polarity; Reconnect USB cable.
Microphone not working.	Microphone not fully plugged in; Microphone is faulty.	Ensure microphone is securely plugged into the correct jack; Test with another microphone if available.
Keys are not responding.	Power issue; Instrument malfunction.	Check power supply; Try turning off and on again. If problem persists, contact support.
Recording function not working.	Incorrect operation sequence.	Ensure you press 'RECORD' before playing and 'PLAY' to listen back.

9. SPECIFICATIONS

Feature	Description
Model Name	WALFRONTmtqxag72rd
Material	Plastic
Color	Black
Number of Keys	54
Tones	8
Songs	6
Rhythms	5

Feature	Description
Percussions	5
Power Supply	3 AA batteries (not included) or USB cable
Connectivity Technology	USB
Item Weight	1.55 pounds (approx. 0.7 kg)
Package Dimensions	21 x 6.4 x 1.8 inches (approx. 53.3 x 16.3 x 4.6 cm)
Skill Level	Beginner
Special Features	Portable, Recording Function, Microphone Included

10. WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty information, please contact Walfront customer service. You can typically find contact details on the official Walfront website or through the retailer where you purchased the product.

For more information about Walfront products, visit the official Walfront Store: [Walfront Store on Amazon](#).

© 2023 Walfront. All rights reserved.

Related Documents - WALFRONTmtqxag72rd

	<p>// - Interface //</p>
---	------------------------------