

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Peg Perego](#) /

› [Peg Perego Polaris RZR PRO 24 Volt Ride-On Off-Road Vehicle User Manual](#)

Peg Perego IGOD0601

Peg Perego Polaris RZR PRO 24 Volt Ride-On Off-Road Vehicle User Manual

Model: IGOD0601

1. INTRODUCTION AND OVERVIEW

The Peg Perego Polaris RZR PRO is a 24-volt ride-on off-road vehicle designed for children aged 6 to 12 years. This vehicle offers a realistic driving experience with speeds up to 7.5 mph, working headlights, an FM radio with MP3 input, and extreme traction rubber wheels suitable for various terrains. It includes a 24-volt rechargeable battery and charger.



Image: The Peg Perego Polaris RZR PRO 24 Volt Ride-On Off-Road Vehicle, showcasing its design and features.

2. SAFETY INFORMATION

Adult supervision is required at all times when the vehicle is in use. This product is intended for children aged 6 to 12 years. Ensure all riders wear seat belts and adhere to the maximum weight capacity.

- **Recommended Age:** 6 - 12 years.
- **Maximum Weight Capacity:** 220 lbs (100 kg) for riders and cargo combined.
- Always use seat belts provided.
- Operate only on appropriate terrain, avoiding public roads, steep inclines, or hazardous areas.
- This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm (Proposition 65 Warning).



Image: Two children seated in the vehicle, demonstrating the use of seatbelts and appropriate rider size.

3. SETUP AND ASSEMBLY

Assembly of the Polaris RZR PRO typically takes 3-4 hours. A drill and Philips bit are recommended for efficient assembly. Ensure you have short and long bit adapters for various screw placements.

3.1. Unpacking and Parts Identification

- Carefully remove all components from the packaging.
- Refer to the separate hardware instruction sheet to identify fasteners for each step.
- Decal application instructions are included with the decals.

3.2. Battery Installation and Initial Charge

The 24-volt rechargeable battery and charger are included. The battery is located under the passenger seat. To access it, remove the necessary screws and the passenger seat itself.

1. Locate the battery compartment under the passenger seat.
2. Connect the battery terminals as instructed in the assembly manual.
3. Before first use, fully charge the battery for the recommended duration (refer to the detailed charging instructions in the main assembly manual).

4. OPERATING INSTRUCTIONS

Familiarize yourself with the controls before operating the vehicle.

4.1. Driving Controls

- **Accelerator Pedal:** Located on the floor, press to move forward. Release to brake. The vehicle features a soft start/stop mechanism for smooth operation.
- **Gear Shifter:** Provides two forward speeds (3.5 mph and 7.5 mph) and one reverse speed.



Image: Detail of the gear shifter, showing positions for Speed 1, Speed 2, and Reverse.



Image: Detail of the accelerator pedal, which controls vehicle movement.

4.2. Entertainment Features

The vehicle is equipped with working headlights and an integrated FM radio with MP3 input.

- **Headlights:** Turn on/off using the designated switch on the dashboard.
- **FM Radio/MP3:** Use the control panel to tune into FM stations or connect an MP3 device via the input.



Image: The dashboard, highlighting the FM radio and MP3 input panel with controls.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Polaris RZR PRO.

5.1. Battery Care

- Always recharge the battery after each use.
- Do not overcharge the battery. Follow the charging times specified in the full manual.
- If storing the vehicle for an extended period, charge the battery fully every 3 months to maintain its health.
- Ensure the charger is always used in a dry, well-ventilated area.

5.2. Cleaning and General Care

- Clean the vehicle with a damp cloth. Do not use abrasive cleaners or solvents.
- Regularly inspect the wheels and tires for wear or damage. The extreme traction rubber wheels are designed for durability.
- Check all screws and fasteners periodically to ensure they are tight.

6. TROUBLESHOOTING

If you encounter issues with your Polaris RZR PRO, refer to the following common problems and solutions.

- **Vehicle Does Not Move:**
 - Check if the battery is fully charged.
 - Ensure all electrical connections are secure, especially the battery connection.
 - Verify the gear shifter is in a forward or reverse position, not neutral.
- **Radio or Horn Not Working:**
 - Check battery charge level.
 - Ensure all wiring connections to the dashboard panel are secure.
- **Missing Parts During Assembly:**
 - If parts are missing upon delivery, contact Peg Perego customer support immediately with your model number and proof of purchase.
- **Seatbelt Issues:**
 - Regularly inspect seatbelts for wear or damage. If a seatbelt is damaged, discontinue use and contact customer support for replacement parts.

7. SPECIFICATIONS

Feature	Detail
Model Number	IGOD0601
Product Dimensions	63 x 38.5 x 42 inches
Item Weight	112.5 pounds

Recommended Age	6 - 12 years
Battery	24 Volt (1 A battery included)
Speeds	2 forward (3.5 mph, 7.5 mph) + Reverse
Maximum Weight Capacity	220 lbs (100 kg)
Manufacturer	Peg Perego

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Peg Perego website. For customer support regarding parts, service, or any other inquiries, please contact Peg Perego directly.

Manufacturer: Peg Perego

Contact Information: Refer to the product packaging or the official Peg Perego website for the most current customer support details.

9. PRODUCT VIDEO OVERVIEW

Your browser does not support the video tag.

Video: An overview of the Peg Perego Polaris RZR PRO, demonstrating its features and operation. This video is provided by the seller.