

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nostalgia](#) /

› [Nostalgia Inspirex Smart Toaster User Manual](#)

Nostalgia Inspirex

Nostalgia Inspirex Smart Toaster User Manual

MODEL: INSPIREX (2-SLICE, STAINLESS STEEL)

Introduction

The Inspirex Touch Screen Display Smart Toaster is designed to provide precise toasting for various bread types. It features a touchscreen interface for selecting settings, automatic bread lowering and raising, and multiple browning options. This manual provides instructions for safe operation, maintenance, and troubleshooting.



Image: The Inspirex Smart Toaster showcasing its touchscreen interface and automatic features.

Key Features

- Touch Control:** Intuitive touchscreen interface for easy selection of settings.
- 60+ Toast Programs:** Offers 8 bread types and 7 browning levels, each with pre-programmed times for precise toasting. Includes defrost, add time, and reheat functions.
- Automatic Lowering and Raising:** Bread is automatically lowered into the toaster upon pressing START and raised when toasting is complete or CANCEL is pressed.
- Efficient Heating:** Fast-heating nichrome wire coils ensure even and consistent browning. An intelligent timer adjusts duration for consecutive toasting cycles.
- Digital Countdown Display:** A visual countdown timer on the touchscreen indicates remaining toasting time.
- Modern Design:** Ergonomic and stylish stainless steel design complements contemporary kitchens.

- **Easy Cleanup:** Features a removable crumb tray for convenient cleaning.

Setup

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials and at least 6 inches (15 cm) from walls or cabinets. Ensure adequate ventilation around the toaster.
3. **Power Connection:** Ensure the power cord is securely connected to the toaster's power inlet and then plug it into a standard 110V AC electrical outlet.
4. **Initial Cleaning:** Before first use, wipe the exterior with a damp cloth. Remove and clean the crumb tray. It is recommended to run the toaster empty on a medium setting once or twice to burn off any manufacturing residues and odors.



Image: The Inspirex Smart Toaster positioned on a kitchen counter, ready for use.

Operating Instructions

The Inspirex Smart Toaster features an intuitive touchscreen for all operations.

1. Power On

Tap the touchscreen display to activate it. The display will illuminate, showing available options.

2. Selecting Bread Type

Place your bread slices into the toaster slots. On the touchscreen, select one of the 8 available bread types:

- White
- Gluten Free
- Wheat
- Raisin
- Bagel
- Waffle
- Pastry
- Muffin

Each selection automatically adjusts the initial toasting time for optimal results.

MAKE YOUR BREAD EXACTLY HOW YOU LIKE IT



Image: Touchscreen display highlighting bread type selection and browning level options.

3. Adjusting Browning Level

After selecting the bread type, choose your desired browning level from 1 (lightest) to 7 (darkest) using the circular indicator on the touchscreen. The digital countdown will adjust accordingly.

4. Start Toasting

Press the **START** button on the touchscreen. The toaster will automatically lower the bread into the slots and begin the toasting cycle. The countdown timer will display the remaining time.

MODERN DESIGN & FUNCTION



INTERACTIVE
TOUCHSCREEN



DEFROST &
REHEAT

2 EXTRA
WIDE SLOTS



Image: Waffles being toasted in the Inspirex Smart Toaster, with the touchscreen showing special functions.

5. Special Functions

- **Defrost:** Select this option for frozen items. The toaster will adjust the cycle to first defrost and then toast.
- **Reheat:** Use this function to warm previously toasted items without further browning.
- **Add Time:** If your toast is not browned enough, you can press "Add Time" to extend the toasting cycle.

6. Cancel Toasting

To stop the toasting cycle at any time, press the **CANCEL** button. The bread will automatically raise.



Image: A top-down view of two slices of toast in the toaster, demonstrating the even toasting.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your toaster.

- 1. Always Unplug:** Before cleaning, ensure the toaster is unplugged from the power outlet and has completely cooled down.
- 2. Crumb Tray:** The toaster is equipped with a removable crumb tray located at the bottom. Slide out the tray, discard crumbs, and wipe it clean with a damp cloth. Dry thoroughly before reinserting.
- 3. Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can scratch the finish.
- 4. Interior:** Do not attempt to clean the interior heating elements. If bread becomes jammed, unplug the toaster and carefully remove the bread after it has cooled.

CLEANUP IS QUICK & EASY



**REMOVABLE CRUMB
TRAY INCLUDED**



**EASILY
SLIDES OUT**

Image: The removable crumb tray being pulled out for cleaning.

Troubleshooting

Problem	Possible Cause	Solution
Toaster does not power on.	Not plugged in; power outlet issue; toaster not activated.	Ensure the toaster is securely plugged into a working outlet. Tap the touchscreen to activate the display.
Bread does not lower automatically.	START button not pressed; internal mechanism issue.	Ensure you have selected a bread type and browning level, then press the START button. If the issue persists, contact customer support.
Uneven toasting.	Bread type/thickness variation; crumb buildup.	Adjust browning level. Ensure bread slices are of similar thickness. Clean the crumb tray regularly.
Smoke or burning smell.	Food particles/crumbs inside; incorrect browning level.	Immediately press CANCEL and unplug the toaster. Allow to cool, then clean the crumb tray. Reduce browning level for future use.

Specifications

Brand: Nostalgia

Model: Inspirex

Color: Stainless Steel

Material: Stainless Steel

Product Dimensions: 9.6"D x 7.4"W x 7.6"H

Wattage: 1000 watts

Number of Slices: 2

Voltage: 110 Volts

Number of Browning Settings: 7

Item Weight: 6.88 pounds

UPC: 810061708025

ASIN: B0CFCSGSF9

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact Nostalgia customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.

No official product videos from the manufacturer were available for inclusion in this manual.