

Escape BTMB750

Escape BTMB750 True Wireless Sports Earphones User Manual

Model: BTMB750

INTRODUCTION

Thank you for choosing the Escape BTMB750 True Wireless Sports Earphones. This manual provides essential information for setting up, operating, and maintaining your earphones. Please read it carefully to ensure optimal performance and longevity of your device.

Package Contents

- Escape BTMB750 True Wireless Earphones (Left and Right)
- Portable Charging Case
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your Escape BTMB750 earphones and charging case.



Image: Escape BTMB750 True Wireless Sports Earphones and Charging Case. The image shows an individual earphone with an ear hook, the open charging case with both earphones inside, and insets depicting a person running and a person working on a laptop. Text overlays indicate 'PLAYTIME 12 HOURS' and 'AUTO PAIRING'.

Earphone Components

- **Ear Hook:** Provides a secure fit for sports and active use.
- **Eartip:** Ensures comfort and sound isolation.
- **Multi-function Touch Control Area:** For playback, calls, and voice assistant.
- **Microphone:** For hands-free calls and voice commands.
- **Charging Contacts:** Connects to the charging case for power.

Charging Case Components

- **Earphone Charging Slots:** Holds and charges the earphones.
- **Charging Port:** For connecting the USB charging cable to recharge the case.
- **LED Indicator Lights:** Shows charging status of the case and earphones.

SETUP

1. Charging the Earphones and Case

1. Place the earphones into their respective slots in the charging case. Ensure the charging contacts align.
2. Close the charging case. The LED indicators on the case will show the charging status of the earphones.
3. To charge the case, connect the USB charging cable to the charging port on the case and a power source. The case's LED indicators will show its charging progress.
4. A full charge provides approximately 12 hours of playtime for the earphones, with additional charges from the case.

2. Pairing with a Bluetooth Device

1. Ensure the earphones are charged.
2. Open the charging case. The earphones will automatically power on and enter pairing mode. The LED indicator on one earphone will flash, indicating it's ready to pair.
3. On your Bluetooth-enabled device (smartphone, tablet, etc.), go to the Bluetooth settings.
4. Search for available devices and select "Escape BTMB750" from the list.
5. Once connected, the earphone LED indicator will stop flashing. You will hear a confirmation tone.
6. The earphones support Bluetooth 5.0 and have a range of up to 33 feet (10 meters).

OPERATING INSTRUCTIONS

Wearing the Earphones

Gently place the eartips into your ear canal and rotate the ear hook over your ear for a secure and comfortable fit, especially during sports activities.

Basic Functions (Touch Control)

- **Power On:** Open the charging case or long-press the touch control area for 3 seconds.
- **Power Off:** Place earphones back into the charging case and close the lid, or long-press the touch control area for 5 seconds.
- **Play/Pause:** Single tap on either earphone's touch control area.
- **Next Track:** Double tap the right earphone's touch control area.
- **Previous Track:** Double tap the left earphone's touch control area.
- **Volume Up:** Triple tap the right earphone's touch control area.
- **Volume Down:** Triple tap the left earphone's touch control area.

Call Functions

- **Answer/End Call:** Single tap on either earphone's touch control area during an incoming call or active call.
- **Reject Call:** Long-press on either earphone's touch control area for 2 seconds during an incoming call.

Voice Assistant

- **Activate Voice Assistant:** Long-press on either earphone's touch control area for 2 seconds (when not on a call). This will activate your device's voice control (e.g., Siri, Google Assistant).

MAINTENANCE

Cleaning

- Regularly clean the eartips and charging contacts with a soft, dry, lint-free cloth.

- While the earphones are sweat and water resistant, avoid submerging them in water or exposing them to excessive moisture.
- Do not use abrasive cleaners or solvents.

Storage

- Always store the earphones in their charging case when not in use to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your earphones, refer to the following common problems and solutions:

- **Earphones not pairing:**
Ensure both earphones are charged. Place them back in the case, close the lid, wait a few seconds, then open the lid again to re-enter pairing mode. On your device, forget the "Escape BTMB750" from your Bluetooth list and try pairing again.
- **No sound from one earphone:**
Check if both earphones are charged. Try placing them back in the case and taking them out again. Ensure they are properly paired as a stereo pair.
- **Charging issues:**
Verify that the charging cable is securely connected to both the case and the power source. Ensure the charging contacts on the earphones and inside the case are clean and free of debris.
- **Poor sound quality or disconnections:**
Ensure your device is within the 33-foot Bluetooth range. Avoid physical obstructions between your device and the earphones.

SPECIFICATIONS

Feature	Detail
Model Number	BTMB750
Bluetooth Version	5.0
Playtime (Earphones)	Up to 12 hours
Frequency Response	2.4 GHz
Bluetooth Range	Up to 33 feet (10 meters)
Control Type	Voice Control, Touch Control
Audio Driver Type	Dynamic Driver
Recommended Use	Sports
Compatible Devices	Most Modern Bluetooth-enabled Devices
Material (Carrying Case)	Plastic
Dimensions (Parcel)	17.1 x 9.7 x 4.4 cm
Weight (Parcel)	120 g

WARRANTY AND SUPPORT

Your Escape BTMB750 True Wireless Sports Earphones are covered by a standard manufacturer's warranty. For detailed warranty information, product support, or service inquiries, please refer to the contact information provided with your purchase or visit the official Escape website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question