

Manuals.plus /

> Honovos /

> Honovos 15L Whole House Humidifier User Manual

## Honovos 5c9967ae-5b87-4f44-8d87-5eab795d53e3

# Honovos 15L Whole House Humidifier User Manual

Model: 5c9967ae-5b87-4f44-8d87-5eab795d53e3

## 1. PRODUCT OVERVIEW

The Honovos 15L Whole House Humidifier is designed to efficiently increase air humidity in large spaces, including homes and offices. With its substantial 15-liter (4-gallon) water capacity and a high mist output of 600 ml/h, it can cover areas up to 2000 sqft. This cool mist humidifier integrates several features for enhanced user experience and air quality.



Image: Honovos 15L Whole House Humidifier showcasing its large capacity, mist output, and coverage area.

### Key Features:

- **Large Capacity:** 15L (4 Gallons) water tank for extended operation.
- **High Mist Output:** Up to 600 ml/h for rapid humidification.
- **Wide Coverage:** Effective for rooms up to 2000 sqft.

- **Customizable Humidity:** Adjustable humidity levels from 40% to 90%.
- **Easy Refilling:** Convenient top-fill design.
- **Mobility:** Equipped with 4 flexible swivel wheels for easy movement.
- **Aromatherapy:** Built-in essential oil tray.
- **Water Purification:** UV technology and maifanitum at the water inlet to reduce limescale.
- **User-Friendly Controls:** LED touch display and remote control.
- **Safety Features:** 12-hour timer and automatic shut-off with low water protection.

## 2. SETUP INSTRUCTIONS

---

### 2.1 Unpacking

1. Carefully remove the humidifier and all accessories from the packaging.
2. Check for any damage during transit. Contact customer support if any issues are found.
3. Ensure all components are present: main unit, water tank, mist outlet pipes, remote control, and instruction manual.

### 2.2 Placement

- Place the humidifier on a flat, stable, and water-resistant surface.
- Position the unit at least 6 inches (15 cm) away from walls and furniture to ensure proper mist dispersion.
- Avoid placing the humidifier directly on carpets or near heat sources.
- The integrated swivel wheels allow for easy repositioning of the unit.

### 2.3 Assembly of Mist Outlet Pipes

The humidifier comes with an extendable mist outlet system. You can choose to use it for wider mist distribution or operate the unit without it.

1. If desired, gently insert the main mist pipe into the top opening of the humidifier.
2. Attach the multi-directional mist nozzles to the top of the main pipe.

# Extensive Coverage Area

Ensuring every corner is filled with moisture



**2000** sq. ft

Applicable Large Rooms

**600** ml/h

Max Mist Output

*Image: The humidifier with its mist outlet pipes fully assembled, dispersing mist into a room.*

## 2.4 Water Filling

The Honovo humidifier offers two convenient ways to refill the water tank:

- **Top-Fill Method:** Simply pour clean, cool water directly into the top opening of the humidifier.
- **Removable Tank Method:** The water tank can be removed from the base for refilling at a sink.

### Important:

- Always use clean, cool tap water. For best results and to minimize mineral buildup, distilled or

demineralized water is recommended.

- Do not fill above the 'MAX 15L' line indicated on the water level window.
- Do not add essential oils directly into the water tank. Use the dedicated essential oil tray.



*Image: Demonstrating the top-fill and removable tank water refilling options.*

### 3. OPERATING INSTRUCTIONS

The humidifier features an intuitive LED touch display and comes with a remote control for convenient operation.

#### 3.1 Power On/Off

- Plug the power cord into a suitable electrical outlet.
- Press the **Power** button on the control panel or remote to turn the unit on or off.

#### 3.2 Mist Output Adjustment

The humidifier offers three mist output levels to suit your preferences.

- Press the **Mist Volume** button repeatedly to cycle through Low, Medium, and High mist settings.
- The maximum mist output is 600 ml/h.

## 3-level Mist Adjustment

Easily regulate the mist output to fulfill your diverse humidification preferences



Image: Visual representation of the three mist output levels.

### 3.3 Humidity Control

Maintain your desired humidity level with the automatic humidity regulation feature.

- Press the **Customize Humidity** button to set your desired humidity level, ranging from 40% to 90%.
- The humidifier will automatically adjust its mist output to reach and maintain the set humidity.
- The unit will automatically shut off when the desired humidity is achieved or when the water level is low.

# Automatic Humidity Regulation

Do whatever you want, it's your call on the humidity



Image: Automatic humidity regulation chart with suggested humidity levels for different environments.

## 3.4 Timer Function

- Press the **Timer** button to set an operating duration from 1 to 12 hours. The unit will automatically turn off once the set time expires.

## 3.5 Sleep Mode

- Activate **Sleep Mode** to turn off the LED display and ensure quiet operation, ideal for nighttime use.



**Silent Humidification, Serene Care**

*Image: Humidifier in a bedroom, demonstrating its silent operation for undisturbed sleep.*

### **3.6 Essential Oil Tray**

- Locate the essential oil tray on the side of the unit.
- Add a few drops of your favorite essential oil to the tray. Do not add essential oils directly into the water tank.

# Aromatherapy Humidifier

Enjoy fresh air and relieve stress to the fullest



*Image: Humidifier with its essential oil tray, ready for aromatherapy use.*

## 3.7 UV Function

- Press the **UV** button to activate the built-in UV light, which helps prevent harmful substance growth in the water tank.

## 3.8 Remote Control

- Use the provided remote control to conveniently operate all functions of the humidifier from a distance.



Image: Humidifier with its remote control, illustrating the two ways to control the device.

### 3.9 Video Demonstration

Your browser does not support the video tag.

Video: A comprehensive demonstration of the Honovos 15L Whole House Humidifier, including unboxing, setup, and operation of various features like mist output, humidity control, and essential oil tray.

## 4. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your humidifier.

### 4.1 Cleaning the Water Tank and Base

- **Daily:** Empty any remaining water and rinse the tank daily.
- **Weekly:** Clean the water tank and base thoroughly. The spacious water tank opening makes cleaning convenient.
- Use a soft brush or cloth to remove any mineral deposits or film. A solution of white vinegar and water (1:1 ratio) can help dissolve stubborn mineral buildup.
- Rinse all components thoroughly with clean water before reassembling.

### 4.2 Water Quality and Filtration

- The humidifier includes maifanitem at the water inlet to help soften hard water and reduce limescale and mineral buildup.
- Regularly inspect and clean the maifanitem filter. Replace if necessary (replacement frequency may vary based on water hardness and usage).
- The built-in UV light also contributes to maintaining water hygiene.

## Sterile Humidification, Caring for Your Health.



*Image: Internal view of the humidifier highlighting the UV light and maifanitem filtration stone for sterile humidification.*

### 4.3 Storage

- If the humidifier will not be used for an extended period, empty and clean the unit completely.
- Allow all parts to air dry thoroughly before storing.
- Store the humidifier in a cool, dry place, away from direct sunlight.

## 5. TROUBLESHOOTING

---

If you encounter any issues with your Honovos humidifier, please refer to the following common troubleshooting steps:

### 5.1 No Mist Output

- **Check Water Level:** Ensure the water tank has sufficient water. The unit will automatically stop misting when water is low.
- **Proper Assembly:** Verify that the water tank is correctly seated on the base and all components are properly assembled.
- **Clean Transducer:** Mineral buildup on the ultrasonic transducer can impede mist production. Clean it gently with a soft brush and vinegar solution.

### 5.2 Unit Not Powering On

- **Power Connection:** Ensure the power cord is securely plugged into both the humidifier and a working electrical outlet.
- **Water Tank Seating:** Make sure the water tank is correctly placed on the base. Some units have a safety switch that prevents operation if the tank is not properly aligned.

### 5.3 Unusual Odor

- **Stagnant Water:** Empty and clean the water tank and base thoroughly. Refill with fresh, clean water.
- **Mineral Buildup:** Clean the unit as described in the Maintenance section to remove any mineral deposits or bacterial growth.
- **Water Type:** Using distilled or demineralized water can help prevent odors caused by tap water impurities.

### 5.4 Excessive Humidity

- **Adjust Humidity Setting:** Lower the desired humidity level using the 'Customize Humidity' button.
- **Reduce Mist Output:** Select a lower mist volume setting.

## 6. SPECIFICATIONS

---

Feature	Detail
Brand	Honovos
Model Name	Honovos Humidifiers
Item Model Number	5c9967ae-5b87-4f44-8d87-5eab795d53e3
Capacity	15 Liters (4 Gallons)
Mist Output	600 ml/h
Coverage Area	2000 Square Feet
Operation Mode	Ultrasonic
Product Dimensions	27"D x 13"W x 13"H
Item Weight	8.5 Pounds
Wattage	50 watts
Special Features	12H timer, Automatic shut-off, 3 mist levels, Top water filling, Easy to clean, 4 universal wheels, Essential oil tray, Remote control, LED touch display, UV technology, Maifanimum filter.

## 7. WARRANTY AND SUPPORT

---

Honovos is committed to providing excellent customer service.

- For any questions or concerns regarding your humidifier, please utilize our 24-hour online service.
- Refer to the product packaging or official website for specific warranty details and contact information.