

Anker A1654

Anker MagGo Power Bank (Model A1654) User Manual

Qi2 Certified 15W Ultra-Fast MagSafe Compatible Mobile Charger with 10,000mAh Battery, Smart Display, and Foldable Stand

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Anker MagGo Power Bank (Model A1654). Please read this manual thoroughly before using the product and retain it for future reference.

The Anker MagGo Power Bank is a portable charging solution featuring Qi2 certified 15W wireless charging, a 10,000mAh battery capacity, a smart display, and a foldable stand. It is designed for compatibility with iPhone 12/13/14/15 series and other Qi-compatible devices.

2. PACKAGE CONTENTS

- Anker MagGo Power Bank (10,000mAh)
- USB-C to USB-C Cable (2 ft / 0.6 m)
- Welcome Guide

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Anker MagGo Power Bank.



Figure 1: Anker MagGo Power Bank (Model A1654) with its smart display indicating 100% charge and the integrated foldable stand deployed.

- **Magnetic Charging Surface:** For wireless charging compatible devices.
- **Smart Display:** Shows battery percentage, remaining usage time, or full recharge time.
- **Foldable Stand:** Integrated stand for hands-free viewing during charging.
- **USB-C Port:** For charging the power bank and wired device charging.
- **Power Button:** Activates the power bank and display.

4. SETUP AND CHARGING THE POWER BANK

Before first use, fully charge your Anker MagGo Power Bank.

1. Charging the Power Bank:

Connect the provided USB-C to USB-C cable to the power bank's USB-C port and to a compatible USB-C wall charger (not included, 20W or higher Power Delivery (PD) adapter recommended for optimal performance). The smart display will show the charging status and estimated full recharge time.

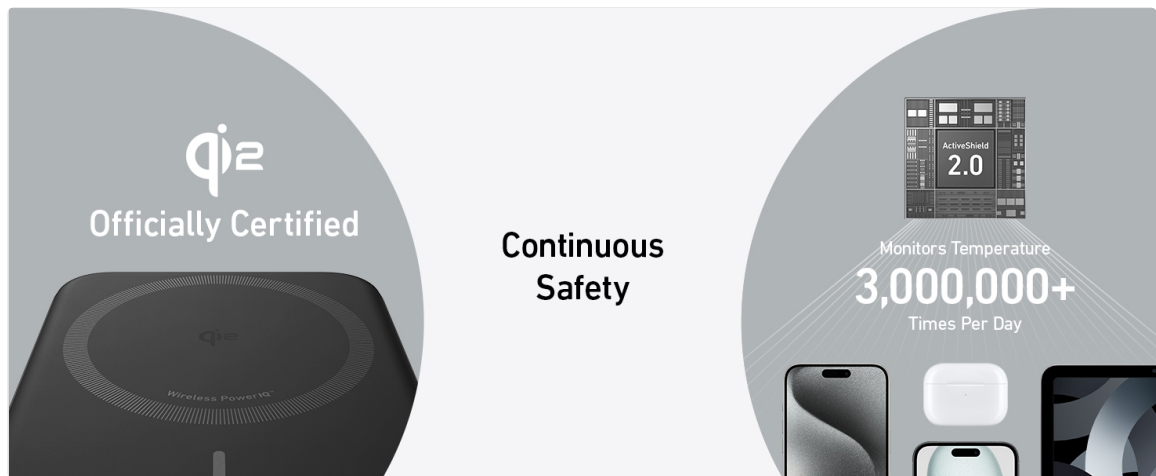


Figure 2: Recharging the Anker MagGo Power Bank using a USB-C cable and wall adapter.

5. OPERATING INSTRUCTIONS

5.1 Wireless Charging (MagSafe Compatible)

1. Ensure your device is MagSafe compatible (iPhone 12 series or newer).
2. Align your device with the magnetic charging surface of the power bank. The magnets will securely attach the device.
3. The smart display on the power bank will show the charging status and estimated remaining usage time.

ANKER

— The World's —

NO.1

Mobile Charging Brand*

Doubly Fast in a Snap

2X Faster*



Wireless PowerIQ | **15W Wireless Charging**

*15W wireless fast charging is exclusive to iPhone models. Data based on internal testing, charging an iPhone 14 Pro from 0 to 25% compared with a 7.5W wireless charger.

Figure 3: An iPhone 15 Pro wirelessly charging while magnetically attached to the Anker MagGo Power Bank.

Note: For optimal wireless charging, ensure no foreign objects are between the power bank and your device. Non-magnetic cases may interfere with the magnetic attachment and charging efficiency.

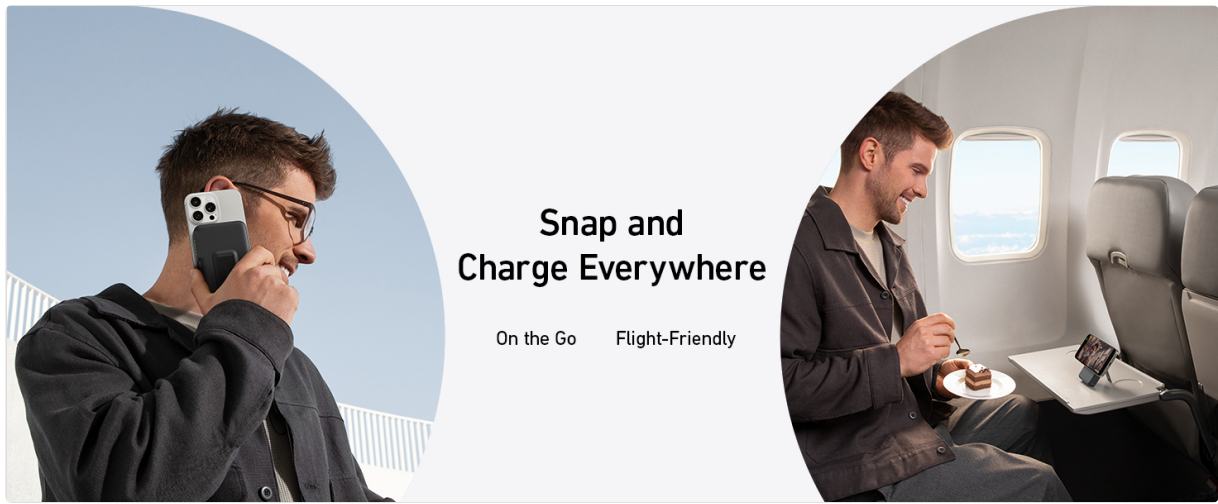


Figure 4: Illustration of compatible MagSafe cases and incompatible non-magnetic cases for wireless charging.

5.2 Wired Charging

1. Connect your device to the power bank's USB-C port using a compatible USB-C cable.
2. The power bank will automatically begin charging your device. The smart display will show the charging status.

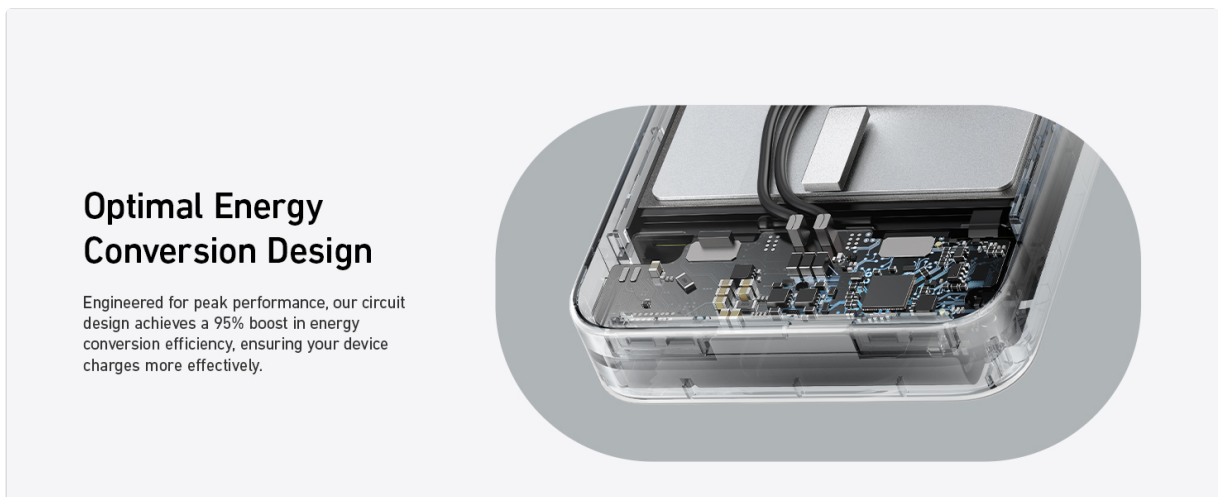


Figure 5: Wired charging of an iPhone using the Anker MagGo Power Bank's USB-C port.

5.3 Using the Foldable Stand

The integrated foldable stand allows for hands-free viewing while your device is charging.

1. Gently pull out the stand from the back of the power bank.
2. Place your MagSafe-compatible device onto the magnetic charging surface.
3. Adjust the angle of the stand for comfortable viewing in either portrait or landscape orientation.



Figure 6: The Anker MagGo Power Bank with its foldable stand supporting an iPhone during charging.

6. SMART DISPLAY INFORMATION

The smart display provides real-time information about the power bank's status.

Smart Display On Demand

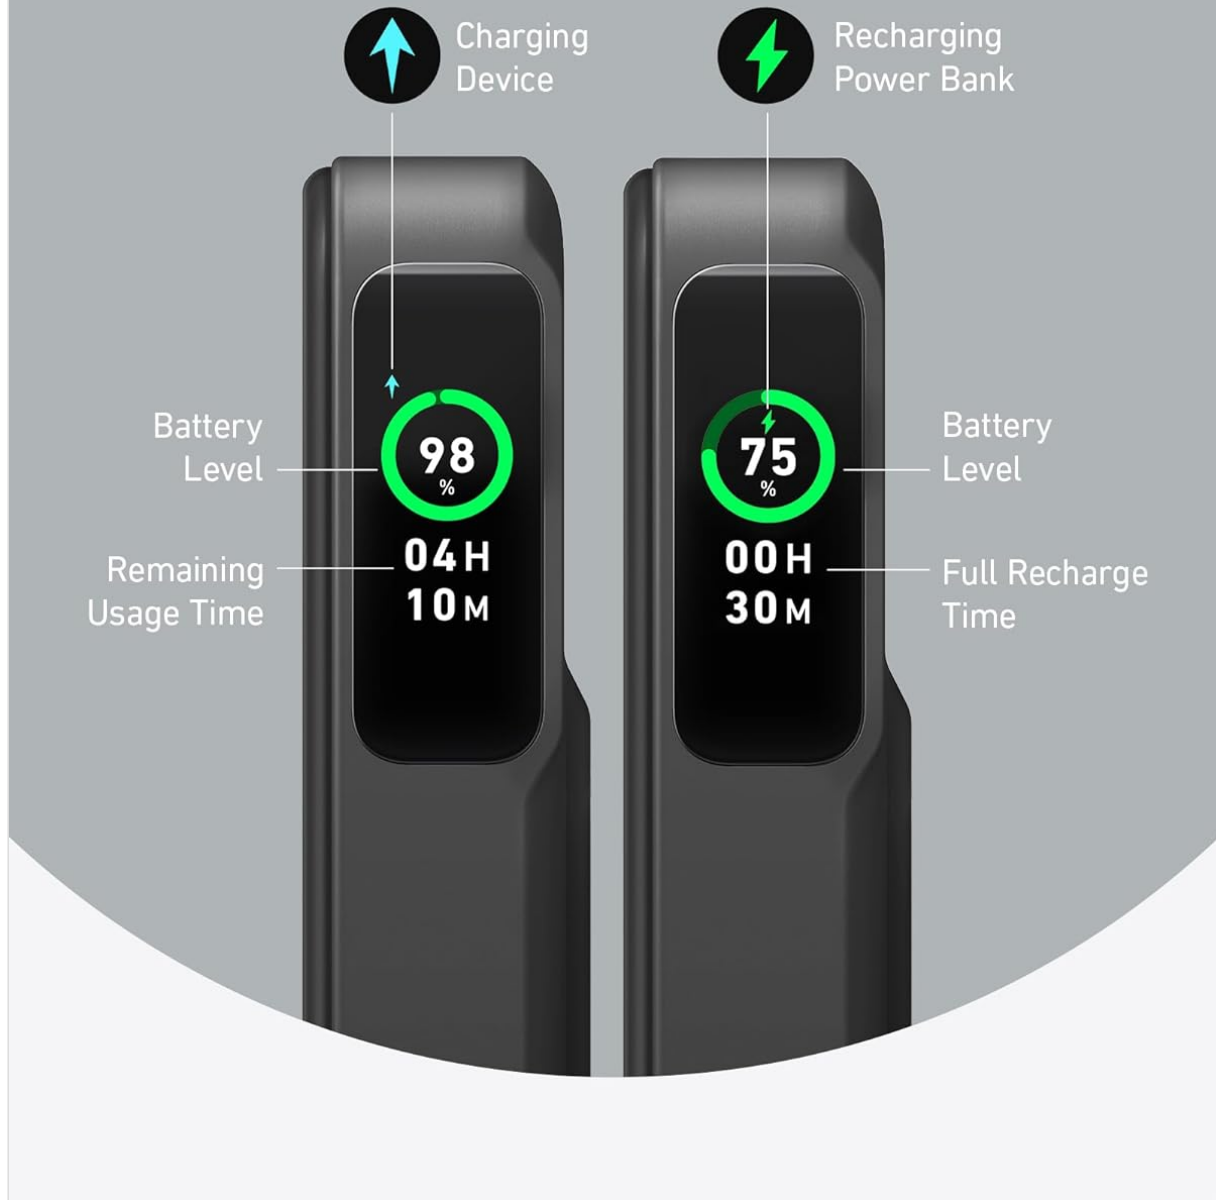


Figure 7: The smart display indicating battery level and estimated time for charging a device or recharging the power bank.

- **Battery Level (%):** Indicates the current charge level of the power bank.
- **Remaining Usage Time:** When charging a device, shows the estimated time the power bank can continue to supply power.
- **Full Recharge Time:** When the power bank is being recharged, shows the estimated time until it is fully charged.

7. MAINTENANCE AND CARE

- Keep the power bank away from liquids, extreme temperatures, and direct sunlight.
- Clean the device with a dry, soft cloth. Do not use corrosive cleaners or sprays.

- Store the power bank in a cool, dry place when not in use.
- Avoid dropping or subjecting the power bank to strong impacts.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging device wirelessly.	Device not MagSafe compatible; improper alignment; non-magnetic case; power bank battery depleted.	Ensure device is MagSafe compatible. Realign device. Remove non-magnetic case. Recharge power bank.
Slow charging speed.	Using a low-power wall adapter for recharging; device not supporting 15W wireless charging; environmental factors.	Use a 20W or higher PD wall adapter for recharging. Ensure your device supports 15W Qi2 charging. Move to a cooler area if the device or power bank is overheating.
Smart display not turning on.	Power bank battery depleted; device malfunction.	Press the power button. Recharge the power bank. If the issue persists, contact customer support.
Charging stops at 80%.	iPhone thermal management feature (iOS 17+).	This is a normal feature to protect the battery from overheating. Charging will resume once the device cools down. Move your iPhone to a cooler area.

9. SPECIFICATIONS

Model Number	A1654
Battery Capacity	10,000 mAh
Wireless Charging Output	Up to 15W (Qi2 Certified)
USB-C Output	Up to 27W
USB-C Input	Up to 20W
Dimensions	3.94 x 2.76 x 0.79 inches
Weight	8.8 ounces
Compatibility	iPhone 12/13/14/15 series (15W magnetic fast charging); other Qi-compatible devices (lower efficiency, no magnetic feature).

10. WARRANTY AND SUPPORT

Anker provides a 24-month warranty for this product. For technical support, warranty claims, or further assistance, please contact Anker customer service through their official website or the contact information provided in your product's welcome guide.

You can visit the official Anker store for more information: [Anker Store](#)

