

Milex 22L Electronic Air Fryer Oven

Milex 22L Electronic Air Fryer Oven Instruction Manual

Model: 22L Electronic Air Fryer Oven

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances.
- Do not immerse the cord, plug, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the appliance manufacturer, as this may cause injuries.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Ensure proper ventilation around the appliance during operation.

2. PRODUCT OVERVIEW

The Milex 22L Electronic Air Fryer Oven is a versatile kitchen appliance designed for various cooking methods including air frying, warming, broiling, toasting, baking, and convection cooking. It features a spacious 22-liter capacity, a powerful 1500-watt heating element, and an adjustable thermostat.

Figure 2.1: Front view of the Milex 22L Electronic Air Fryer Oven, showcasing its sleek black design, control knobs for timer, temperature, function, and speed, and the transparent glass door.

Components and Accessories

Your Milex 22L Electronic Air Fryer Oven comes with the following components and accessories:

- Main Air Fryer Oven Unit
- Drip Tray: Collects excess oil and food particles.
- Air-flow Basket: Ideal for air frying, allowing hot air to circulate evenly around food.
- Steel Baking Rack: For baking, roasting, or toasting.
- Instruction Manual (this document)
- Recipe Book: Contains various recipes tailored for your air fryer oven.

Figure 2.2: The Milex 22L Electronic Air Fryer Oven with its included accessories, demonstrating the drip tray, air-flow basket, and steel baking rack.

3. SETUP

Before first use, ensure all packaging materials are removed. Clean the interior and accessories as described in the 'Maintenance and Cleaning' section.

1. Place the air fryer oven on a flat, stable, heat-resistant surface. Ensure there is at least 15 cm (6 inches) of clear space on all sides of the appliance for proper ventilation.
2. Insert the drip tray at the bottom of the oven cavity to catch any drippings during cooking.
3. Place the desired accessory (air-flow basket or baking rack) into the oven, depending on your cooking needs.
4. Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

The Milex 22L Electronic Air Fryer Oven offers six primary functions: Air Fry, Warm, Broil, Toast, Bake, and Convection. Each function utilizes the adjustable thermostat (100-250°C) and a 60-minute timer.

Figure 4.1: The Milex 22L Electronic Air Fryer Oven's spacious interior can accommodate a 1.8kg chicken or a 30cm pizza, making it suitable for various meal preparations.

General Operation Steps:

1. Place food on the appropriate accessory (air-flow basket for air frying, baking rack for baking/toasting).
2. Close the oven door securely.
3. Turn the 'Function' knob to select your desired cooking mode (Air Fry, Warm, Broil, Toast, Bake, Convection).
4. Turn the 'Temp/°C' knob to set the desired cooking temperature (100°C to 250°C).
5. Turn the 'Timer' knob to set the cooking time (up to 60 minutes). The oven will automatically shut off when the timer reaches zero.
6. For functions requiring fan assistance (e.g., Air Fry, Convection), adjust the 'Speed' knob to LOW or HIGH as needed.
7. Monitor food through the glass door. For even cooking, some foods may require shaking or flipping halfway through the cooking cycle.
8. Once cooking is complete, carefully remove food using oven mitts.

Specific Function Notes:

- **Air Fry:** Uses Speed Air Technology for crispy results. Best for fries, chicken wings, and other fried foods. Use the air-flow basket.

- **Broil:** Ideal for browning the top of dishes or cooking thin cuts of meat. Place food closer to the top heating element.
- **Toast:** For bread, bagels, and similar items. Use the baking rack.
- **Bake:** Suitable for cakes, casseroles, and roasting. Use the baking rack.
- **Convection:** Circulates hot air for faster, more even cooking, similar to a traditional convection oven.
- **Warm:** Keeps food warm after cooking without overcooking.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Milex Air Fryer Oven. The non-stick interior facilitates easy cleaning.

1. Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
3. **Interior:** Wipe the interior walls with a damp cloth and mild, non-abrasive detergent. For stubborn food residue, a soft brush or sponge can be used. Ensure the interior is dry before next use.
4. **Accessories (Drip Tray, Air-flow Basket, Baking Rack):** These accessories are dishwasher safe or can be washed by hand with warm, soapy water. Rinse thoroughly and dry completely.
5. Do not immerse the main unit in water or any other liquid.

6. TROUBLESHOOTING

If you encounter any issues with your Milex Air Fryer Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet not working; Timer not set.	Ensure plug is securely in outlet; Test outlet with another appliance; Set the timer knob to the desired cooking time.
Food not cooked evenly	Overcrowding; Incorrect temperature/time; Food not flipped/shaken.	Cook in smaller batches; Adjust temperature and time according to recipe; Flip or shake food halfway through cooking.
White smoke coming from appliance	Grease/oil residue; Fatty foods.	Clean the drip tray and interior thoroughly; For fatty foods, ensure drip tray is clean and consider using less oil.
Appliance trips circuit breaker	Overloaded circuit; Internal fault.	Ensure no other high-wattage appliances are on the same circuit; If problem persists, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact Milex customer support.

7. SPECIFICATIONS

Technical specifications for the Milex 22L Electronic Air Fryer Oven:

- **Model:** 22L Electronic Air Fryer Oven
- **Capacity:** 22 Liters
- **Power/Wattage:** 1500 Watts
- **Voltage:** Standard household voltage (check product label for specific voltage)
- **Material:** Stainless Steel
- **Color:** Black
- **Temperature Range:** 100°C - 250°C
- **Timer:** Up to 60 minutes with auto shut-off
- **Dimensions (Product):** Approximately 41.9D x 45W x 38.6H centimetres
- **Item Weight:** Approximately 8.1 Kilograms
- **Special Features:** Programmable, Temperature Control, Automatic Shut-off, Timer

8. WARRANTY AND SUPPORT

Milex products are manufactured to the highest quality standards. While specific warranty details are not provided in this manual, typically Milex appliances come with a standard manufacturer's warranty covering defects in materials and workmanship for a period of 12 months from the date of purchase. Please retain your proof of purchase for warranty claims.

For customer support, service, or spare parts information, please visit the official Milex website or contact their customer service department. Contact details can usually be found on the product packaging or the Milex brand store online.

No official product videos were found for this model from the seller. For visual guides, please refer to the detailed instructions and diagrams within this manual.

© 2023 Milex. All rights reserved.

Related Documents - 22L Electronic Air Fryer Oven

	<p><u>Milex Extended Warranty Information and Product Eligibility</u></p> <p>Details on Milex products eligible for extended warranties, including warranty periods, registration requirements, exclusions, and care instructions. Covers models manufactured from 2024-2025.</p>
	<p><u>Milex Hurricane Air Fryer MAF001 Instruction Manual</u></p> <p>Comprehensive instruction manual for the Milex Hurricane Air Fryer (Model MAF001), detailing safety precautions, product parameters, operating instructions, and accessory usage for fat-free family meals.</p>

 <p>Milex 25L Rotisserie Air Fryer Instruction Manual everyday home essentials</p>	<p>Milex 25L Rotisserie Air Fryer Instruction Manual</p> <p>Instruction manual for the Milex 25L Rotisserie Air Fryer, covering important safeguards, parts and accessories, features and benefits, operating instructions for various functions like air fry, rotisseries, steak, pizza, chicken, toast, bake, warm, and dehydrate, as well as care and cleaning, and warranty information.</p>
 <p>Milex Power Airfryer XXXL 5.6 Litre COOKING everyday home essentials</p>	<p>Milex Power Airfryer XXXL User Manual and Cooking Guide</p> <p>Comprehensive guide to the Milex Power Airfryer XXXL (Model MPA001), including features, safety precautions, operating instructions, cooking times, recipes, troubleshooting, and warranty information.</p>
 <p>Milex Nutri1200 8 Speeds INSTRUCTION MANUAL everyday home essentials</p>	<p>Milex Nutri1200 Nutritional Blender Instruction Manual</p> <p>Comprehensive instruction manual for the Milex Nutri1200 Nutritional Blender, covering setup, safe operation, maintenance, and troubleshooting for optimal use.</p>
 <p>Milex Bread Master INSTRUCTION MANUAL everyday home essentials</p>	<p>Milex Bread Master MBM001 Instruction Manual</p> <p>Comprehensive instruction manual for the Milex Bread Master MBM001, covering operation, safety, troubleshooting, ingredients, and recipes for homemade bread. Features include multiple programs, delay timer, and fruit/nut dispenser.</p>