

Faber FBIMWO 32L CGS

Faber 32L Built-In Microwave Oven User Manual

Model: FBIMWO 32L CGS

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference. Improper use may result in fire, electric shock, or injury.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Always use oven mitts when removing items from the oven as they may be hot.

2. PRODUCT OVERVIEW

The Faber 32L Built-In Microwave Oven is designed for efficient cooking with multiple functions. It features a 32-liter capacity and an electric control panel.

2.1 Components

- Microwave Oven Unit
- Glass Turntable
- Grill Rack
- User Manual (this document)

2.2 Control Panel and Interior

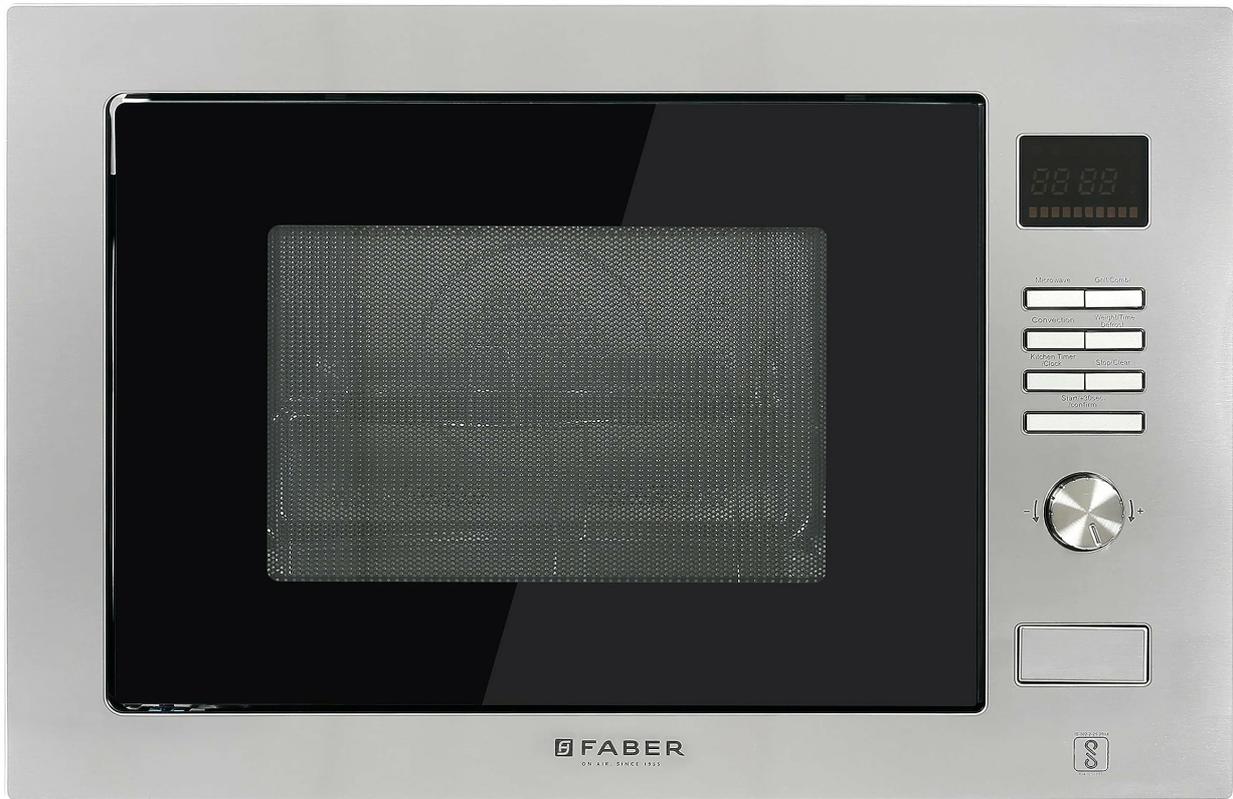


Figure 1: Interior view of the Faber 32L Built-In Microwave Oven with the door open. The image displays the glass turntable and metal grill rack inside the oven cavity. The right side shows the digital display indicating '0:26' and the electric control panel with various function buttons and a rotary knob.



Figure 2: A detailed view of the electric control panel. It features a digital display at the top, followed by several rectangular buttons for different functions, and a central rotary knob for setting time or power levels. The panel is integrated into the stainless steel finish of the appliance.

3. SETUP AND INSTALLATION

This appliance is designed for built-in installation. Proper installation is crucial for safe and efficient operation. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

- Remove all packaging materials from the oven cavity and accessories.
- Inspect the oven for any damage such as dents or a broken door. Do not install if damaged.
- Retain packaging materials for future transport or disposal.

3.2 Placement and Ventilation

- Ensure the installation cabinet meets the required dimensions for a built-in appliance.
- Allow sufficient space for ventilation around the oven. Do not block any ventilation openings.

- The oven must be placed on a stable, level surface capable of supporting its weight (approximately 22.1 kg).

3.3 Electrical Connection

- Connect the oven to a properly grounded electrical outlet. The appliance operates on 230 Volts.
- Do not use extension cords or ungrounded adapters.
- Ensure the electrical circuit can handle the oven's wattage (2450 Watts maximum).

4. OPERATING INSTRUCTIONS

This microwave oven offers various cooking modes including microwave, grill, convection, defrost, and combination cooking.

4.1 Basic Microwave Cooking

1. Place food in a microwave-safe container.
2. Close the oven door securely.
3. Select the microwave function.
4. Use the rotary knob to set the desired cooking time and power level.
5. Press the Start button to begin cooking.

4.2 Grill Function

The grill function is ideal for browning and toasting. Use the provided grill rack for best results.

- Place food on the grill rack.
- Select the grill function.
- Set the desired grilling time.
- Press Start.

4.3 Convection Cooking

Convection mode uses a fan to circulate hot air, providing even cooking similar to a conventional oven.

- Preheat the oven to the desired temperature if required by the recipe.
- Place food in an oven-safe dish.
- Select the convection function and set temperature and time.
- Press Start.

4.4 Defrost Function

The defrost function allows for quick and efficient thawing of frozen foods.

- Place frozen food in a microwave-safe container.
- Select the defrost function.
- Enter the weight of the food or select the appropriate defrost program.
- Press Start.

4.5 Combination Cooking

Combination cooking combines microwave power with grill or convection heat for faster cooking and browning.

- Select the desired combination mode (e.g., Microwave + Grill, Microwave + Convection).
- Set the cooking time and power levels as per the recipe.

- Press Start.

4.6 Auto Cook Menus

The oven features 10 pre-programmed auto cook menus for common dishes. Refer to the specific menu list on the appliance or in the full manual for details on each program.

- Select the desired auto cook menu number.
- Enter the food weight if prompted.
- Press Start.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

5.1 Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior cavity with a damp cloth after each use to prevent food residue buildup.
- For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes. The steam will loosen the grime.
- Clean the glass turntable and grill rack with warm, soapy water. They are typically dishwasher safe.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid abrasive cleaners or scouring pads that can scratch the stainless steel finish.
- Clean the door seals and sealing surfaces regularly to ensure proper door closure.

6. TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker.
Food not cooking evenly	Improper stirring/turning; Food not placed centrally on turntable; Incorrect power level/time.	Stir or turn food during cooking; Ensure turntable is correctly positioned and rotating; Adjust power level and cooking time.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Excessive steam from door	High moisture content in food.	This is normal for foods with high moisture. Ensure proper ventilation.

7. SPECIFICATIONS

Brand	Faber
Model Number	131.0680.068 (FBIMWO 32L CGS)
Capacity	32 Litres
Installation Type	Built-In
Control Type	Electric Control
Oven Cooking Modes	Convection, Grill, Microwave, Defrost, Combination Cooking
Auto Cook Menus	10
Colour	Stainless Steel
Voltage	230 Volts
Wattage (Microwave Frequency)	2450 Watts
Grill Wattage	1100 Watts
Micro Mode Wattage	1550 Watts
Fuel Type	Electric
Door Orientation	Left
Material	Metal
Item Weight	22 kg 100 g
Item Dimensions (LxWxH)	46.7 x 59.5 x 38.8 Centimeters

8. WARRANTY INFORMATION

This Faber 32L Built-In Microwave Oven comes with a **2-Year Comprehensive Warranty** from the date of purchase. This warranty covers manufacturing defects and faulty workmanship under normal use conditions.

Please retain your purchase receipt as proof of warranty. The warranty does not cover damage caused by improper installation, misuse, accidents, unauthorized repairs, or normal wear and tear.

9. CUSTOMER SUPPORT

For any queries, service requests, or technical assistance, please contact Faber customer support:

- **Manufacturer:** Franke Faber India Pvt Ltd
- **Contact Number:** 1800-209-3484
- **Address:** 1086/1/2, SANASWADI, TAL - SHIRUR, PUNE - 412208, MAHARASHTRA, INDIA

When contacting support, please have your model number (FBIMWO 32L CGS or 131.0680.068) and purchase details ready.

