

GENGQIANSI BZ33-HP18WALL1-C, BZ33-HP12WALL1-C, BZ33-HP09WALL1-C, BZ33-HP30WALL2-C

Replacement Remote Control User Manual

For Breeze33 Hyper Pro Mini Split System Models: BZ33-HP18WALL1-C, BZ33-HP12WALL1-C, BZ33-HP09WALL1-C, BZ33-HP30WALL2-C

Brand: GENGQIANSI

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your new replacement remote control for Breeze33 Hyper Pro Mini Split Systems. This remote is designed to be compatible with various Breeze33 models, including BZ33-HP18WALL1-C, BZ33-HP12WALL1-C, BZ33-HP09WALL1-C, and BZ33-HP30WALL2-C. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your remote control.



Image: The remote control in a typical usage scenario, operating a mini split AC unit.

PACKAGE CONTENTS

Upon opening your package, please verify that all the following items are included:

- 1x Replacement Remote Control
- 1x Wall Mounting Bracket

Note: AAA 1.5V batteries (x2) are not included and must be purchased separately.



Image: The replacement remote control and its accompanying wall mounting bracket.

SETUP

1. Battery Installation

To power your remote control, you will need two AAA 1.5V batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the cover back into place until it clicks securely.





Image: Front view of the remote control. The battery compartment is on the reverse side.

2. Wall Mounting Bracket Installation

The included wall mounting bracket allows for convenient storage of your remote control.

1. Choose a suitable location on a wall, preferably near your mini split unit, that is easily accessible.
2. Use screws (not included) to secure the bracket to the wall. Ensure it is level and firmly attached.
3. Once installed, the remote control can be securely placed into the bracket for storage.





Image: The remote control securely placed within its wall mounting bracket.

OPERATING INSTRUCTIONS

This section details the functions of each button on your remote control and how to use them effectively.

Remote Control Buttons

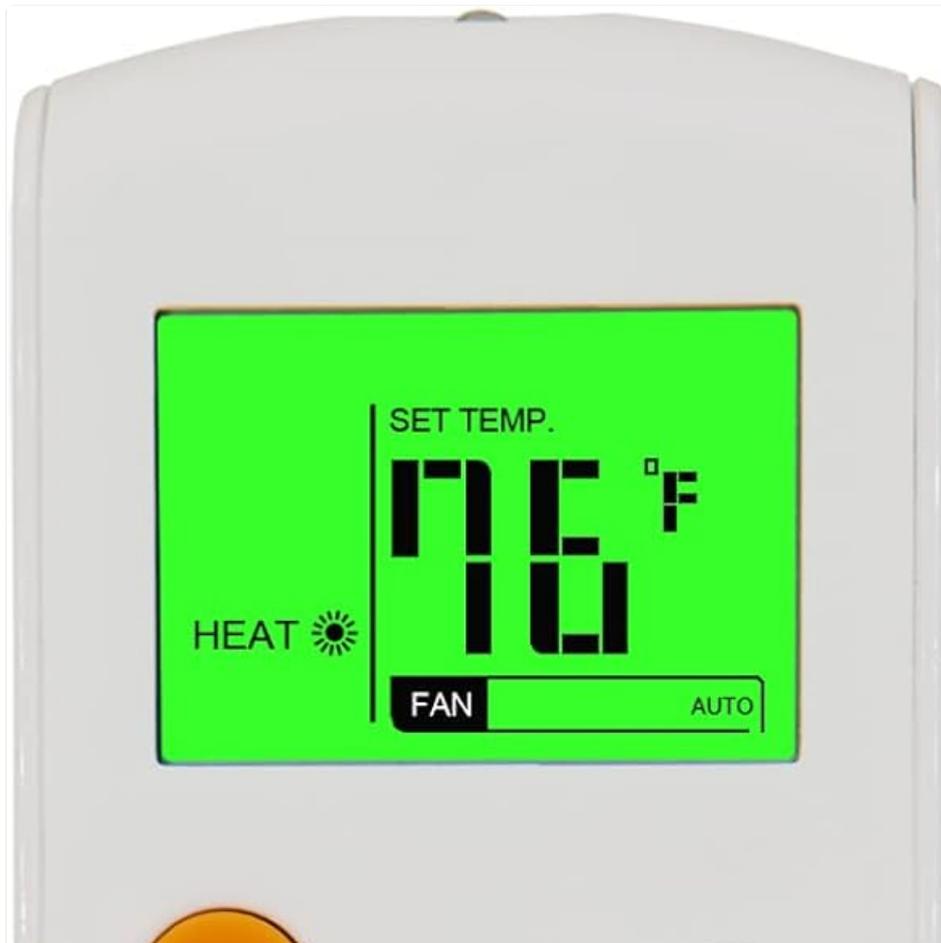




Image: A clear view of the remote control's layout, indicating the position of each button.

Button	Function
ON/OFF	Powers the mini split unit on or off.
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
FAN	Adjusts the fan speed (e.g., Low, Medium, High, Auto).
TEMP ▲ / ▼	Increases or decreases the set temperature.
SLEEP	Activates or deactivates the sleep mode for energy saving and quiet operation.
TURBO	Engages maximum cooling or heating power for rapid temperature change.

Button	Function
LED	Turns the display light on or off on the indoor unit.
SHORT CUT	Recalls a previously saved favorite setting.
TIMER ON	Sets a timer for the unit to turn on.
TIMER OFF	Sets a timer for the unit to turn off.
SWING / DIRECT ◀ / ▶	Controls the horizontal louver swing or adjusts its direction.

Temperature Unit Selection (Fahrenheit/Celsius)

This remote control supports both Fahrenheit (°F) and Celsius (°C) temperature displays. To switch between units, press and hold the **TEMP ▲** and **TEMP ▼** buttons simultaneously for approximately 3 seconds until the display changes.

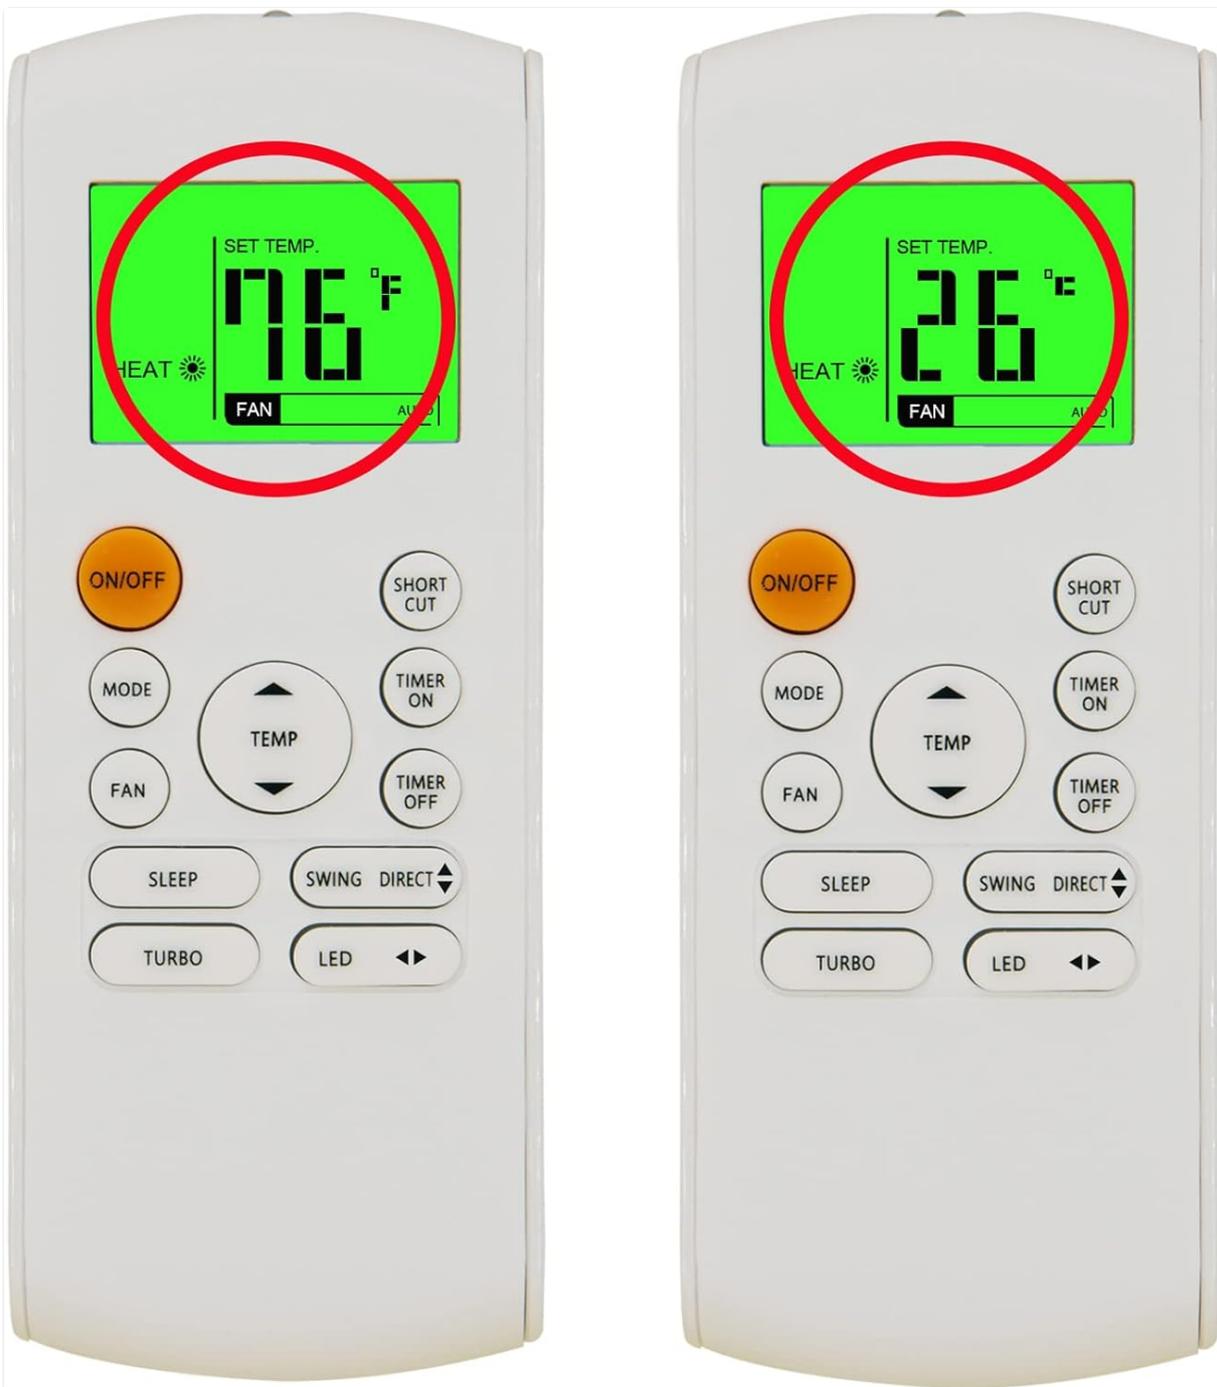


Image: The remote control display showing temperature in Fahrenheit on the left and Celsius on the right.

Green Backlight Feature

The remote control features a green backlight for improved visibility in low-light conditions. The backlight automatically activates when any button is pressed and remains on for a few seconds before fading out.



Image: A close-up view of the remote control's display with the green backlight illuminated.

Compatibility

This replacement remote control is specifically designed to be compatible with Breeze33 Hyper Pro Mini Split System models that originally used an R57 series remote. This includes, but is not limited to, the following models:

- BZ33-HP18WALL1-C
- BZ33-HP12WALL1-C
- BZ33-HP09WALL1-C
- BZ33-HP30WALL2-C

It is also compatible with various R57 series remotes such as R57B/BGE, R57B1/BGE, R57B2/BGE, RG57D/BGE, RG57A6/BGEFU1, RG57A2/BGEF, RG57K7(B)/BGEF, RG57B(B)/BGE, RG57A1(B)/BGE, RG57D1(C)/BGEF, RG57A3/BGEF, R57E1/BGEU1, RG57A7/BGEF, RG57A6/BGEF, RG57A2/BGEF, RG57A3/BGEF, RG57B/BGE.



UPGRADE!

Display in Fahrenheit



Display in Celsius



°C ⇌ °F



GREEN BACKLIGHT



Compatible with All R57 Series



R57**** / ****

R57B/BGE	RG57D1(C)/BGEF
R57B1/BGE	RG57A3/BGEF
R57B2/BGE	R57E1/BGEU1
RG57D/BGE	RG57A7/BGEF
RG57A6/BGEFU1	RG57A6/BGEF
RG57A2/BGEF	RG57A2/BGE
RG57K7(B)/BGEF	RG57A3/BGEF
RG57B(B)/BGE	RG57B/BGE
RG57A1(B)/BGE	



Image: Visual representation of the remote's features and a list of compatible R57 series models.

MAINTENANCE

Battery Replacement

When the remote control's display becomes dim or the unit does not respond to commands, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

- Always replace both batteries at the same time.
- Use new AAA 1.5V alkaline batteries for optimal performance.
- Dispose of old batteries responsibly according to local regulations.

Cleaning and Storage

To ensure the longevity of your remote control:

- Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Avoid exposing the remote to direct sunlight, high temperatures, or high humidity.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Remote control not responding.	<ul style="list-style-type: none">◦ Check if batteries are inserted correctly and have sufficient charge. Replace if necessary.◦ Ensure there are no obstructions between the remote control and the mini split unit's receiver.◦ Verify the remote is pointed directly at the indoor unit.
Display is dim or blank.	<ul style="list-style-type: none">◦ Batteries are low. Replace with new AAA batteries.
Temperature unit is incorrect (°F vs °C).	<ul style="list-style-type: none">◦ Press and hold the TEMP ▲ and TEMP ▼ buttons simultaneously for 3 seconds to switch units.
Unit does not respond to specific functions (e.g., Swing, Turbo).	<ul style="list-style-type: none">◦ Ensure the mini split unit itself supports the desired function. Some functions may vary by unit model.

SPECIFICATIONS

Feature	Detail
Model Number	BZ33-HP18WALL1-C (and compatible models: BZ33-HP12WALL1-C, BZ33-HP09WALL1-C, BZ33-HP30WALL2-C)
Brand	GENGQIANSI
Compatible Devices	Breeze33 Hyper Pro Mini Split System (R57 series compatible)
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Ergonomic design, Green Backlight, Fahrenheit/Celsius display
Power Source	2 x AAA 1.5V Batteries (not included)

SUPPORT

For further assistance or inquiries regarding your replacement remote control, please refer to the seller's contact information on the platform where the product was purchased. Ensure you have your order details and product model information ready when contacting support.

