

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bosch](#) /

› **Bosch 7 kg 5 Star Fully-Automatic Front Loading Washing Machine (WAJ24266IN, Silver, AI active water plus, In-Built Heater, BLDC Inverter motor, Steam) User Manual**

## Bosch WAJ24266IN

# Bosch 7 kg 5 Star Fully-Automatic Front Loading Washing Machine User Manual

Model: WAJ24266IN

## INTRODUCTION

Thank you for choosing the Bosch 7 kg 5 Star Fully-Automatic Front Loading Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before first use and keep it for future reference.

## SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the appliance is properly grounded and connected to a suitable power supply.
- Do not allow children to play with or operate the washing machine.
- Never force the door open during operation.
- Disconnect the appliance from the power supply before cleaning or maintenance.
- Do not install the machine in areas prone to freezing temperatures.
- Only use detergents suitable for front-loading washing machines.

## SETUP AND INSTALLATION

Proper installation is crucial for optimal performance and longevity of your washing machine.

### 1. Unpacking

Carefully remove all packaging materials. Ensure the included inlet pipe and any other accessories are present. Remove all transport bolts from the rear of the machine before use. Failure to do so will cause severe vibration and damage.

### 2. Placement

Place the washing machine on a firm, level surface. Adjust the feet to ensure stability and minimize vibration during operation. Allow adequate space around the machine for ventilation and connections.

# HEAVY DUTY

## Engineered to endure

Only in  
**BOSCH**

VED Quality Certification  
(Germany)

Reduces wrinkles by **50%**

Large Drum Size

Large paddles in drum

Unshakeable Design  
(10KGs Heavier Built)

More Stability with **3** Suspensions



Side view of the washing machine with key dimensions: 84.8 cm height, 59.8 cm width, and 59 cm depth.

### 3. Connections

- **Water Supply:** Connect the inlet pipe to a cold water tap and to the machine's water inlet valve. Ensure connections are tight to prevent leaks.
- **Drain Hose:** Securely place the drain hose into a standpipe or laundry tub, ensuring it is not kinked or blocked.
- **Power Supply:** Plug the power cord into a grounded electrical outlet.

### OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and washing programs for effective use.



Front view of the Bosch 7 kg Fully-Automatic Front Loading Washing Machine, showcasing its silver finish and control panel.

## 1. Control Panel

The machine features a touch capacitive display with 7 option buttons and an encoder for program selection. The LED + 3 pos. 7-segment display panel provides clear information on the selected program and cycle status.

## 2. Loading Laundry

Open the door and load laundry loosely into the drum. Do not overload the machine; the 7 kg capacity is suitable for 3-4 members. Ensure no items are caught in the door seal before closing.

## SoftCare Drum

Large 60L drum that offers gentle cleaning with optimal wash results

Detailed view of the SoftCare Drum, highlighting its droplet design pattern for gentle yet effective cleaning.

### 3. Adding Detergent

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent and fabric softener to their respective compartments. The self-cleaning detergent tray helps maintain hygiene.

### 4. Selecting a Wash Program

Turn the encoder to select one of the 15 available wash programs:

- Cottons
- Cottons 60° Label
- Synthetics
- Mix Load
- Delicates/Silk
- Wool
- Drum descale
- Rinse
- Spin/Drain
- Sportswear
- Jeans/Dark wash
- Shirts
- Freshen up

### 5. Special Features

- **Hygiene Steam:** Provides deep cleaning and sanitization.
- **AI Active Water Plus:** Employs 256 sensing levels to optimize water usage based on fabric and load.
- **Anti Tangle:** Reduces tangles by up to 50%, protecting your clothes.
- **Anti Wrinkle:** Minimizes wrinkles, reducing ironing time.
- **Speed Perfect:** Shortens the wash cycle duration without compromising wash performance.
- **Child Lock:** Prevents accidental changes to settings during operation.
- **Delay Start:** Allows you to set the machine to start at a later time.

# SUPERIOR FEATURES FOR YOUR FABRIC ONLY IN BOSCH



Large Drum



Steam



Speed Perfect



Anti Tangle



Anti Vibration



Foam Detection



Close-up of the washing machine door highlighting the 'Anti Tangle' feature, which reduces tangles by up to 50%.

## Bosch Wash

### No dimensional change after wash

Stretching possible, depending on fabric and handling



### No loss of seam smoothness

Seams show slight puckering and distortion



### No change of color

Fading of color & minor dye bleeding observed



### No changes in surface

Fabric feels rougher and fiber distortion is noticeable



### No fuzzing or fabric piling

Fuzzing and small pills are visible on the fabric surface



## Conventional Wash

### Dimensional change after wash

Stretching possible, depending on fabric and handling



### Loss of seam smoothness

Seams show slight puckering and distortion



### Change of color

Fading of color & minor dye bleeding observed



### Changes in surface

Fabric feels rougher and fiber distortion is noticeable



### Fuzzing or fabric piling

Fuzzing and small pills are visible on the fabric surface



Visual comparison demonstrating the benefits of Bosch Wash technology over conventional washing, showing no dimensional change, no loss of seam smoothness, no color change, and no changes in fabric surface or pilling after washing.

## 6. Starting a Cycle

Once the program and options are selected, press the Start/Pause button to begin the wash cycle.

## MAINTENANCE

Regular maintenance ensures your washing machine operates efficiently and extends its lifespan.

### 1. Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

### 2. Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to remove any residue buildup.

### 3. Drum Cleaning

Use the dedicated "Drum descale" program regularly (e.g., once a month) to clean the drum and prevent odor buildup. The Soft Care Drum design also aids in preventing fabric damage.

### 4. Filter Care

Regularly check and clean the drain pump filter (usually located at the bottom front of the machine) to remove lint and small objects that may obstruct drainage.

## TROUBLESHOOTING

Before contacting service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	No power, door not closed, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Excessive vibration during spin	Transport bolts not removed, machine not level, uneven load.	Ensure transport bolts are removed. Level the machine using adjustable feet. Redistribute laundry evenly.
Water not draining	Drain hose kinked/blocked, drain pump filter clogged.	Check drain hose for kinks. Clean the drain pump filter.
No water intake	Water tap closed, inlet hose kinked, water pressure too low.	Open water tap. Straighten inlet hose. Check household water pressure.

If the problem persists after attempting these solutions, please contact customer service.

# INSPIRED BY INNOVATION, DESIGNED FOR FABRIC CARE



We believe in going an extra mile with our German technology for utmost fabric care

Diagram illustrating the robust internal construction of the Bosch washing machine, emphasizing features like large drum size, large paddles, unshakable design, and 3 suspensions for stability, which contribute to reduced vibration.

## SPECIFICATIONS

Feature	Detail
Model	WAJ24266IN
Capacity	7 Kilograms
Energy Efficiency	5 Star
Maximum Rotational Speed	1200 RPM
Noise Level	53 dB

Feature	Detail
Item Weight	76.5 Kilograms
Product Dimensions (LxWxH)	59 x 59.8 x 84.8 Centimeters
Wattage	2300 Watts
Drum Material	Stainless Steel
Special Features	Child Lock, Hygiene Steam, Drum Clean, Delay Start, Inbuilt Heater



## GENTLER THAN HAND WASHING TÜV Certified



No damage to clothes even after 50 wash treatments



No change in dimension of fabric



No change in smoothness of fabrics



\*Test Report No: TRP/T(G)/22/003532

An overview of superior features including Large Drum, Steam, Speed Perfect, Anti Tangle, Anti Vibration, and Foam Detection.

# 1200 RPM

Faster RPM for better drying results



Illustration of the powerful 1200 RPM motor, designed for faster drying results.

## WARRANTY AND SUPPORT

Your Bosch washing machine comes with a comprehensive warranty to ensure peace of mind:

- **Comprehensive Warranty:** 2 years
- **Motor Warranty:** 12 years
- **Spare Parts Availability:** 10 years uninterrupted

For technical assistance, service requests, or to inquire about spare parts, please contact Bosch customer support. Refer to your purchase documentation for specific contact details or visit the official Bosch website.

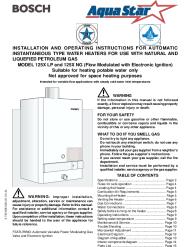
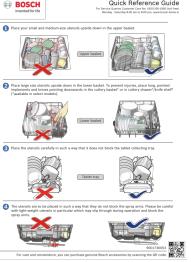
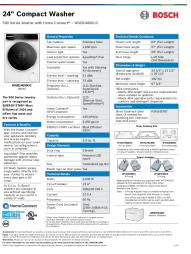
You can also visit the official Bosch store on Amazon for more information:[Bosch Store](#)

© 2024 Bosch. All rights reserved.

For more information, visit [www.bosch-home.in](http://www.bosch-home.in)

## Related Documents - WAJ24266IN

	<p><a href="#">Bosch WLX20462BY Maxx 5 SpeedEdition Washing Machine - Technical Specifications and Features</a></p> <p>Detailed technical specifications, features, dimensions, and energy efficiency data for the Bosch WLX20462BY Maxx 5 SpeedEdition automatic washing machine. Learn about its 4.5kg capacity, 1000 rpm spin speed, A-10% energy rating, and various wash programs.</p>
---	---

 <p><b>Bosch Aqua Star 125X LP/NG: Installation and Operating Instructions</b></p>	<p>Comprehensive guide for installing and operating Bosch Aqua Star 125X LP and 125X NG automatic instantaneous gas water heaters. Covers safety, installation, operation, and maintenance.</p>
 <p><b>Bosch Sensixx DS37 Steam Station: Operating Instructions, Features, and Troubleshooting</b></p>	<p>Comprehensive operating instructions for the Bosch Sensixx DS37 steam station, covering i-Temp, antiShine, Hygiene functions, maintenance, energy saving tips, and troubleshooting. Learn how to use and care for your Bosch steam iron.</p>
 <p><b>Bosch Dishwasher Quick Reference Guide: Loading and Washing Tips</b></p>	<p>A concise guide from Bosch on how to properly load your dishwasher for optimal cleaning results, along with tips for installation, settings, and recommended washing practices.</p>
 <p><b>Bosch Aqua Star 125HX LP/NG Installation and Operating Manual</b></p>	<p>Comprehensive installation, operation, maintenance, and troubleshooting guide for the Bosch Aqua Star 125HX LP and 125HX NG automatic instantaneous gas tankless water heaters. It covers safety precautions, technical specifications, gas and water connections, venting, lighting procedures, temperature settings, and component diagrams.</p>
 <p><b>Bosch 24" Compact Washer 500 Series WGB24600UC - Features, Specifications, and Installation</b></p>	<p>Explore the Bosch 24" Compact Washer, 500 Series (WGB24600UC). This ENERGY STAR® Most Efficient 2024 appliance features Home Connect®, AquaStop® Plus, and a 2.4 cu. ft. capacity. Includes detailed specifications and installation guidance.</p>