

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Vente-unique](#) /
- › [Vente-unique BUROLO 2-Seater Electric Recliner Sofa Instruction Manual](#)

Vente-unique BUROLO

Vente-unique BUROLO 2-Seater Electric Recliner Sofa Instruction Manual

INTRODUCTION

Thank you for choosing the Vente-unique BUROLO 2-Seater Electric Recliner Sofa. This manual provides essential information for the safe assembly, operation, and maintenance of your new sofa. Please read these instructions carefully before use and retain them for future reference.

Safety Information

- Keep the sofa away from heat sources or open flames to prevent fire hazards.
- Ensure all electrical connections are secure and follow local electrical safety standards.
- Do not allow children to play with the electric reclining mechanism.
- Do not exceed the maximum supported load of 240 kg.
- Always ensure there is sufficient clear space around the sofa when operating the reclining function to avoid obstructions or injury.

SETUP AND ASSEMBLY

The Vente-unique BUROLO sofa requires assembly. It is recommended that two adults perform the assembly. Ensure all components are present before beginning.

Package Contents

Your sofa is delivered in one package. Please check for any damage upon receipt.

- Sofa base unit
- Backrests (2 sections)
- Power adapter and cable
- Assembly hardware (bolts, washers, Allen key)

Assembly Steps

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Attach the backrests to the sofa base unit. Align the metal brackets on the backrests with the corresponding slots on the base. Push down firmly until they click into place.

3. Connect the electrical cables from the backrests to the main power unit located under the sofa. Ensure connections are secure.
4. Connect the power adapter to the main power unit and then plug it into a wall outlet.
5. Test the reclining function to ensure proper operation.



Figure 1: Sofa Dimensions. Length: 144 cm, Depth: 95 cm, Height: 103 cm.



Figure 2: Assembled Sofa. This image shows the sofa in its upright, non-reclined position.

OPERATING INSTRUCTIONS

The BUROLO electric recliner sofa features an easy-to-use electric reclining mechanism for optimal comfort.

Reclining Function

1. Locate the control buttons on the side of the armrest for each seating position.
2. To recline, press and hold the button that moves the backrest backward and extends the footrest. Release the button when you reach your desired reclining angle, up to 165 degrees.
3. To return to the upright position, press and hold the button that retracts the footrest and brings the backrest forward. Release the button when the sofa is fully upright.



Figure 3: Recliner Control Button. The circular button on the armrest controls the electric reclining mechanism.



Figure 4: Partially Reclined Position. This image illustrates the sofa with the footrest extended and the backrest slightly reclined.



Figure 5: Fully Reclined Position. The sofa is shown at its maximum recline angle of 165 degrees.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your sofa.

Cleaning Instructions

- For general cleaning, wipe the fabric with a clean, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- For spills, blot immediately with a clean, dry cloth. Do not rub, as this can spread the stain.
- Vacuum regularly using an upholstery attachment to remove dust and debris.

General Care

- Avoid direct sunlight exposure to prevent fading of the fabric.
- Periodically check all bolts and connections to ensure they remain tight. Retighten if necessary.
- Do not sit on the armrests or backrests, as this can cause damage.

TROUBLESHOOTING

If you encounter any issues with your sofa, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Sofa does not recline.	Power cable disconnected. Power outlet not working. Internal wiring issue.	Check if the power cable is securely plugged into the sofa and the wall outlet. Test the power outlet with another appliance. Contact customer support if the issue persists.
Reclining mechanism is noisy or stiff.	Lack of lubrication. Loose hardware. Obstruction in the mechanism.	Apply silicone-based lubricant to moving parts (avoid oil-based lubricants). Check and tighten any loose bolts or screws. Inspect for any objects obstructing the mechanism.
Fabric appears faded or discolored.	Prolonged exposure to direct sunlight. Use of harsh cleaning agents.	Relocate the sofa away from direct sunlight or use curtains/blinds. Always use a damp cloth for cleaning; avoid chemical cleaners.

SPECIFICATIONS

Brand	Vente-unique
Model	BUROLO
Type	2-Seater Electric Recliner Sofa
Color	Blue
Material (Cover)	100% Polyester Fabric
Material (Frame)	Wood, Plywood, Metal
Seating Cushioning	Polyurethane foam (Density: 28 kg/m ³)
Backrest Cushioning	Polyurethane foam flakes (Density: 15 kg/m ³)
Seating Suspension	Nosag springs, criss-cross elastic straps, helical springs
Maximum Recline Angle	165°
Maximum Supported Load	240 kg
Overall Dimensions (L x D x H)	144 cm x 95 cm x 103 cm
Seat Height	49 cm
Seat Depth	52 cm
Reclined Depth	162 cm
Assembly Required	Yes
Product Weight	68.5 kg

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to your purchase documentation or contact Vente-unique

customer service. Keep your proof of purchase for any warranty claims.

You can visit the Vente-unique store on Amazon for more information: [Vente-unique Store](#)