

Beko CEG7302B

Beko CEG 7302 B Espresso Coffee Maker Machine User Manual

Model: CEG7302B

1. INTRODUCTION

Thank you for choosing the Beko CEG 7302 B Espresso Coffee Maker Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

The Beko CEG 7302 B is designed to deliver high-quality espresso and coffee beverages with ease. It features a powerful 19-bar pressure system, a 2-liter water tank, and an intuitive LCD screen for simplified operation.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to

"off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Beko CEG 7302 B Espresso Coffee Maker Machine.



Figure 3.1: Front view of the Beko CEG 7302 B Espresso Coffee Maker Machine, showcasing the control panel, coffee

spouts, and drip tray.



Figure 3.2: Angled view of the Beko CEG 7302 B, highlighting its sleek black design and compact form factor.

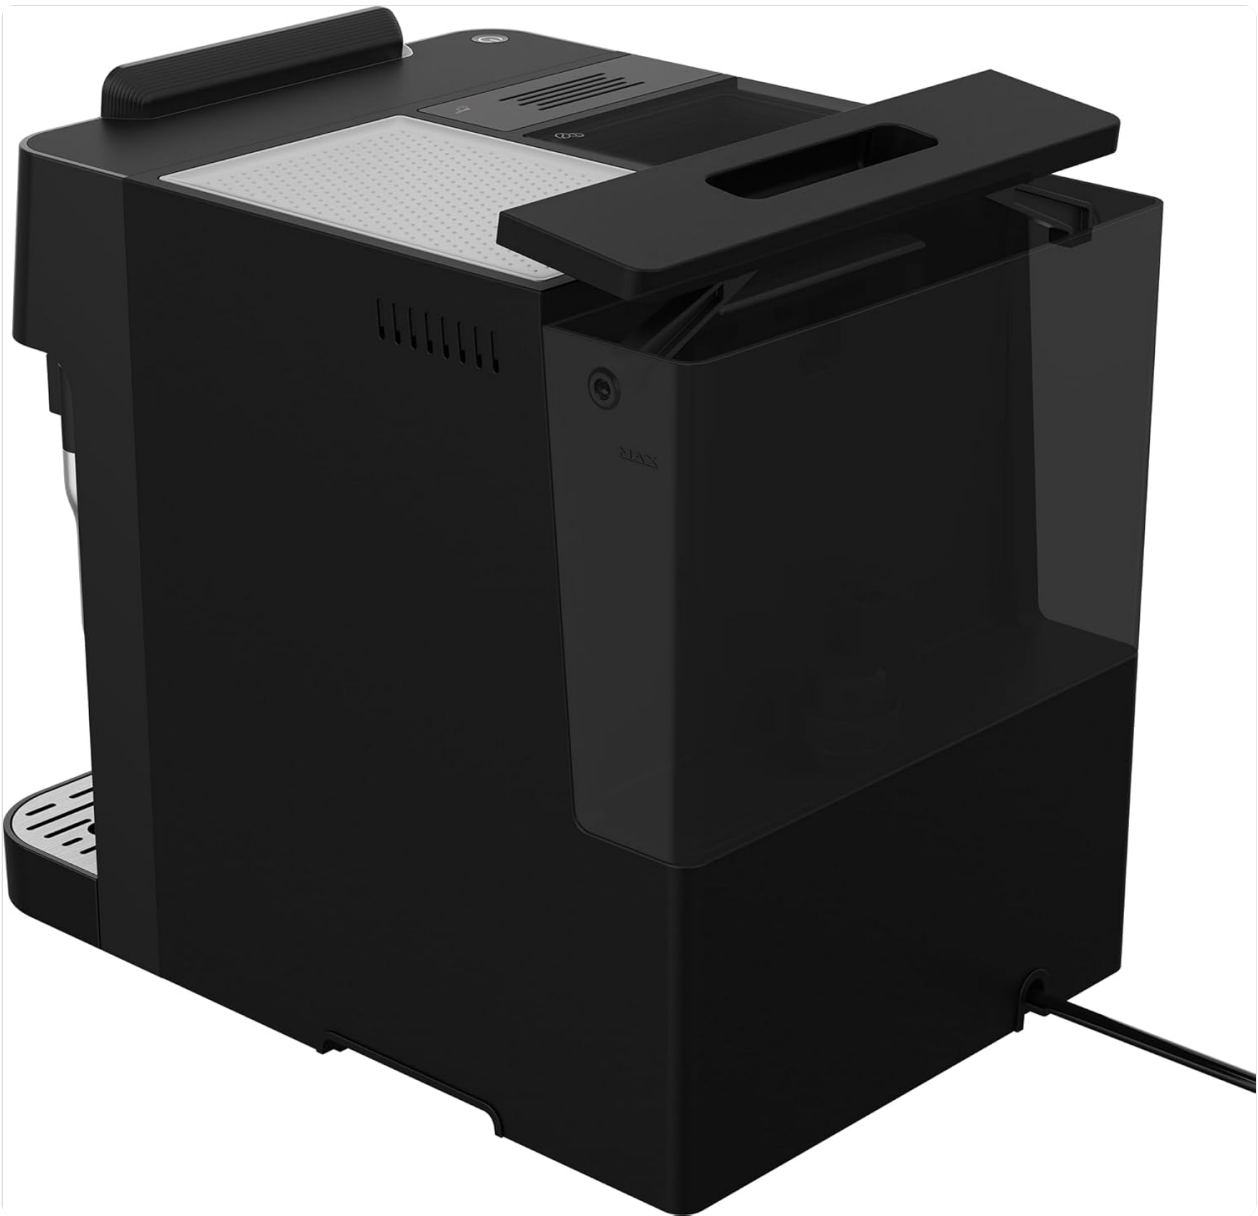


Figure 3.3: Rear view showing the removable water tank, which has a 2-liter capacity for convenient refilling.



Dual Nozzle

Brew two coffees simultaneously.

Figure 3.4: The dual nozzle system allows for brewing two cups of coffee simultaneously, enhancing efficiency.



Customise your coffee strength

GrindPro™ stainless steel grinder delivers 13 settings for custom coffee strength.

Figure 3.5: The integrated GrindPro™ stainless steel grinder with 13 settings for customizable coffee strength, shown with beans being added.



Ground Coffee or Beans

Grind your favourite coffee beans or use pre-ground coffee.

Figure 3.6: The machine supports both whole coffee beans for fresh grinding and pre-ground coffee, offering versatility.



Figure 3.7: The cup warmer feature on top of the machine helps maintain the temperature of your cups for an optimal coffee experience.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Remove all packaging materials from the appliance.
2. Check that all components are present and undamaged.
3. Place the machine on a stable, level, and heat-resistant surface.

4.2 Initial Cleaning

1. Wash the water tank, drip tray, and coffee grounds container with warm soapy water. Rinse thoroughly and dry.
2. Wipe the exterior of the machine with a damp cloth.

4.3 Filling the Water Tank

1. Remove the water tank from the back of the machine.
2. Fill the tank with fresh, cold drinking water up to the MAX line.
3. Replace the water tank securely.

4.4 Power Connection

1. Plug the power cord into a grounded electrical outlet (220 Volts).

2. Press the power button to turn on the machine. The machine will perform an initial rinse cycle.

5. OPERATING INSTRUCTIONS

5.1 Filling the Bean Hopper

1. Open the lid of the bean hopper located on top of the machine.
2. Pour fresh coffee beans into the hopper. Do not overfill.
3. Close the lid securely.

5.2 Adjusting Grind Settings

The machine features a GrindPro™ stainless steel grinder with 13 settings. To adjust the grind:

1. Locate the grind adjustment dial inside the bean hopper.
2. Turn the dial to select your desired grind fineness. Finer grinds are suitable for espresso, coarser for other coffee types.

5.3 Brewing Coffee

The LCD screen technology simplifies operation with pre-set coffee options.



Steam Wand

Enjoy a delicious foamy finish on your coffee with the integrated steam nozzle.

Figure 5.1: The intuitive color touch control display offers various pre-set coffee options like Espresso, Doppio/Double, Americano, Ristretto, and Lungo.

1. Place one or two cups under the coffee spouts. Ensure the adjustable nozzle height is set appropriately for your cup size.
2. On the touch display, select your desired coffee type (e.g., Espresso, Americano).
3. The machine will automatically grind the beans, brew, and dispense the coffee.
4. For pre-ground coffee, use the dedicated pre-ground coffee compartment (refer to specific instructions in the full manual for this feature).

5.4 Using the Steam Wand

The integrated steam wand allows you to froth milk for lattes and cappuccinos.



Colour Touch Control Display

Craft your ideal cup effortlessly with a single touch. Choose from 5 pre-set coffee options.

Figure 5.2: The steam wand allows for frothing milk to create creamy lattes and cappuccinos.

1. Fill a milk frothing pitcher with cold milk.
2. Position the steam wand into the milk.
3. Activate the steam function on the control panel.
4. Move the pitcher up and down to create foam. Turn off steam when desired temperature/texture is reached.
5. Wipe the steam wand immediately after use with a damp cloth to prevent milk residue from drying.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee machine.

6.1 Daily Cleaning

- **Drip Tray and Coffee Grounds Container:** Empty and rinse daily. The machine will indicate when the coffee grounds container needs emptying.

- **Water Tank:** Rinse daily and refill with fresh water.
- **Coffee Spouts:** Wipe with a damp cloth.
- **Steam Wand:** Clean immediately after each use to prevent milk residue buildup.



Figure 6.1: The machine features an auto-cleaning function to prevent buildup and ensure consistent coffee quality. Removable parts facilitate thorough cleaning.

6.2 Weekly Cleaning

- **Brew Unit:** Remove the brew unit (refer to the full manual for specific instructions) and rinse it under lukewarm water. Allow to air dry before reinserting.
- **Interior:** Wipe the interior of the machine where the brew unit sits with a damp cloth.

6.3 Descaling

The machine will prompt you when descaling is required. Use a descaling solution recommended by Beko and follow the instructions provided with the descaling product. Regular descaling prevents mineral buildup and maintains machine efficiency.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	No power supply.	Check if the power cord is securely plugged into the outlet and the machine. Ensure the outlet is functional.
Coffee is not hot enough.	Cups are cold; machine not preheated.	Preheat cups using the cup warmer feature or by running hot water through the machine. Allow machine to fully preheat before brewing.
No coffee dispenses.	Water tank empty; coffee beans empty; brew unit clogged.	Fill water tank. Fill bean hopper. Clean the brew unit as per maintenance instructions.
"Empty Grounds" indicator stays on.	Grounds container not properly reset; sensor issue.	Ensure the coffee grounds container is fully removed, emptied, and reinserted correctly. Sometimes, a full power cycle (unplugging for a minute) can reset sensors.
Milk not frothing properly.	Steam wand clogged; milk type/temperature.	Clean the steam wand thoroughly. Use cold, fresh milk. Ensure the steam wand is fully immersed.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Beko
Model Number	CEG7302B
Color	Black
Product Dimensions (D x W x H)	27.5 x 40.5 x 34 cm
Item Weight	9.6 Kilograms
Water Tank Capacity	2 Liters
Power / Wattage	1350 watts
Voltage	220 Volts
Pressure System	19 Bar

Feature	Specification
Material	Aluminum
Special Features	Removable Tank, Water Filter, Adjustable Nozzle Height, LCD Screen, Anti-slip feet
Coffee Maker Type	Espresso Machine
Filter Type	Reusable
Specific Uses	Espresso, Latte, Cappuccino

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Beko website. Keep your proof of purchase for warranty claims.

Beko Official Website: www.beko.com

Customer Service: Refer to your regional Beko contact information for assistance with technical issues or spare parts.