

## **Milex MMJ002**

# **Milex MMJ002 Power Juicer User Manual**

Model: MMJ002

## **INTRODUCTION**

---

Thank you for choosing the Milex Power Juicer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.



Image: Front view of the Milex MMJ002 Power Juicer, showcasing its silver and black design with the control dial visible.

## SAFETY PRECAUTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or

injury to persons, including the following:

- Read all instructions before operating the juicer.
- Do not immerse the motor base in water or other liquids.
- Ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Keep hands and utensils out of the feed chute during operation to prevent injury.
- Always ensure the safety lock is engaged before operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Milex Power Juicer:

- Motor Base (with control dial)
- Pulp Container
- Juice Collector/Pitcher
- Filter Basket (Stainless Steel)
- Juicer Cover/Lid
- Food Pusher
- Safety Locking Bar
- Cleaning Brush (Rotating self-cleaning brush)



Image: The Milex MMJ002 Power Juicer with its juice collector attached, showing the complete setup for operation.

## SETUP AND ASSEMBLY

Before first use, wash all removable parts (except the motor base) in warm, soapy water. Rinse thoroughly and dry.

1. Place the motor base on a clean, dry, and stable surface.
2. Insert the filter basket into the motor base, ensuring it is seated firmly.
3. Place the juicer cover over the filter basket, aligning the spout with the opening on the motor base.
4. Attach the pulp container to the back of the juicer cover.
5. Secure the safety locking bar by lifting it and hooking it over the juicer cover until it clicks into place. The juicer will not operate unless the locking bar is correctly secured.
6. Position the juice collector/pitcher under the juicer spout.
7. Insert the food pusher into the feed chute.



Image: The Milex MMJ002 Power Juicer fully assembled on a kitchen counter, ready for use, with fresh oranges beside it.

## OPERATING INSTRUCTIONS

Prepare your fruits and vegetables by washing them thoroughly. The extra wide chute allows for whole fruit processing for many items, reducing the need for pre-chopping. Remove large seeds or hard pits from fruits like peaches or avocados.

1. Ensure the juicer is properly assembled and the safety locking bar is engaged.
2. Plug the power cord into a 220-240V, 50Hz electrical outlet.
3. Turn the control dial to the desired speed setting:
  - **Speed 1:** For softer fruits and vegetables (e.g., oranges, grapes, tomatoes).
  - **Speed 2:** For harder fruits and vegetables (e.g., apples, carrots, celery).
  - **Speed 3:** For very hard produce or maximum extraction (e.g., beets, ginger).
  - **"Clean" Setting:** Activates the rotating self-cleaning brush for quick rinse.
4. Gradually feed fruits and vegetables into the feed chute using the food pusher. Apply gentle, even pressure. Do not force produce into the chute.
5. Allow the juicer to process the produce completely before adding more.
6. Once juicing is complete, turn the control dial to "0" (off) and unplug the appliance.

*Note: The juicer features overheat protection. If the motor overheats, the appliance will automatically shut off. Allow it to*

cool down for approximately 20-30 minutes before resuming operation.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your juicer. Always unplug the juicer before cleaning.

### Quick Clean (Using "Clean" Setting)

1. After juicing, pour a glass of water into the feed chute while the juicer is still assembled.
2. Turn the control dial to the "Clean" setting for a few seconds. This activates the rotating self-cleaning brush to rinse the filter basket.
3. Turn off and unplug the juicer.

### Thorough Cleaning

1. Unplug the juicer and disassemble all removable parts: food pusher, juicer cover, filter basket, pulp container, and juice collector.
2. Rinse all removable parts under running water to remove large pulp residues.
3. Wash these parts in warm, soapy water. Use the provided cleaning brush to thoroughly clean the mesh of the filter basket.
4. *Important:* The product care instructions state "Hand Wash Only" and "Is dishwasher safe: No". Do not place any parts in a dishwasher.
5. Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
6. Dry all parts thoroughly before reassembling or storing.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in. Safety locking bar not engaged. Overheat protection activated.	Ensure power cord is securely plugged into a working outlet. Check that the safety locking bar is fully clicked into place. Unplug and allow the unit to cool for 20-30 minutes.
Motor stops during operation.	Overload/Overheat protection activated. Too much pressure applied to food pusher.	Turn off, unplug, and allow to cool. Reduce load when restarting. Apply gentle, even pressure. Do not force produce.
Low juice yield or wet pulp.	Filter basket clogged. Incorrect speed setting for produce. Feeding produce too quickly.	Clean the filter basket thoroughly. Use a higher speed setting for harder produce. Feed produce slowly and steadily.

## SPECIFICATIONS

---

- Model Number: MMJ002

- **Power:** 1200W Motor
- **Voltage:** 220 - 240V, 50Hz
- **RPM:** 10,000 RPM
- **Color:** Silver & Black
- **Dimensions:** Approximately 38.5D x 38.5W x 45H centimetres
- **Item Weight:** Approximately 4.82 kg
- **Blade Material:** Stainless Steel
- **Special Features:** Whole Fruit Processing, Overheat Protection, Quiet Motor, Rotating Self-Cleaning Brush, Safety Lock
- **Care Instructions:** Hand Wash Only (Not Dishwasher Safe)

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your purchase or contact Milex customer service directly. Keep your proof of purchase for any warranty claims.

For further assistance or to purchase replacement parts, please visit the official Milex website or contact their authorized service centers.

**Milex Official Store:** [Milex South Africa Store](#)

© 2025 Milex. All rights reserved.