

LEHMANN LHOCV-7018

Lehmann LHOCV-7018 Tinoso Cyclonic Bagless Vacuum Cleaner User Manual

Model: LHOCV-7018

1. INTRODUCTION

Thank you for choosing the Lehmann LHOCV-7018 Tinoso Cyclonic Bagless Vacuum Cleaner. This appliance is designed for efficient and thorough cleaning of various surfaces in your home. Featuring powerful suction, a bagless design, and a HEPA filter, it offers a convenient and hygienic cleaning solution. Please read this manual carefully before using the appliance to ensure safe operation and optimal performance.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before use.
- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children.
- Unplug from the electrical outlet when not in use and before performing any maintenance or cleaning.
- Do not handle the plug or vacuum cleaner with wet hands.
- Do not vacuum up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not vacuum up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up large, hard, or sharp objects.
- Ensure the dust container and all filters are correctly installed before use.

3. PACKAGE CONTENTS

Carefully unpack your vacuum cleaner and check that all items are present and in good condition. The package should contain the following:

- Lehmann LHOCV-7018 Tinoso Vacuum Cleaner Unit
- Flexible Hose
- Telescopic Tube
- Floor Brush
- Turbo Brush (for pet hair)
- Crevice Tool
- Dusting Brush
- HEPA Filter (pre-installed or separate)
- User Manual



Image: The Lehmann LHOCV-7018 Tinoso vacuum cleaner shown with its flexible hose, telescopic tube, floor brush, turbo brush, crevice tool, and dusting brush, illustrating the complete set of included components.

4. PRODUCT OVERVIEW (COMPONENTS)

Familiarize yourself with the main parts of your vacuum cleaner:

1. **Main Unit:** Contains the motor, dust tank, and filters.
2. **Dust Tank (1.8L Capacity):** Transparent, removable container for collecting dust and debris.
3. **HEPA Filter:** Located within the dust tank assembly, designed to capture fine particles and allergens.
4. **Flexible Hose:** Connects to the main unit and the telescopic tube.
5. **Telescopic Tube:** Adjustable length tube for comfortable reach.
6. **Floor Brush:** Standard attachment for general floor cleaning.
7. **Turbo Brush:** Specialized brush with rotating bristles, ideal for pet hair and deep carpet cleaning.
8. **Crevice Tool:** Narrow attachment for cleaning tight spaces and corners.
9. **Dusting Brush:** Small brush for delicate surfaces and upholstery.
10. **Power Button:** On/Off switch.
11. **Cord Rewind Button:** Automatically retracts the power cord.
12. **Suction Control Dial:** Allows adjustment of suction power.



Image: The Lehmann LHOCV-7018 Tinoso vacuum cleaner positioned in a modern living room, showcasing its compact design and flexible hose and telescopic tube assembly.



Image: An exploded diagram illustrating the internal components of the Lehmann Tinoso vacuum cleaner, highlighting the dust collection system and filter assembly.

5. SETUP

Follow these steps to assemble your vacuum cleaner before first use:

1. **Attach the Flexible Hose:** Insert the end of the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. **Assemble the Telescopic Tube:** Connect the telescopic tube to the handle end of the flexible hose. Adjust the length of the telescopic tube by pressing the release button and sliding it to your desired height.
3. **Attach the Floor Brush:** Connect the floor brush or desired attachment to the end of the telescopic tube. Ensure it is firmly attached.
4. **Check Dust Tank and Filter:** Ensure the dust tank is empty and the HEPA filter is correctly installed before operation.



Image: The Lehmann Tinosa vacuum cleaner with its hose and telescopic tube extended, showing approximate dimensions for length, width, and height.

6. OPERATING INSTRUCTIONS

Operating your Lehmann Tinosa vacuum cleaner is straightforward:

1. **Connect to Power:** Unwind the power cord and plug it into a suitable electrical outlet (230 Volts).
2. **Power On:** Press the Power Button (usually a large red button) on the main unit to turn on the vacuum cleaner.
3. **Adjust Suction Power:** Use the Suction Control Dial to adjust the suction strength according to the surface you are cleaning. Lower suction is suitable for delicate fabrics like curtains, while higher suction is for carpets and hard floors.
4. **Select Attachment:**
 - **Floor Brush:** For general cleaning of hard floors and low-pile carpets.
 - **Turbo Brush:** Highly effective for removing pet hair and deep cleaning on carpets and rugs.
 - **Crevice Tool:** Ideal for narrow gaps, corners, and edges.

- **Dusting Brush:** Use for dusting furniture, shelves, and delicate surfaces.
5. **Vacuuming:** Move the attachment slowly and steadily over the surface to be cleaned.
 6. **Power Off:** After cleaning, press the Power Button again to turn off the vacuum cleaner.
 7. **Cord Rewind:** Press the Cord Rewind Button to automatically retract the power cord. Guide the cord to prevent it from whipping.



Image: Left: A close-up of the red dial used to adjust the vacuum's suction power. Right: A close-up of the red power button for turning the vacuum on and off.



Image: The vacuum cleaner's turbo brush attachment effectively cleaning debris from a white sofa cushion, demonstrating its utility for pet hair removal, with a small dog visible in the background.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

7.1 Emptying the Dust Tank

1. Ensure the vacuum cleaner is unplugged from the power outlet.
2. Press the dust tank release button and carefully remove the dust tank from the main unit.
3. Position the dust tank over a waste bin. Open the bottom lid of the dust tank to empty the collected debris.
4. Close the lid securely and reattach the dust tank to the main unit until it clicks into place.



Image: The Lehmann Tinoso vacuum cleaner with its transparent dust container detached from the main unit, ready for emptying or cleaning.



Image: A close-up view of the Lehmann Tinosa vacuum cleaner's dust container, highlighting its 1.8-liter capacity and the cyclonic separation mechanism.

7.2 Cleaning the HEPA Filter

The HEPA filter is washable and should be cleaned regularly to maintain suction power and air filtration efficiency.

1. Remove the dust tank as described above.
2. Carefully remove the HEPA filter from the dust tank assembly.
3. Rinse the HEPA filter under cold running water until the water runs clear. Do not use detergents or hot water.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it. Do not use a hairdryer or other heating devices.
5. Once completely dry, reinsert the HEPA filter into the dust tank assembly and reattach the dust tank to the main unit.



Image: An illustration showing the separation of the dust container, cyclonic cone, and HEPA filter, demonstrating how to access and clean the filter components.

7.3 Cleaning Attachments and Checking for Blockages

- Regularly check the floor brush, turbo brush, hose, and telescopic tube for any blockages (e.g., hair, large debris).
- Remove any obstructions to ensure optimal airflow and suction.
- Clean the brushes with a soft cloth or brush to remove tangled hair or fibers.

8. TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the power cord is securely plugged into the outlet. Check the circuit breaker.
Low suction power.	Dust tank is full.	Empty the dust tank.
	HEPA filter is dirty or blocked.	Clean or replace the HEPA filter.
	Hose, tube, or attachment is blocked.	Check for and remove any blockages.

Problem	Possible Cause	Solution
Unusual noise during operation.	Blockage in the hose or brush.	Turn off and unplug the vacuum. Check for and remove any blockages.
	Motor issue.	If the noise persists after checking for blockages, contact customer support.
Dust escaping from the vacuum.	Dust tank not properly closed or filter not installed correctly.	Ensure the dust tank is securely closed and the HEPA filter is correctly seated.

9. SPECIFICATIONS

Feature	Specification
Brand	LEHMANN
Model Name	Tinosa
Model Number	LHOCV-7018
Type	Cyclonic Bagless Canister Vacuum Cleaner
Wattage	4000 Watts
Voltage	230 Volts
Dust Tank Capacity	1.8 Liters
Filter Type	HEPA Filter (Washable)
Hose Length	1.6 Meters
Item Weight	5 Kilograms
Dimensions (L x W x H)	35L x 27W x 41H centimeters
Noise Level	79 Decibels
Power Source	Corded Electric
Special Features	Washable filter, HEPA, Lightweight, Impeccable cleaning, Bagless, Adjustable suction power
Recommended Surfaces	All floors combined (Hard floors, carpets, rugs)
Included Components	Flexible Hose, Telescopic Tube, Floor Brush, Turbo Brush, Crevice Tool, Dusting Brush

10. WARRANTY AND SUPPORT

Your Lehmann LHOCV-7018 Tinosa Cyclonic Bagless Vacuum Cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, spare parts, or warranty claims, please contact Lehmann customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

When contacting support, please have your model number (LHOCV-7018) and proof of purchase readily available.