



[Manuals.plus](#) /

› [Accutime](#) /

› Accutime SEGA Sonic The Hedgehog Smartwatch SNC4352M User Manual

Accutime SNC4352M

Accutime SEGA Sonic The Hedgehog Smartwatch (Model: SNC4352M) User Manual

Your comprehensive guide to setup, operation, and maintenance.

INTRODUCTION

This manual provides detailed instructions for the Accutime SEGA Sonic The Hedgehog Smartwatch, model SNC4352M. Please read this guide thoroughly to ensure proper use and to maximize your device's functionality.



1. SETUP

1.1 Initial Charging

Before first use, fully charge the smartwatch for at least two hours. Connect the included charging cable to the watch and a compatible USB power source.

1.2 Powering On/Off

- **To Power On:** Press and hold the side button until the screen illuminates.
- **To Power Off:** Navigate to the 'Power OFF' option in the settings menu and confirm, or press and hold the side button until the power off prompt appears.

1.3 Setting Time and Date

The watch typically synchronizes time and date when connected to a smartphone. If manual adjustment is needed, access the 'Settings' menu, then 'Time & Date' to set these parameters.

2. OPERATING INSTRUCTIONS

2.1 Touchscreen Navigation

The smartwatch features a touchscreen display. Swipe left, right, up, or down to navigate through menus and applications. Tap to select an option.

2.2 Core Functions

- **Time Display:** The main screen displays the current time and date.
- **Changeable Screens:** The watch offers multiple customizable watch faces. To change, press and hold the main screen or navigate to 'Watch Faces' in settings.



Figure 2: Examples of changeable watch faces available on the smartwatch.

- **Pedometer:** Tracks your steps throughout the day. Access the 'Pedometer' app to view your step count and activity data.
- **Heart Rate Monitor:** Measures your heart rate. Open the 'Heart Rate' app and follow on-screen instructions for an accurate reading.
- **Camera Control:** Remotely control your smartphone's camera. Ensure your watch is paired with your phone and open the 'Camera Remote' app.
- **Weather:** Provides current weather conditions. Requires connection to a smartphone with internet access.
- **Messaging:** View notifications for incoming messages from your paired smartphone.
- **Sports Modes:** Select various sports activities to track performance.
- **Music Control:** Control music playback on your paired smartphone (play, pause, skip tracks).
- **Alarm:** Set alarms for reminders.
- **Timer:** Use the countdown timer function.
- **Stopwatch:** Utilize the stopwatch for timing events.
- **Calculator:** Access a basic calculator function.

2.3 Adjusting Settings

Access the 'Settings' menu to adjust brightness, vibration, and other device preferences.

3. MAINTENANCE

3.1 Cleaning

Wipe the watch screen and strap with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the device.

3.2 Battery Care

To prolong battery life, avoid exposing the watch to extreme temperatures. Charge the battery regularly, even if the watch is not in frequent use.

3.3 Storage

When storing the watch for extended periods, ensure it is partially charged and kept in a cool, dry place.

4. TROUBLESHOOTING

4.1 Watch Not Powering On

Ensure the watch is fully charged. Connect it to the charger for at least 30 minutes before attempting to power it on again.

4.2 Difficulty Setting Time

If you are unable to set the time manually, ensure the watch is not in a mode that overrides manual settings (e.g., connected to a phone that automatically sets time). Try performing a 'Reset' from the settings menu if issues persist.

4.3 Inaccurate Sensor Readings (Pedometer, Heart Rate)

Ensure the watch is worn snugly on your wrist, but not too tight. Clean the sensor on the back of the watch. Movement artifacts or improper placement can affect accuracy.

4.4 Connectivity Issues

If the watch is not connecting to your smartphone, ensure Bluetooth is enabled on both devices and they are within range. Try unpairing and re-pairing the devices.

4.5 Screen Unresponsive or Insensitive

Ensure the screen is clean and dry. A screen protector, if applied incorrectly, might affect touch sensitivity. If the issue persists, try restarting the watch. If unresponsive, a hard reset might be necessary (refer to 'Reset' option in settings or contact support).

5. SPECIFICATIONS

Feature	Detail
Model Number	SNC4352M

Package Dimensions	6.46 x 4.17 x 2.64 inches
Item Weight	6.17 ounces
Department	Unisex-Adult
Batteries	1 Lithium Ion battery (included)
Manufacturer	Accutime Watch Corp.
First Available	August 11, 2023

6. WARRANTY INFORMATION

This Accutime smartwatch comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, please refer to the documentation included with your product or contact Accutime customer support.

7. SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official Accutime website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

