### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Dirt Devil /
- > Dirt Devil 7-in-1 Handheld Steamer Instruction Manual

#### **Dirt Devil WD21000**

# Dirt Devil 7-in-1 Handheld Steamer

Model: WD21000

### INTRODUCTION

The Dirt Devil 7-in-1 Handheld Steamer is a versatile and powerful cleaning device designed for various household surfaces. It utilizes pressurized steam for effective, chemical-free cleaning, making it suitable for tackling stubborn dirt and grime on tile, appliances, kitchen surfaces, upholstery, and more. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your steamer.

### SAFETY INFORMATION

# **Important Safeguards**

When using an electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using this appliance.
- Do not direct steam at people, animals, or electrical outlets. Steam is extremely hot and can cause burns.
- . Use only distilled or demineralized water in the water tank to prevent mineral buildup and extend the life of the unit.
- Always unplug the steamer from the electrical outlet when not in use and before performing any maintenance or cleaning.
- Do not leave the steamer unattended while it is plugged in or operating.
- Keep the appliance and its cord out of reach of children.
- Do not immerse the steamer in water or any other liquid.
- Ensure the water tank cap is securely tightened before operation. Do not attempt to open the cap while the unit is pressurized or hot.
- Use only attachments recommended by the manufacturer.


### PRODUCT OVERVIEW



The Dirt Devil 7-in-1 Handheld Steamer shown with its full set of specialized cleaning tools.

# Components

- Handheld Steamer Unit
- Measuring Cup
- Hose
- Adaptor
- Squeegee
- Clothes Steamer
- Grout Brush
- Flat Scraper
- Curved Pinpoint Nozzle
- Bristle Brush
- Brass Wire Brush

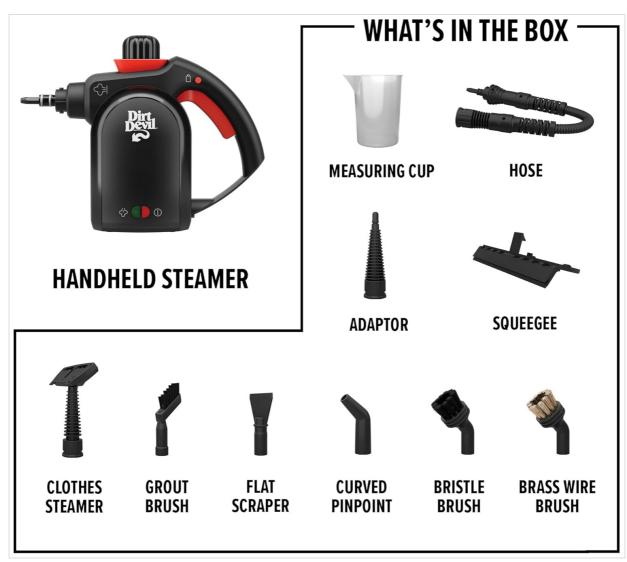


Visual representation of all items included in the product packaging.

# **Key Features**

- 7-in-1 Versatility: Equipped with 7 specialized accessories for diverse cleaning tasks.
- Pressurized Steam: Delivers powerful steam to remove stubborn dirt and grime.
- 100% Chemical-Free Cleaning: Cleans and sanitizes using only water, eliminating the need for harsh chemicals.
- XL Water Tank (250 ml / 8.5 oz): Allows for longer cleaning sessions with fewer refills.
- No-Spill Reservoir: Designed for convenient and mess-free water filling and drainage.
- Precise Steam Control: Features a variable trigger and safety lock for controlled steam output.
- Lightweight and Portable: Compact design for easy handling and storage.



The XL water tank allows for extended cleaning without frequent refills.

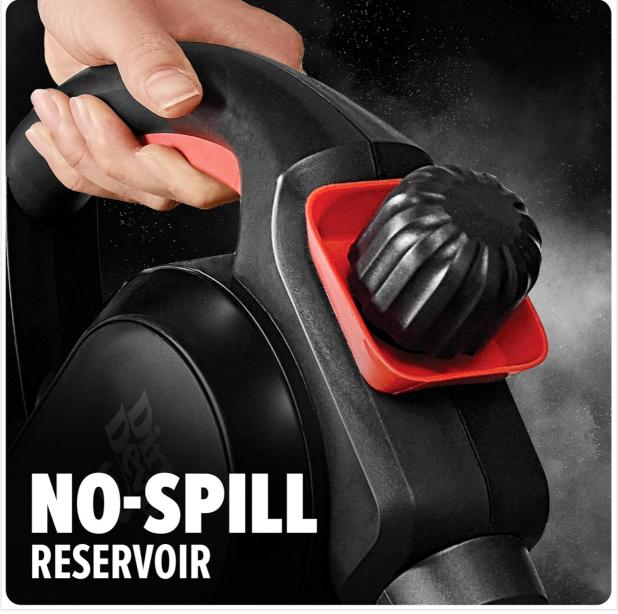

The no-spill reservoir cap ensures clean and easy water management.

# **SETUP**

### **Before First Use**

Unpack all components and ensure all parts are present and undamaged. Familiarize yourself with the steamer unit and its accessories.

# **Filling the Water Tank**

- 1. Ensure the steamer is unplugged and cool.
- 2. Unscrew the water tank cap counter-clockwise.
- 3. Using the provided measuring cup, carefully fill the water tank with up to 250 ml (8.5 oz) of distilled or demineralized water. Do not overfill.
- 4. Replace the water tank cap and turn clockwise until securely tightened.

# **Attaching Accessories**

Select the appropriate cleaning tool for your task. Align the accessory with the nozzle or hose connection point and twist or push firmly until it clicks into place. Ensure a secure connection before operating.

### **OPERATING INSTRUCTIONS**

# **Powering On and Heating**

- 1. After filling the water tank and attaching the desired accessory, plug the steamer into a standard 120V AC electrical outlet
- 2. The indicator light will illuminate, signaling that the unit is heating up.
- 3. Allow approximately 2-3 minutes for the steamer to reach its operating temperature. The indicator light may change or turn off when ready, depending on the model.

# **Using the Steamer**

- 1. Point the nozzle or attached accessory towards the surface to be cleaned.
- 2. Press and hold the steam trigger to release steam. For continuous steam, engage the safety lock if available.
- 3. Move the steamer slowly over the surface, allowing the steam to penetrate and loosen dirt.
- 4. For stubborn areas, hold the steamer closer for a few seconds.
- 5. Wipe away loosened dirt and moisture with a clean cloth.



The variable trigger allows for precise control of steam output.

# **Cleaning Different Surfaces**

- Kitchen Surfaces: Use the bristle brush or flat scraper for stovetops, countertops, and sinks.
- Bathroom Surfaces: The grout brush is ideal for tile grout, while the curved pinpoint nozzle can reach tight spaces around fixtures.
- Fabrics and Upholstery: Attach the clothes steamer tool to refresh garments, drapes, and upholstery. Test on an


• Windows and Mirrors: Use the squeegee attachment for streak-free cleaning.



Achieve 100% chemical-free cleaning on various surfaces, including inside refrigerators.



Powerful pressurized steam effectively cleans tile and grout in bathrooms.

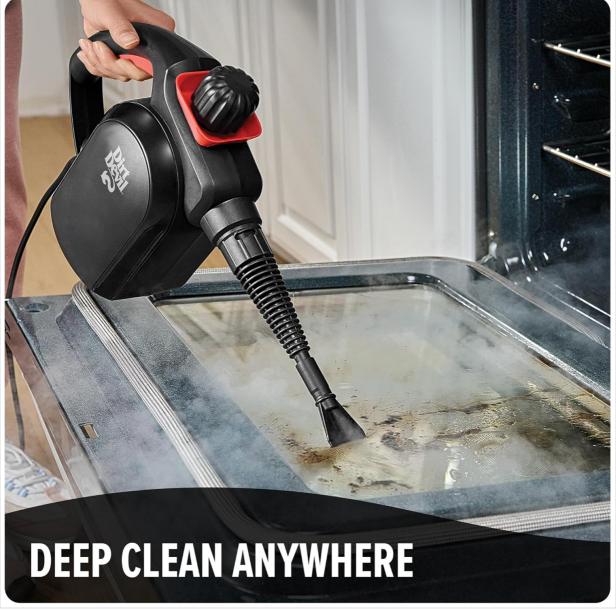

The steamer is capable of deep cleaning in hard-to-reach areas, such as oven interiors.

# MAINTENANCE AND CARE

# **Draining and Storing**

- 1. After each use, unplug the steamer and allow it to cool completely.
- 2. To safely remove the water tank cap, first depressurize the unit by holding the steam trigger until no more steam is released.
- 3. Carefully unscrew the water tank cap and empty any remaining water.
- 4. Store the steamer and its accessories in a cool, dry place.

# **Cleaning Accessories**

Wipe down all accessories with a damp cloth after use. For brushes, rinse under water and allow to air dry. Do not use harsh chemicals or abrasive cleaners on any part of the steamer or its accessories.

### **T**ROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Unit not heated sufficiently. Nozzle/accessory clogged.	Refill water tank. Allow 2-3 minutes for heating. Check and clear any blockages in the nozzle or accessory.
Water leaking from unit.	Water tank cap not securely tightened.  Tank overfilled. Accessory not properly attached.	Ensure water tank cap is tightly closed. Do not overfill the tank. Reattach accessory firmly.
Cannot open water tank cap.	Unit is still pressurized.	Unplug the unit and hold the steam trigger until all steam is released and the unit is depressurized. Allow to cool before attempting to open.
Steamer not turning on.	Not plugged in. Power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet. Test the outlet with another appliance.

# **SPECIFICATIONS**

Feature	Detail
Model Name	Dirt Devil 7-in-1 Handheld Steamer
Model Number	WD21000
Brand	Dirt Devil
Power Source	Corded Electric
Voltage	120 Volts (AC)
Wattage	1000 watts
Item Weight	5 Pounds
Tank Volume / Capacity	250 Milliliters (8.5 oz)
Product Dimensions	12 x 5 x 9.5 inches
Form Factor	Handheld
Color	Black
Surface Recommendation	Multi-Surface
Special Features	Lightweight, No-Spill Reservoir, Steam Control

# WARRANTY AND SUPPORT

This Dirt Devil product is covered by a limited warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical assistance, replacement parts, or warranty claims, please contact Dirt Devil Customer Service:

Website: Visit the official Dirt Devil website for support resources.

**Phone:** Refer to your product packaging or the Dirt Devil website for customer service contact numbers.

When contacting support, please have your model number (WD21000) and purchase information readily available.



#### Dirt Devil Multi-Function Steam Cleaner User Guide

Comprehensive user guide for the Dirt Devil Multi-Function Steam Cleaner (5-in-1 and 11-in-1), covering safety precautions, assembly, operation, maintenance, and troubleshooting.



#### Dirt Devil DD7001 Multifunctional Steam Mop Instruction Manual

Comprehensive instruction manual for the Dirt Devil DD7001 Multifunctional Steam Mop. Learn how to safely assemble, operate, and maintain your 2-in-1 steam cleaner for effective cleaning of various household surfaces.



#### Dirt Devil Handheld Steamer User Manual - Instructions and Warranty

Comprehensive user manual for the Dirt Devil Handheld Steamer, including assembly, usage instructions, safety warnings, cleaning tips, and warranty information.



### Dirt Devil Scorpion Hand Vac Instruction Manual

Comprehensive instruction manual for the Dirt Devil Scorpion Hand Vac, detailing safety precautions, features, operation, maintenance, troubleshooting, and warranty information. Includes guidance on filter and dirt cup care, and battery disposal.



#### Dirt Devil Scorpion Handheld Vacuum Cleaner Instruction Manual

This document provides comprehensive instructions for operating and maintaining the Dirt Devil Scorpion handheld vacuum cleaner. It includes safety warnings, feature descriptions, usage guides for attachments, troubleshooting tips, and warranty information.



# <u>Dirt Devil Vibe 3-in-1 Vacuum Cleaner Owner's Manual and Operating Instructions</u>

Comprehensive guide for the Dirt Devil Vibe 3-in-1 Vacuum Cleaner (SD20020), covering assembly, operation, maintenance, troubleshooting, and warranty information.