

[manuals.plus](#) /

- › [Topteng](#) /
- › [Topteng 200W COB LED Stage Spotlights User Manual](#)

Topteng 200W COB LED

Topteng 200W COB LED Stage Spotlights User Manual

Model: 200W COB LED

1. INTRODUCTION

Thank you for purchasing the Topteng 200W COB LED Stage Spotlight. This manual provides essential information for the safe and efficient operation of your new stage lighting fixture. Please read this manual thoroughly before installation and use, and retain it for future reference.



Figure 1.1: Topteng 200W COB LED Stage Spotlight with barn doors attached.

2. SAFETY INFORMATION

To ensure safe operation, please observe the following precautions:

- Always disconnect the power supply before cleaning, servicing, or installing the fixture.
- Ensure proper grounding to avoid electrical shock.
- Do not operate the fixture if the power cord is damaged.
- Avoid direct eye exposure to the light source.
- Install the fixture in a well-ventilated area, away from flammable materials.
- Ensure the mounting surface or structure can support the weight of the fixture.
- This product is designed for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present and in good condition upon unpacking:

- 1 x Topteng 200W COB LED Stage Spotlight
- 1 x Barn Door Assembly
- 1 x Power Cable
- 1 x User Manual (this document)



Figure 3.1: Product with detachable barn doors.

4. PRODUCT FEATURES

The Topteng 200W COB LED Stage Spotlight offers advanced features for versatile lighting applications:

- **High Power COB LED:** Features a 200W COB LED providing super bright warm white (3200K) and cool white (5600K) light.
- **2-in-1 Light Source:** Combines warm and cool white LEDs for flexible color temperature control.
- **Multiple Operating Modes:** Supports Sound-Active, Master-Slave, Auto Running, and DMX512 modes.

- **Barn Doors Included:** Adjustable barn doors allow for precise control over light beam shaping and spill.
- **Robust Construction:** Durable metal housing designed for stage environments.
- **Easy Installation:** Equipped with flexible dual mounting brackets and durable knobs for ceiling, shelf, or floor placement.
- **Effective Range:** Provides an effective lighting range of up to 10 meters.



Figure 4.1: Demonstration of warm and cool white light output.

5. SETUP

5.1 Physical Installation

1. **Unpack:** Carefully remove the fixture and all components from the packaging.
2. **Attach Barn Doors:** If not already attached, secure the barn door assembly to the front of the light fixture using the provided screws or clips.
3. **Mounting:**

- For floor placement, ensure the dual mounting brackets are adjusted to provide a stable base.
- For ceiling or truss mounting, use appropriate clamps (not included) with the mounting brackets. Ensure all connections are secure and use a safety cable as an additional precaution.

4. **Positioning:** Adjust the angle of the light using the knobs on the side of the mounting brackets.

5.2 Electrical Connection

- Connect the provided power cable to the power input on the rear of the fixture.
- Plug the other end of the power cable into a suitable grounded power outlet (AC 110V-240V, 50/60Hz).
- Ensure the power source matches the fixture's voltage requirements.

5.3 DMX Connection (Optional)

- For DMX control, connect a DMX cable (3-pin XLR) from your DMX controller's output to the DMX IN port on the fixture.
- For multiple fixtures, daisy-chain them by connecting the DMX OUT of the first fixture to the DMX IN of the next, and so on.
- Set the DMX address for each fixture using the control panel on the rear of the unit. Refer to the DMX Channel Chart in Section 6.4 for specific channel functions.



Figure 5.1: Various views of the light, including the rear control panel for connections and settings.

6. OPERATING MODES

The fixture can be operated in several modes, selectable via the control panel on the rear of the unit.

6.1 Control Panel Overview

The control panel typically includes a digital display and buttons (MENU, UP, DOWN, ENTER) for navigation and selection.



Figure 6.1: Rear control panel with display and buttons.

6.2 Auto Running Mode

In Auto Running mode, the fixture cycles through pre-programmed light sequences and effects automatically. Use the MENU button to navigate to the Auto mode setting, then use UP/DOWN to select different auto programs or speeds, and ENTER to confirm.

6.3 Sound-Active Mode

The Sound-Active mode allows the light to react to ambient sound or music via its built-in microphone. Navigate to the Sound-Active mode setting using the MENU button. You may be able to adjust the sound sensitivity using the UP/DOWN buttons.

6.4 Master/Slave Mode

This mode allows multiple fixtures to synchronize their operation without a DMX controller. Connect the DMX OUT of the "Master" fixture to the DMX IN of the first "Slave" fixture, and continue daisy-chaining. Set the Master fixture to an Auto or Sound-Active mode, and set all Slave fixtures to Slave mode. The Slave fixtures will then mimic the Master's behavior.

6.5 DMX512 Mode

For professional control, use DMX512 mode. Set the fixture's DMX address using the control panel. The DMX address determines the starting channel for the fixture on the DMX universe. Consult the DMX channel chart below for specific functions.

DMX Channel Chart (Example - refer to product-specific DMX manual for exact details)

Channel	Function	Value Range	Description
1	Dimmer	0-255	Overall intensity (0% to 100%)
2	Warm White	0-255	Warm white intensity (0% to 100%)
3	Cool White	0-255	Cool white intensity (0% to 100%)
4	Strobe	0-255	Strobe speed (slow to fast)
5	Mode Select	0-255	Selects auto programs or sound active mode

Your browser does not support the video tag.

Video 6.1: Demonstration of light effects and modes.

This video showcases the various lighting effects and transitions possible with the Topteng 200W COB LED Stage Spotlight, including changes in brightness and color temperature.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your fixture.

- Cleaning:** Periodically clean the lens and exterior housing with a soft, lint-free cloth. Do not use abrasive cleaners or solvents.
- Fan and Vents:** Ensure cooling fans and ventilation openings are clear of dust and debris to prevent overheating. Use compressed air if necessary.
- Cable Inspection:** Regularly inspect power and DMX cables for any signs of damage, fraying, or loose connections. Replace damaged cables immediately.
- Storage:** When not in use, store the fixture in a dry, dust-free environment, preferably in its original packaging or a protective case.

8. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable disconnected; no power from outlet; blown fuse.	Check power cable connection; test outlet with another device; check and replace fuse if necessary.
Light not responding to DMX	Incorrect DMX address; faulty DMX cable; DMX terminator missing; incorrect DMX mode.	Verify DMX address matches controller; check DMX cable integrity; use a DMX terminator on the last fixture; ensure fixture is in DMX mode.
Light flickering or unstable	Loose power connection; power fluctuations; DMX signal issues.	Secure power cable; use a stable power source; check DMX connections and signal quality.

Problem	Possible Cause	Solution
Overheating	Blocked ventilation; operating in high ambient temperature.	Clear all vents and fans; ensure adequate airflow around the fixture; operate within specified temperature ranges.

9. SPECIFICATIONS

Attribute	Detail
Model	200W COB LED
Light Source	200W COB LED (Warm White 3200K & Cool White 5600K)
Voltage	AC 110-240V, 50/60Hz
Power Consumption	200W
Control Modes	Sound-Active, Master-Slave, Auto Running, DMX512
DMX Channels	(Varies by mode, typically 5-9 channels)
Material	Metal
Color	Black
Dimensions (L x W x H)	14.96 x 10.24 x 10.24 inches (38 x 26 x 26 cm)
Weight	7.28 pounds (3.3 kg)
Effective Range	Up to 10 meters



Figure 9.1: Product dimensions.

10. WARRANTY AND SUPPORT

Topteng products are manufactured to high quality standards. For warranty information and technical support, please refer to the warranty card included with your purchase or contact Topteng customer service directly.

Customer Service Contact: Please visit the official Topteng website or refer to your purchase documentation for the most current contact information.

