

GENGQIANSI Replacement Remote Control for AC-10D

GENGQIANSI Replacement Remote Control for EUHOMY
AC-10D Portable Air Conditioner
User Manual

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your GENGQIANSI Replacement Remote Control for the EUHOMY AC-10D Portable Air Conditioner. This remote control is designed to function without any programming, offering direct compatibility with the specified air conditioner model.

PACKAGE CONTENTS

- 1 x Replacement Remote Control
- 1 x Wall Mounting Bracket





Image: The replacement remote control shown alongside its included wall mounting bracket.

Note: AAA 1.5V batteries (x2) are not included and must be purchased separately.

SETUP

1. Battery Installation

To install batteries, follow these steps:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two (2) AAA 1.5V batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the cover back into place until it clicks securely.



Image: Rear view of the remote control with the battery compartment open, illustrating the correct placement for two AAA batteries.





Image: The back of the remote control, showing the closed battery compartment and a label with important usage notes.

2. Initial Use

This replacement remote control requires no programming. Once batteries are installed, it is ready for immediate use with your EUHOMY AC-10D Portable Air Conditioner.



Image: A portable air conditioner unit is shown next to a window, with the remote control mounted on the wall, demonstrating typical setup.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal control of your air conditioner.





Image: Front view of the remote control, clearly displaying the LCD screen and all control buttons.

Button Functions

Button	Function
Power (Red Circle with Line)	Turns the air conditioner ON or OFF.
Mode (Three Horizontal Lines with Arrow)	Cycles through operating modes (e.g., Cool, Fan, Dry, Heat - depending on AC model).
Temperature Up (Up Arrow)	Increases the set temperature.
Temperature Down (Down Arrow)	Decreases the set temperature.
Fan Speed (Fan Icon)	Adjusts the fan speed (e.g., Low, Medium, High, Auto).

Button	Function
Timer (Clock Icon)	Sets the timer for automatic ON/OFF operations.
Swing (Two Overlapping Squares)	Activates or deactivates the air swing function.
°C/°F (Celsius/Fahrenheit)	Switches the temperature display between Celsius and Fahrenheit.
Child Lock (Note on back)	Press the "Temperature Down" and "Temperature Up" buttons simultaneously to activate/deactivate the child lock function.

Display Information

The LCD screen on the remote control displays the current settings, including:

- Set Temperature
- Operating Mode
- Fan Speed
- Timer Status (if active)
- Temperature Unit (°C or °F)



Image: An angled view of the remote control, emphasizing the clear LCD display and the arrangement of its buttons.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's display becomes dim or its responsiveness decreases. Always replace both batteries simultaneously with new AAA 1.5V batteries. Do not mix old and new batteries or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the air conditioner's receiver.
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace old batteries with new AAA 1.5V batteries.
 - Ensure there are no obstructions between the remote and the air conditioner.
- **Display is dim or blank:**
 - Replace the batteries.

SPECIFICATIONS

Feature	Detail
Brand	GENGQIANSI
Compatible Devices	EUHOMY AC-10D Portable Air Conditioner
Battery Type	2 x AAA 1.5V (not included)
Controller Type	Button Control
Special Feature	Ergonomic design, Fahrenheit and Celsius display

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information regarding the remote control itself, please refer to the seller's policy or contact the seller directly. For support related to the EUHOMY AC-10D Portable Air Conditioner, please refer to its original manufacturer's documentation.

For further assistance with this GENGQIANSI replacement remote control, please contact your point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CFHQ6ZY7>

More documents and user manuals: <https://manuals.plus/>