

WOWOTO M8

Generic Remote Control User Manual for WOWOTO Projectors

Compatible with WOWOTO M8, H8, T8E, T9, M5S, WWT-M5S, WWT-M7S Projectors

INTRODUCTION

This document provides essential instructions for the setup and basic operation of your new Generic replacement infrared remote control. This remote is designed to be compatible with various WOWOTO projector models, including M8, H8, T8E, T9, M5S, WWT-M5S, and WWT-M7S. Please note that this is a replacement remote and may not offer all functions of the original remote. No batteries or detailed instructions are included with the product itself, making this manual a crucial resource.

For optimal performance, ensure your projector model is listed above. If your model is not listed, this remote may not be compatible.

SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote and must be purchased separately.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for inserting two AAA batteries.

OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology, requiring a direct line of sight between the remote's emitter and the projector's IR receiver. Ensure there are no obstructions between the remote and the projector when operating.



Image: Front view of the remote control, highlighting the layout and functions of each button.

Button Functions:

- **Power Button (●):** Located at the top left, press to turn the projector on or off.
- **F+ / F- (Focus Adjustment):** These buttons are typically used to adjust the focus of the projector lens.
- **Navigation Pad (Up, Down, Left, Right, OK):** Use these directional buttons to navigate through menus and select options. The "OK" button confirms selections.
- **Back/Return Button (↵):** Returns to the previous screen or menu.
- **Home Button (△):** Direct access to the projector's main home screen or interface.
- **Menu/Source Button (☰ or similar icon):** Opens the projector's main menu or cycles through input sources.
- **Volume Down () / Volume Up ():** Adjusts the audio output level.
- **Mute Button ():** Toggles the audio mute function.
- **Other Buttons (e.g., Cube icon, 'X' icon):** These buttons may have specific functions depending on your projector model, such as 3D mode, quick settings, or exit functions. Refer to your projector's manual for details on these specific buttons.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with fresh AAA batteries.
 - Check for any obstructions between the remote and the projector's IR receiver.
 - Ensure you are within the effective range and pointing the remote directly at the projector.
- **Certain Functions Not Working:**
 - This is a replacement remote. Some advanced or specific functions of your original projector remote may not be supported.
 - Verify that your projector model is explicitly listed as compatible in the introduction section of this manual.
- **Intermittent Operation:**
 - Weak batteries can cause intermittent operation. Replace them.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

SPECIFICATIONS

Brand	Generic
Compatible Devices	WOWOTO Projectors (M8, H8, T8E, T9, M5S, WWT-M5S, WWT-M7S)
Connectivity Technology	Infrared (IR)

Controller Type	Button Control
Power Source	2 x AAA Batteries (not included)
Model Number (Example)	WOWOTO M8 (Remote is compatible with multiple models)

WARRANTY AND SUPPORT

This Generic replacement remote control comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

As this is a generic replacement product, direct technical support from the original projector manufacturer (WOWOTO) is not available for this remote. For any issues related to the remote control itself, please contact the seller or retailer from whom you purchased the product. Ensure to clearly state the product's ASIN (B0CFKM52X2) when seeking support.