

Easytry21224

Instruction Manual: Generic Replacement Remote Control

For Samsung SMT-C5400, SMT-G7400, SMT-G7401 Horizon HD TV Mediabox

1. PRODUCT OVERVIEW

This document provides instructions for the Generic Infrared Replacement Remote Control, designed for use with Samsung SMT-C5400, SMT-G7400, and SMT-G7401 Horizon HD TV Mediabox models. This remote is an infrared (IR) replacement and functions identically to the original remote control for these specific models.



Image 1: Front (left) and back (right) view of the replacement remote control. The front features standard TV and Mediabox controls, while the back includes a full QWERTY keyboard.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Note: Batteries are not included with this replacement remote control.

2.2 Initial Use

This replacement remote control is an infrared (IR) device and requires no setup, programming, or code entry. Once batteries are installed, it is ready for immediate use with compatible Samsung SMT-C5400, SMT-G7400, and SMT-G7401 Mediabox models.



Image 2: Angled view of the remote control, highlighting both the primary control panel and the QWERTY keyboard on the reverse side.

3. OPERATING THE REMOTE CONTROL

Point the remote control directly towards your Samsung Mediabox. Ensure there are no obstructions between the remote and the Mediabox's IR receiver.

- **Power Button:** Located at the top, typically labeled "TV" and "BOX" to control power for your television and mediabox.
- **Numeric Keypad:** Use for direct channel entry or other numerical inputs.
- **Navigation Pad:** Central directional buttons (Up, Down, Left, Right) with an "OK" button in the center for menu navigation and selection.
- **Menu/Back Buttons:** Access menus and return to previous screens.

- **Volume/Channel Controls:** Dedicated buttons for adjusting volume (VOL +/-) and changing channels (CH +/-).
- **Playback Controls:** Buttons for Play, Pause, Stop, Rewind, Fast Forward, and Record for media playback.
- **QWERTY Keyboard (on reverse side):** For easier text input in search functions or smart TV applications.

Refer to your Samsung Mediabox's original user manual for specific functions of each button as they relate to your device's interface.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, which can damage the remote's electronics.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the Mediabox's IR receiver.
 - Ensure you are pointing the remote directly at the Mediabox.
- **Certain buttons not working:**
 - This remote is a direct replacement. If specific functions do not work, verify that your Mediabox model (SMT-C5400, SMT-G7400, SMT-G7401) is explicitly supported.
 - Ensure the remote is clean and free of debris that might obstruct button presses.
- **Compatibility Issues:**

This remote is specifically designed for the models listed. If your Mediabox model is not SMT-C5400, SMT-G7400, or SMT-G7401, this remote may not be compatible. Always verify compatibility with your original remote or device manual before purchase.

6. SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Number	Easytry21224
Connectivity Technology	Infrared (IR)

Controller Type	Button Control
Number of Batteries Required	2 AAA batteries
Special Feature	Ergonomic design, QWERTY keyboard on reverse side
Compatible Models	Samsung SMT-C5400, SMT-G7400, SMT-G7401 Horizon HD TV Mediabox

7. WARRANTY INFORMATION

This product comes with a 90-day warranty from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

8. SUPPORT

If you encounter any issues not resolved by the troubleshooting steps, or if you have questions regarding the compatibility or functionality of this remote control, please contact the seller or manufacturer through the platform where the purchase was made. Provide your order details and a clear description of the issue for prompt assistance.