

## IR Replacement Remote Control

# Generic IR Replacement Remote Control User Manual

For Touyinger Q9, T9W, T9; Blitzwolf BW-VP3; AUN ET40; WZATCO E9; SALANGE P40 Projectors

## INTRODUCTION

---

This manual provides essential information for the proper use and maintenance of your Generic Infrared (IR) Replacement Remote Control. This remote is designed to be compatible with specific projector models, including Touyinger Q9, T9W, T9; Blitzwolf BW-VP3; AUN ET40; WZATCO E9; and SALANGE P40. Please review this document carefully to ensure correct operation and to verify compatibility with your device.

**Important Note:** This product is a replacement remote control. It does not include batteries or a detailed instruction booklet in its packaging. Functionality may vary slightly compared to the original remote control for your specific projector model.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



*Image: Back view of the remote control with the battery compartment visible. The compartment is located at the bottom rear of the remote, designed to house two AAA batteries.*

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

## 2. Compatibility Verification

Before attempting to use the remote, confirm that your projector model is listed as compatible. This remote is specifically designed for:

- Touyinger Q9, T9W, T9
- Blitzwolf BW-VP3
- AUN ET40
- WZATCO E9
- SALANGE P40

If your projector model is not listed, the remote may not function correctly or at all.

## OPERATING INSTRUCTIONS

---

To operate your projector using this remote control, ensure there is a clear line of sight between the remote's IR emitter and the projector's IR receiver. Point the remote directly at the projector.



Image: Front view of the remote control, displaying its various buttons. Key buttons include Power, Menu, Navigation (Up, Down, Left, Right, OK), Volume, Home, and Mouse mode.

## Button Functions Overview

Button Icon/Label	Function
<b>Power</b>	Turns the projector On or Off.
☰ (Menu/Settings)	Accesses the projector's main menu or settings.
↶ (Return/Back)	Goes back to the previous screen or menu.
▲ ▼ ◀ ▶ (Navigation Arrows)	Navigates through menus and options.
<b>OK</b>	Confirms a selection or enters a menu item.
<b>Volume +/-</b>	Adjusts the audio volume (if supported by the projector).
🏠 (Home)	Returns to the main home screen or interface of the projector.
(Mouse Mode)	Activates or deactivates mouse pointer functionality (if supported by the projector).
(Source/Input)	Selects the input source (e.g., HDMI, USB, AV).

Note: Specific button functionality may vary depending on your projector's operating system and features.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and projector. Remote not compatible.	Check battery orientation and replace with fresh AAA batteries. Ensure clear line of sight to the projector's IR receiver. Verify your projector model is listed as compatible.
Limited functionality	This is a replacement remote. Projector model does not support certain functions.	Understand that replacement remotes may not offer all features of an original remote. Refer to your projector's original manual for full functionality details.
Buttons are sticky or unresponsive	Dirt or debris under buttons.	Clean the remote control surface with a soft, dry cloth. Avoid pressing buttons excessively hard.

## SPECIFICATIONS

- **Product Type:** IR Replacement Remote Control
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatible Devices:** Projectors (Touyinger Q9, T9W, T9; Blitzwolf BW-VP3; AUN ET40; WZATCO E9; SALANGE P40)
- **Manufacturer:** SZHKHXD
- **First Available Date:** August 14, 2023

## WARRANTY AND SUPPORT

Specific warranty information for this Generic IR Replacement Remote Control is not provided in the product details. For any warranty claims, technical support, or inquiries regarding product functionality, please contact the seller directly through your purchase platform.

Always refer to the original user manual of your projector for detailed information on its features and troubleshooting specific to the projector itself.