

[manuals.plus](#) /

› [FORALL](#) /

› [FORALL U35 Hybrid Active Noise Cancelling Headphones User Manual](#)

FORALL U35

FORALL U35 Hybrid Active Noise Cancelling Headphones User Manual

Model: U35

INTRODUCTION

Thank you for choosing the FORALL U35 Hybrid Active Noise Cancelling Headphones. This manual provides essential information for setting up, operating, and maintaining your headphones to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Image: The FORALL U35 headphones, showcasing their sleek black design.



Image: User wearing FORALL U35 headphones in a commuting environment.

PACKAGE CONTENTS

Ensure all items are present in the package:

- FORALL U35 Hybrid Active Noise Cancelling Headphones
- USB-C Charging Cable
- 3.5mm Audio Cable
- User Manual (this document)

FORALL

Model: U35
WIRELESS ANC HEADPHONES



SPECIFICATION

Play Time(ANC)

Up to 45 Hours

Play Time(ANC OFF)

60Hours

Operation Range

10m

Rapid Charge Time

1-2Hours

Battery Capacity

3.7V 800mAh

Speaker Size

Φ40mm

Charging Port

Type-C

Wireless Solution

V5.2

Image: The product packaging box, detailing specifications and contents.

PRODUCT OVERVIEW

Familiarize yourself with the headphone's components and controls.



Image: Detailed diagram of headphone controls and interfaces.

Controls and Ports:

- **Power On/Off Switch:** Located on the right earcup, used to power the headphones on or off.
- **Volume + / - Buttons:** Adjust audio volume. Also used for track navigation (long press).
- **ANC Switch:** Activates or deactivates Active Noise Cancellation.
- **EQ Switch:** Cycles through the three available Equalizer modes.
- **LED Indicator Light:** Displays power, charging, and connection status.
- **USB-C Charge Interface:** For charging the headphones.
- **AUX Interface (3.5mm Jack):** For wired audio connection.
- **Internal/External Microphones:** Used for noise cancellation and voice calls.

Hybrid Active Noise Cancellation



Image: Illustration of the internal and external microphones for Hybrid Active Noise Cancellation.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. Connect the provided USB-C charging cable to the headphone's USB-C port and the other end to a USB power source (e.g., computer, wall adapter). The LED indicator will show charging status and turn off or change color when fully charged.

- **Charging Time:** Approximately 1-2 hours for a full charge.
- **Battery Life:** Up to 60 hours with ANC off, up to 45 hours with ANC on.

Powerful Battery Life

45^H

Play Time ANC On

60^H

Play Time ANC Off



Image: Visual representation of the headphone's extended battery life.

2. Bluetooth Pairing

1. **Power On:** Slide the Power On/Off Switch to the "ON" position. The LED indicator will flash, indicating pairing mode.
2. **Activate Bluetooth:** On your device (smartphone, tablet, laptop), enable Bluetooth.
3. **Select Device:** In your device's Bluetooth settings, search for "U35" and select it to connect.
4. **Confirmation:** The LED indicator on the headphones will stop flashing and remain solid, and you may hear an audio prompt confirming successful connection.

The headphones will automatically attempt to reconnect to the last paired device when powered on.

3. Wired Connection (AUX Mode)

To use the headphones with a wired connection, plug one end of the 3.5mm audio cable into the AUX interface on the headphones and the other end into your audio source's 3.5mm jack. Bluetooth functionality will be disabled when the audio cable is connected.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Slide the Power On/Off Switch to "ON".
- **Power Off:** Slide the Power On/Off Switch to "OFF".

Active Noise Cancellation (ANC)

The FORALL U35 features Hybrid Active Noise Cancellation, reducing low-frequency ambient sounds by up to 90%.

- **Activate ANC:** Slide the ANC Switch to the "ON" position.
- **Deactivate ANC:** Slide the ANC Switch to the "OFF" position.

ANC can be used independently, even when the headphones are not connected via Bluetooth or are powered off (in wired mode).

EQ Modes

Cycle through three distinct Equalizer modes to optimize your audio experience.

- **Change EQ Mode:** Press the EQ Switch to cycle between modes (e.g., Bass Boost, Treble Boost, Balanced).

HI-RES AUDIO

Noise Cancelling Structure



Image: Illustration of the headphone's internal structure, emphasizing Hi-Res Audio components.

Volume Control and Track Navigation

- **Increase Volume:** Short press the "Volume +" button.
- **Decrease Volume:** Short press the "Volume -" button.
- **Next Track:** Long press the "Volume +" button.
- **Previous Track:** Long press the "Volume -" button.

Call Management

When connected to a smartphone via Bluetooth:

- **Answer/End Call:** Short press the Power On/Off button.
- **Reject Call:** Long press the Power On/Off button.

MAINTENANCE

Cleaning

- Wipe the headphones with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or spray cleaners.
- Avoid getting moisture into any openings.

Storage

- Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- When not in use for extended periods, charge the headphones periodically to maintain battery health.
- The headphones feature a foldable design for compact storage.



Image: Features highlighting the comfortable and portable design of the headphones.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair via Bluetooth.	Bluetooth not enabled on device; headphones not in pairing mode; too far from device.	Ensure Bluetooth is on and headphones are in pairing mode. Move closer to the device (within 10m). Try restarting both devices.
No sound or low volume.	Volume too low; incorrect audio source; wired cable connected.	Increase volume on headphones and device. Check audio source. Disconnect 3.5mm cable for Bluetooth audio.
ANC not working effectively.	ANC switch off; type of noise.	Ensure ANC switch is "ON". ANC is most effective for low-frequency, constant noises.
Sound distortion.	Bluetooth interference; volume too high.	Move away from sources of interference. Lower volume.

SPECIFICATIONS

Feature	Detail
Model	U35 (BN903A)
Noise Control	Hybrid Active Noise Cancellation
Connectivity Technology	Bluetooth 5.2, 3.5 mm Jack
Operation Range	Up to 10 meters (33 feet)
Battery Life (ANC On)	Up to 45 Hours
Battery Life (ANC Off)	Up to 60 Hours
Rapid Charge Time	1-2 Hours
Battery Capacity	3.7V 800mAh Lithium Ion
Charging Port	USB-C
Speaker Size	40mm
Impedance	32 Ohm
Ear Placement	Over Ear
Material	Plastic
Weight	0.51 Milligrams (Note: This value may be a typographical error in the source data.)
Special Features	Foldable Design, 3 EQ Modes

 
WARRANTY AND SUPPORT


FORALL products are designed and manufactured to the highest quality standards. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided with your purchase or visit the official FORALL website.

Please retain your proof of purchase for warranty claims.



Related Documents - U35

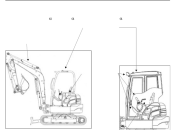
	Kubota Excavator Quick Feature Chart and Engine Specifications Detailed overview of Kubota KX91-3S, KX101-3α, U35S, U35-3S, U35-3α excavators, highlighting performance, safety, comfort, maintainability, maneuverability, and engine specifications for the KX161-3S.
	Zebra ET56 Android 10 Release Notes - Software Update 10-12-13.00-QG-U35-STD-HEL-04 Release notes for Zebra ET56 devices running Android 10, detailing software update 10-12-13.00-QG-U35-STD-HEL-04 (GMS). Includes new features, resolved issues, known issues, component versions, and security updates.
	Aukey PA-U35 3-Port USB AC Wall Charger User Manual User manual for the Aukey PA-U35 30W/6A 3-Port USB AC Wall Charger, detailing features, specifications, usage instructions, and warranty information.
	Xvive U35/U35D Microfoon Draadloos Systeem - Gebruikershandleiding Gedetailleerde gebruikershandleiding voor het Xvive U35 en U35D 5.8 GHz draadloze microfoonsysteem, met informatie over functies, installatie, specificaties en probleemoplossing.
	Xvive U35 5.8 GHz Wireless Microphone System User Manual Comprehensive user guide for the Xvive U35 5.8 GHz digital wireless microphone system, covering features, setup, operation, troubleshooting, and specifications for dynamic microphones and audio transmission.
	Datacolor Light Booth ES User Manual - Comprehensive Guide Detailed user manual for the Datacolor Light Booth ES, covering setup, operation, maintenance, and technical specifications for color quality management. Learn how to assemble, power on, operate, and maintain your Datacolor light booth.

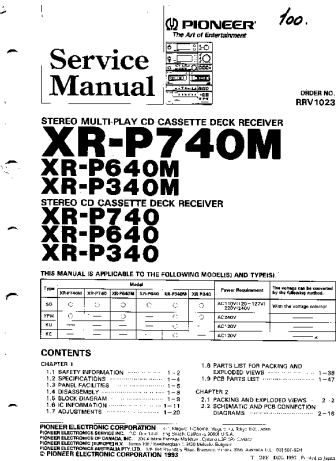 

[pdf] User Manual Guide


Pioneer Car Stereo System XR P340M User Guide ecb237f7 ed9c 446a ace0 257ea54a45ed archive org manualsonline id

 v proNeerl /oo. Tlp Art ot Entertainment Service 6 _EB q_f _l:io :tr lo6a- Manual o6tb .68 ... Do3cription D7s33,D7701 D77M,D7 07 D7710-D7713 D7507-D7510 CAPACITORS c7703 1/1611 c7523, C7524 **U35** c7509,C7510 471169 c7539,C7540 22 6 c7519 C7522,C7U5- C7552 c7325-C752a c7503,C7504 c7511, C... lang:en score:18 filesize: 2.69 M page_count: 63 document date: 2007-01-15

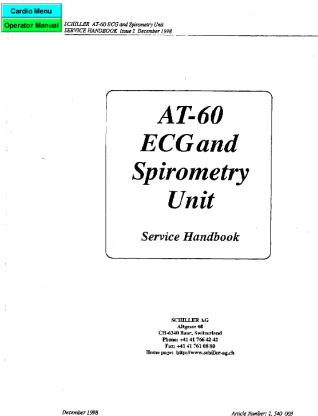


[pdf] User Manual Guide Declaration of Conformity

Schiller Cardiovit AT 60 Repair Help Learn How to Fix It YourselfSchiller Cardovit Service Manualdocuments cdn ifixit g2BgV2edhYnPZf3y thumbnailUrl guide images igi IMRgQqRMdRhV3VFD standard type title ||| Cardio Menu Operator Manual SCHILLER AT40 ECG and Spirameby Unit SERVICE W D B O O K issue 2 Decembe ... ntheaddatais cycled so that each pulse is repeated eight times. This is carried out by FIFO memory **U35**. TPD is the print head serial data signal, TPSO and TPSI are printer strobes, and TP clock is th... lang:en score:15 filesize: 18.6 M page_count: 221 document date: 2020-05-18

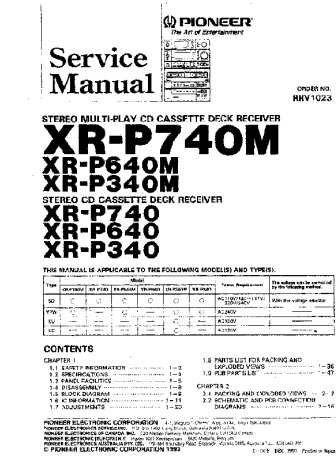 


[pdf] User Manual

Service Manual Pioneer XRP740 cs sm audiocircuit dk pioneer ||| v proNeerl /oo. Tlp Art ot Entertainment Service 6 _EB q_f _l:io :tr lo6a- Manual o6tb .68 ... Do3cription D7s33,D7701 D77M,D7 07 D7710-D7713 D7507-D7510 CAPACITORS c7703 1/1611 c7523, C7524 **U35** c7509,C7510 471169 c7539,C7540 22 6 c7519 C7522,C7U5- C7552 c7325-C752a c7503,C7504 c7511, C... lang:en score:15 filesize: 15.02 M page_count: 155 document date: 2024-09-30

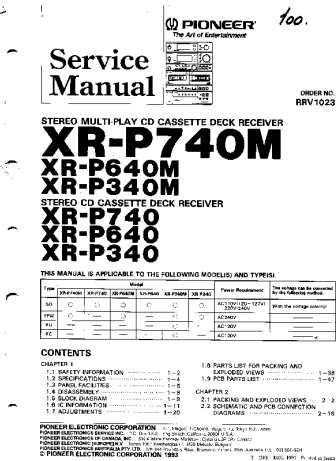 

[pdf] User Manual

Service Manual YoReparo If the idle current is below 3mA support a resistor 33kQ between emitter and Q7501 Lch Q7502 Rch bias tran sistor base confirm that the 3HxbN1IYE5UWXNmhyhZKH9OJLxz3ZDnIVQ87af73 assets yoreparo attachments ||| v proNeerl /oo. Tlp Art ot Entertainment Service 6 _EB q_f _l:io :tr lo6a- Manual o6tb .68 ... Do3cription D7s33,D7701 D77M,D7 07 D7710-D7713 D7507-D7510 CAPACITORS c7703 1/1611 c7523, C7524 **U35** c7509,C7510 471169 c7539,C7540 22 6 c7519 C7522,C7U5- C7552 c7325-C752a c7503,C7504 c7511, C... lang:en score:12 filesize: 2.71 M page_count: 63 document date: 2024-04-20

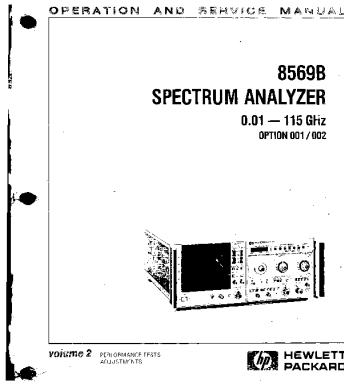 


[\[pdf\]](#) User Manual

HP8569B Operation and Service Manual qsl net n9zia test

OPERATION AND 8569B SPECTRUM ANALYZER 0.01 - 1156Hz OPTION 001 /002 . JI-- , volume 2 PERFORMANCE ... 0 A71121 A71J22 A71J23 A 71J24 A71.125 A 7U26 A71J27 A7U28 A7U29 A U30 A71131 A U32 A71.133 A7U34 A7**U35** A7U31 A7 J3 7 A7I138 A71139 A 71140 HP Part Number 0698-3154 0698-3154 0698-,3154 0757-0464 06...

 lang:en **score:11** filesize: 28.63 M page_count: 692 document date: 2012-12-02

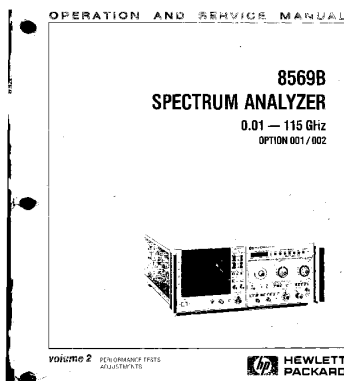

[\[pdf\]](#) User Manual

HP8569B 01 22 GHz Spectrum AnalyzerTracking Generator for a HP8569 AnalyzerHP8569B Operation and Service Manualgbppr net test Manual |||

OPERATION AND 8569B SPECTRUM ANALYZER 0.01 - 1156Hz OPTION 001 /002 . JI-- , volume 2 PERFORMANCE ... 0 A71121 A71J22 A71J23 A 71J24 A71.125 A 7U26 A71J27 A7U28 A7U29 A U30 A71131 A U32 A71.133 A7U34 A7**U35** A7U31 A7 J3 7 A7I138 A71139 A 71140 HP Part Number 0698-3154 0698-3154 0698-,3154 0757-0464 06...

lang:en **score:10** filesize: 28.63 M page_count: 692 document date: 2012-12-02